

User Manual

Industrial ETHERNET Firewall EAGLE mGuard

The naming of copyrighted trademarks in this manual, even when not specially indicated, should not be taken to mean that these names may be considered as free in the sense of the trademark and tradename protection law and hence that they may be freely used by anyone.

© 2006 Hirschmann Automation and Control GmbH

Manuals and software are protected by copyright. All rights reserved. The copying, reproduction, translation, conversion into any electronic medium or machine scannable form is not permitted, either in whole or in part. An exception is the preparation of a backup copy of the software for your own use.

The performance features described here are binding only if they have been expressly guaranteed in the contract. This publication has been created by Hirschmann Automation and Control GmbH according to the best of our knowledge. Hirschmann reserves the right to change the contents of this manual without prior notice. Hirschmann can give no guarantee in respect of the correctness or accuracy of the details in this publication.

Hirschmann can accept no responsibility for damages, resulting from the use of the network components or the associated operating software. In addition, we refer to the conditions of use specified in the license contract.

Printed in Germany (21.9.06)

Hirschmann Automation and Control GmbH
Stuttgarter Straße 45-51
72654 Neckartenzlingen
Tel. +49 1805 141538 -01-0806

Table of Contents

1	Introduction.....	6
	Network features	6
	Firewall features	6
	Anti-Virus features	6
	VPN features	6
	Additional features	7
	Support	7
1.1	Device versions	7
	mGuard smart	7
	mGuard PCI	7
	mGuard blade	7
	EAGLE mGuard	8
	mGuard delta	8
2	Typical application scenarios.....	9
	Transparent Mode	9
	Network Router	9
	DMZ	9
	VPN Gateway	10
	WLAN over VPN	10
	Solving Network Conflicts	11
3	Control and LEDs	12
3.1	mGuard blade	12
3.2	mGuard delta	13
3.3	EAGLE mGuard	14
3.4	mGuard smart	15
3.5	mGuard PCI	16
4	Startup	17
4.1	Package contents	18
	Included in the package	18
4.2	Connect the mGuard blade	19
	Installing mGuard bladeBase	19
	Installing mGuard blade	19
	Control Unit (CTRL Slot)	19
	Connecting mGuard blade	20
4.3	Connect the mGuard delta	21
4.4	Connect the EAGLE mGuard	22
	Terminal block	22
	Assembly	22
	Startup procedure	23
	Network connection	23
	Dismantling	23
4.5	Connect the mGuard smart	24
4.6	Connect the mGuard PCI	25
4.6.1	Choice between Driver mode or Power-over-PCI mode	25
	Driver Mode	25
	Power-over-PCI Mode	26
4.6.2	Hardware installation	28
4.6.3	Driver installation	29
	Windows XP	29
	Windows 2000	30
	Linux	33
5	Configuration preparation	34

5.1	Connecting the mGuard	34
	mGuard blade	34
	mGuard delta	34
	EAGLE mGuard	34
	mGuard smart	34
	mGuard PCI	34
5.2	Local Configuration: At startup	34
5.2.1	EAGLE mGuard	35
	With a configured network interface	35
	Without a configured network interface	35
	Entering the IP parameter via HiDiscovery	36
5.2.2	mGuard blade and mGuard smart	37
	With a configured network interface	37
	Without a configured network interface	37
5.2.3	mGuard delta	38
5.2.4	mGuard PCI	39
	Install the mGuard PCI Card	39
	Install the mGuard PCI Driver	39
	Configure the Network Interface	39
	The Default Gateway	40
5.3	Setting Up a Local Configuration Connection	41
	Web-based Administrator interface	41
	After a connection has been successfully setup	42
	Configuring the device	43
5.4	Remote Configuration	43
	Prerequisite	43
	Remote configuration	43
6	Configuration	44
6.1	Operation	44
6.2	Menu Basic Settings	46
6.2.1	Basic Settings → System	46
	Host	46
	Signal contact (only EAGLE mGuard)	48
	Time and Date	49
	Shell Access	50
6.2.2	Basic Settings → Network Interfaces	52
	General	52
	Network Mode → Transparent (factory setting except mGuard delta)	55
	Network Mode → Router (factory setting mGuard delta)	56
	Network Mode → PPPoE	59
	Network Mode → PPTP	59
	Network Mode → Router, PPPoE or PPTP	60
	Ethernet	61
	Serial Port (only mGuard blade, delta and EAGLE mGuard)	62
	Hardware	64
6.2.3	Basic Settings → Load/Save	65
	Load/Save	65
	Profiles on the ACA (EAGLE mGuard only)	66
6.2.4	Basic Settings → Central Management	68
	Configuration Pull	68
6.2.5	Basic Settings → Licensing	69
	Overview	69
	Install	70

Table of Contents

6.2.6	Basic Settings → Update	71
	Overview	71
	Update	72
	AntiVirus Pattern.....	73
6.2.7	Basic Settings → Restart	74
6.3	Menu Security	75
6.3.1	Security → SNMP	75
	Query	75
	Trap	77
	LLDP	78
6.3.2	Security → Web Access	79
	General	79
	Access.....	79
6.3.3	Security → Local Authentication	81
	Passwords	81
6.3.4	Security → External Authentication	83
	Remote Users	83
	Radius Server	84
	Status	84
6.4	Menu Network Security (not blade controller)	85
6.4.1	Network Security → Packet Filter	85
	Untrusted Port	85
	Trusted Port.....	86
	MAC Filter	88
	Advanced.....	89
6.4.2	Network Security → NAT	90
	Masquerading.....	90
	Port Forwarding.....	91
	Connection Tracking.....	93
6.4.3	Network Security → DoS	94
	Flood Protection	94
6.4.4	Network Security → User Firewall	95
	User Firewall Templates	95
	User Firewall → Define Template	96
	General:	96
	Template User	96
	Firewall Rules	97
6.5	Menu IPsec VPN (not blade controller)	98
6.5.1	IPsec VPN → Global	98
	Machine Certificate	98
	DynDNS Monitoring.....	99
6.5.2	IPsec VPN → Connections	99
	Connections.....	99
6.5.3	Define a VPN connection	100
	General	100
	Authentication	103
	Firewall.....	105
	IKE Options.....	106
6.5.4	IPsec VPN → L2TP over IPsec	108
	L2TP Server	108
6.5.5	IPsec VPN → IPsec Status	109
6.6	Menu AntiVirus (not on control unit)	111

6.6.1	AntiVirus → HTTP	111
	Virus Protection.....	111
6.6.2	Web Security → FTP	113
	Virus Protection.....	113
6.6.3	AntiVirus → POP3	116
	Virus Protection.....	116
6.6.4	AntiVirus → SMTP	119
	Virus Protection.....	119
6.7	Menu redundancy	122
6.7.1	Firewall Redundancy	122
	Redundancy.....	123
	ICMP Checks	124
6.7.2	Layer 2 Redundancy	125
	Ring / Network Coupling.....	125
6.8	Menu Diagnosis	126
6.8.1	Log → Settings	126
	Remote Logging.....	126
6.8.2	Diagnosis → Event logs	127
	AntiVirus.....	128
6.8.3	Diagnosis → Support Info	130
	Hardware	130
	Snapshot	130
6.9	Extended	131
6.9.1	Extended → DNS	131
	DNS Server	131
	DynDNS.....	132
6.9.2	Extended → DHCP	133
	Trusted/Untrusted DHCP	133
6.10	Menu Entry Blade Control (control unit only)	137
6.10.1	Blade control → Overview	137
6.10.2	Blade control → Blade 01 to 12	138
	Blade in slot #__.....	138
	Configuration	138
6.11	CIDR (Classless InterDomain Routing)	140
6.12	Network Sketch	141
7	The Rescue Button – restart, recovery procedure and to flash the firmware.....	142
7.1	Performing a Restart	142
7.2	Performing a Recovery	142
7.3	Flashing the firmware	143
	Required before the firmware can be flashed: DHCP and TFTP servers	145
7.3.1	Installing DHCP and TFTP servers under Windows or Linux	146
	Under Windows:	146
	Under Linux	147
8	Glossary	148
	Asymmetrical encryption	148
	DES / 3DES.....	148
	AES	148
	Client / Server.....	148
	Datagram	148
	Default route.....	149
	DynDNS provider	149
	IP address	150
	IPsec	151
	NAT (Network Address Translation).....	151

Table of Contents

Port Number	151
PPPoE.....	152
PPTP.....	152
X.509 Certificate	152
Protocol, communication protocol	152
Proxy	152
Service Provider	153
Spoofing, Antispoofing	153
Symmetrical encryption	153
TCP/IP (Transmission Control Protocol/Internet Protocol).....	153
Trap	153
VLAN.....	153
VPN (Virtual Private Network).....	154

1 Introduction

The mGuard protects IP data connections. The device supports the following functions:

- Network Card (mGuard PCI), Switch (mGuard delta)
- VPN router (VPN - Virtual Private Network) for the secure transfer of data via public networks (hardware-based DES, 3DES and AES encryption, IPsec protocol)
- Configurable firewall to provide protection against unauthorized access. The dynamic packet filter inspects the source and destination addresses of data packets and blocks undesired traffic.
- Virus protection with support for the protocols HTTP, FTP, SMTP and POP3.

The device can be conveniently configured using a Web browser.

Network features

- Transparent (Auto, Static, Multi), Router (Static, DHCP Client), PPPoE (for DSL) and PPTP (for DSL) connectivity
- VLAN
- DHCP server/relay on the external and internal network interfaces
- DNS cache on the internal network interface
- Administration using HTTPS and SSH

Firewall features

- Stateful packet inspection
- Anti-spoofing
- IP Filtering
- L2 Filtering (only Transparent mode)
- NAT with FTP, IRC and PPTP pass through (only router modes)
- 1:1 NAT (only router modes)
- Port forwarding (only router modes)
- Firewall throughput max. 99MBit/s
- Individual firewall rules for different users (user firewall)

Anti-Virus features

- ClamAV virus protection
- Supported protocols: HTTP, FTP, POP3 and SMTP (sending)
- The virus filter can decompress the following formats:
 - ZIP
 - RAR
 - GZIP
 - BZIP2
 - TAR
 - MS OLE2
 - MS Cabinet Dateien (CAB)
 - MS CHM (Komprimiertes HTML)
 - MS SZDD
 - UPX
 - FSG
 - Petite

VPN features

- Protocol: IPsec (Tunnel and Transport Mode)
- IPsec DES encryption - 56 Bit
- IPsec 3DES encryption - 168 Bit
- IPsec AES encryption - 128, 192 and 256 Bit
- Packet authentication: MD5, SHA-1
- Internet Key Exchange (IKE) with Main and Quick Mode
- Authentication: Pre-Shared Key (PSK), X.509v3 certificate
- DynDNS

- NAT-T
- Dead Peer Detection (DPD)
- Hardware encryption
- up to 250 VPN tunnels (please refer to the feature table)
- VPN throughput max. 35MBits/s on 266MHz or 70MBit/s on 533MHz models.
- IPsec firewall and 1:1 NAT
- Default route over VPN

Additional features

- MAU management
- Remote logging
- Router/Firewall Redundancy
- IPsec/L2TP Server
- LLDP
- Administration by SNMP v1-v3 (please refer to the feature table) and Innominat e Device Manager (IDM)

Support

In case of problems with the mGuard please contact your local dealer. Additional information about the device and relevant changes as well as release notes and software updates can be found on the web site:
 - for the EAGLE mGuard under www.hirschmann-ac.com,
 - for all other mGuards under <http://www.innominat e.com/>

1.1 Device versions

mGuard is available in the following device versions, which have largely identical functions. All devices can be utilised regardless of the processor technology and operating system the connected computers use.


mGuard smart

Smallest device model. Can, for example, simply be plugged between the computer or local network (on mGuard's LAN port) and an available router (on mGuard's WAN port), without having to change existing system configurations or driver installations. Designed for instant use in the office or when on the go.



mGuard PCI

This card, which can be plugged into a PCI slot, provides the computer it is installed in with all mGuard functions in driver mode and can additionally be utilised as a normal network card. A network card already on hand in the computer or another local computer / local network can be connected in the power-over-PCI mode.

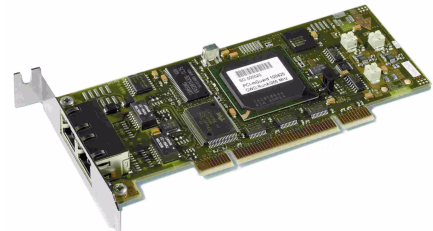


mGuard blade

The mGuard blade Pack includes the mGuard bladeBase, which can be easily installed into standard 3 U racks (19 inches) and accommodate up to 12 mGuard blades. Thus this version is ideally suited for use in an industrial environment where it can protect several server systems individually and independently of one another. An additional serial interface enables remote configuration using a telephone dial-up connection or a terminal.

EAGLE mGuard

EAGLE mGuard was developed in cooperation with the Industrial Security Alliance partner Hirschmann Automation and Control GmbH. The device is designed for top hat rail mounting (according to DIN EN 50 022) and is therefore especially suited for use in industrial environments. The optional configuration connection and the option to establish a telephone dial-up connection via the V.24 interface provide for additional applications options.

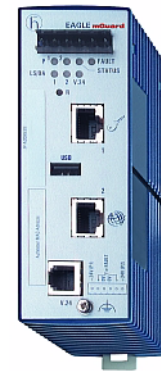

mGuard delta


This device model is a compact LAN switch (Ethernet / Fast Ethernet) designed for connecting up to 4 LAN segments. Thus the device is especially suited for logically segmented network environments where the locally connected computers / networks share the mGuard functions. An additional serial interface enables configuration using a telephone dial-up connection or a terminal. With its robust metal housing, mGuard delta is not only suitable as a desktop device but also for placement in wiring closets.



2 Typical application scenarios

Some of the more common application scenarios may be found below.

Transparent Mode

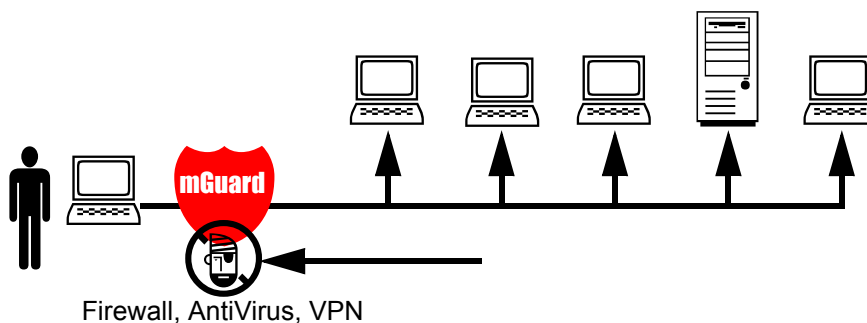


In *Transparent* Mode (factory default) the mGuard can be installed between an individual computer and the rest of the network.

The settings for Firewall, AntiVirus and VPN can be made with a webbrowser at the URL <https://1.1.1.1/>.

On the computer itself no configuration changes are required.

Network Router

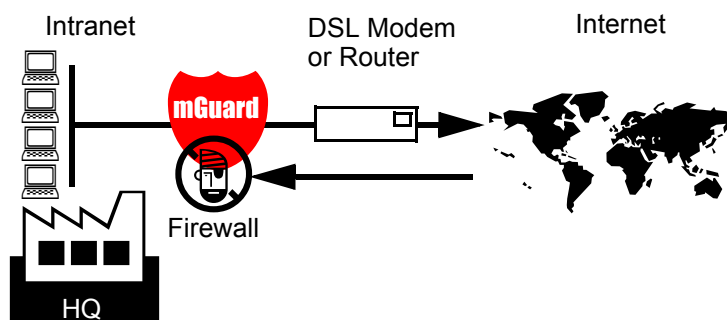


The mGuard is able to provide internet connectivity to a group of computers while protecting the company network with its firewall.

For this purpose one of the following network modes may be used:

- *Router*, if the Internet access is established via a DSL router or dedicated line.
- *PPPoE*, if for example the Internet access is established via a DSL modem using the PPPoE protocol (e.g. in Germany).
- *PPTP*, if for example the Internet access is established via a DSL modem using the PPTP protocol (e.g. in Austria).

The mGuard must be set as the default gateway on the locally connected client system(s).

DMZ

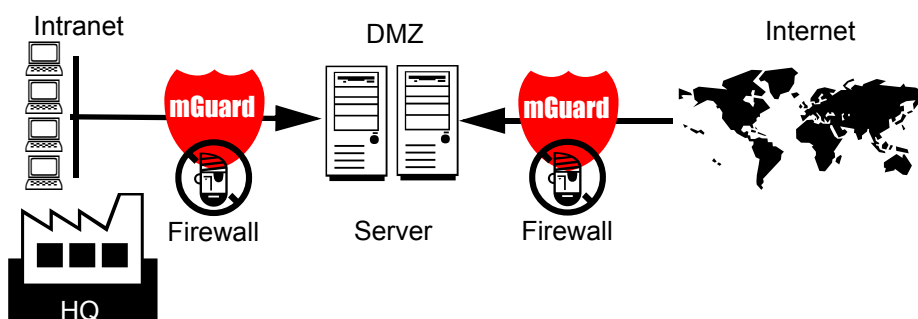


A DMZ (Demilitarized Zone) is a protected network, which sits between an trusted network and untrusted networks. For example a company's website may be inside a DMZ, granting FTP write access to computers in the intranet and HTTP read-only access to both networks.

The IP addresses within the DMZ can be public or private. In the latter case, pub-

lic IPs would be mapped by means of portforwarding to the private addresses within the DMZ.


VPN Gateway

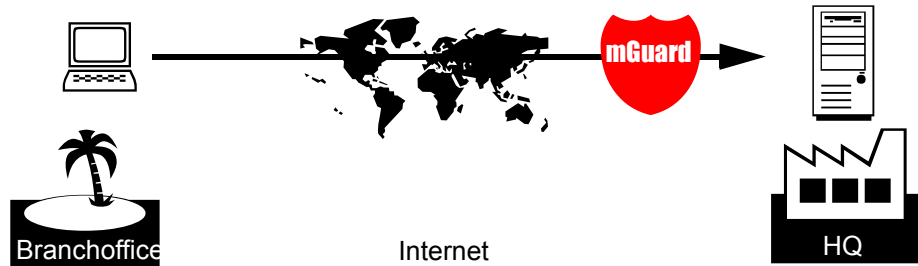

An encrypted access to the company's network is to be provided to employees at home or in the field. The mGuard thereby provides the services of a VPN gateway.

On the untrusted computers an IPsec capable VPN client must be installed in case the computers operating system does not provide such a service, like Windows 2000 or XP do.

WLAN over VPN

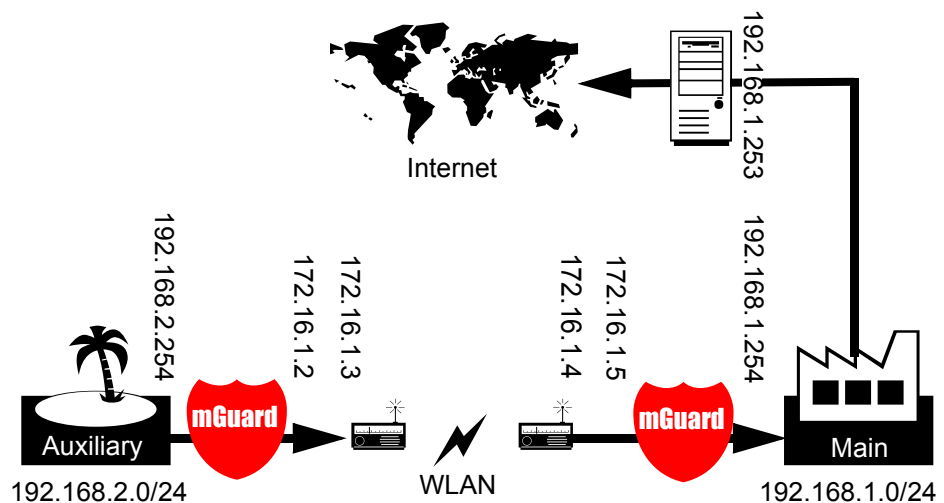

Two buildings of a company are to be connected with an IPsec protected WLAN connection. From the auxiliary building it shall also be possible to use the main building's internet connection.

In this example the mGuards were switched into router mode and a separate network with addresses of 172.16.1.x was created for the WLAN. Since the internet should be also available via the VPN from the auxiliary building, a "Default route over VPN" must be configured.

Auxiliary building tunnel configuration

Connection type	Tunnel (Net <-> Net)
Local network address	192.168.2.0/24
Remote network address	0.0.0.0/0

In main building the appropriate counterpart to the connection is to be configured:

Main building tunnel configuration


Connection type	Tunnel (Net <-> Net)
Local network address	0.0.0.0/0
Remote network address	192.168.2.0/24

The default route of an mGuard is usually directed over its WAN port. But in this case the internet is reachable via the LAN port:

Main building default gateway

IP of the default gateway	192.168.1.253
---------------------------	---------------

Solving Network Conflicts

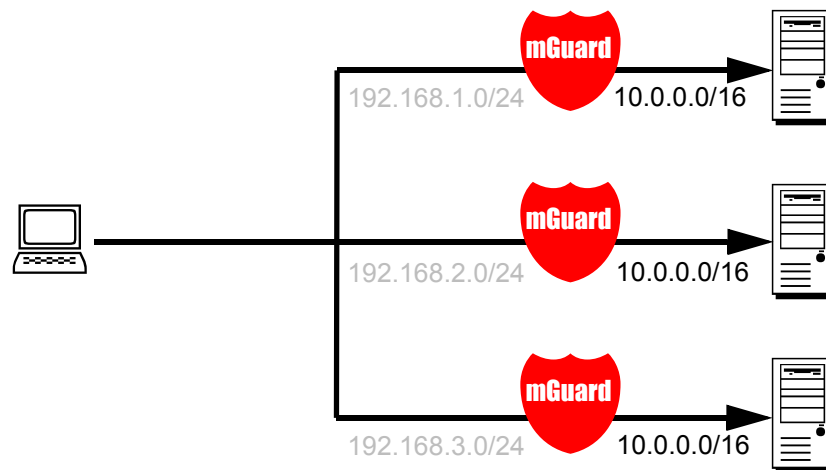


In the illustration above, it is desired that the networks on the right-hand side are accessible from the network or the computer on the left-hand side. For historical or technical reasons, however, the computer networks overlap on the right-hand side.

With the help of mGuards and their 1:1 NAT feature, these networks can be redefined so that the conflict is solved.

(1:1 NAT can be used in normal routing and in IPsec VPN tunnels.)


3 Control and LEDs

3.1 mGuard blade

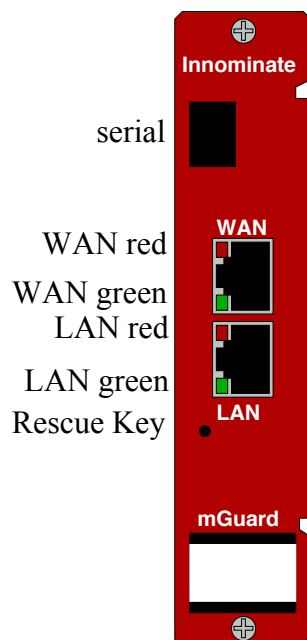


LEDs	State	Meaning
WAN Red, LAN Red	flashing	Booting up. After starting or restarting the computer.
WAN Red	flashing	System error. ☒ Perform a system restart. To accomplish this, briefly press the Rescue button (1.5 sec.) If the error occurs again, start the <i>Recovery procedure</i> (see “Performing a Recovery” on page 142) or contact Support.
WAN Green, LAN Green	on or flashing	Ethernet status. Shows the status of the LAN and WAN interface. As soon as the device is connected to the network, the LEDs will be on continuously to indicate that there is a connection. The LEDs will flash when data packets are transferred.
WAN Green, WAN Red, LAN Green	various LED codes	Recovery mode. After pressing the Rescue key See “The Rescue Button – restart, recovery procedure and to flash the firmware” on page 142.

3.2 mGuard delta

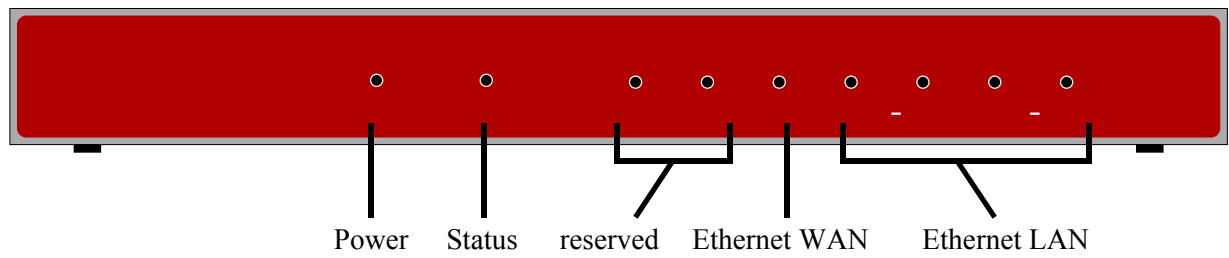


LEDs	State	Meaning
Power	on	The power supply is active.
Status	on	The mGuard is booting.
	heartbeat (flash, flash, pause, ...)	The mGuard is ready.
1,2	-	Reserved.
3 (WAN)	on	Link detected.
	flashing	Data transfer.
4-7 (LAN)	on	Link detected.
	flashing	Data transfer.

3.3 EAGLE mGuard

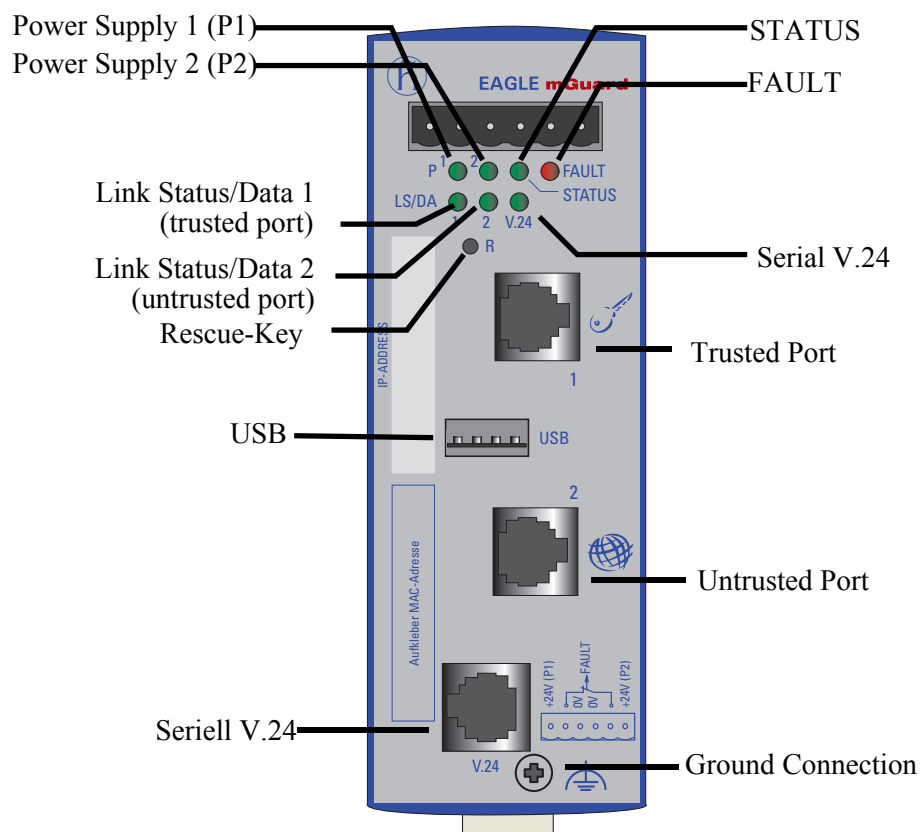

LEDs	State	Meaning
P1, P2	green	The power supply 1 or 2 is active.
STATUS	green blinking	The EAGLE mGuard is booting.
	green	The mGuard is ready.
	yellow blinking slowly	The mGuard is in Router Redundancy Backup mode.
FAULT	red	The signal contact is open in case of an error.
LS/DA 1/2 V.24	green	Link detected.
	green blinking (3 times per period)	The port is disabled.
	yellow flashing	Receiving data.
	running light	Initialization phase after a reset.
Display of ACA function STATUS and V.24	both LEDs blinking simultaneously (slow)	ACA writing process.
	both LEDs blinking simultaneously (slow)	ACA reading process.
	both LEDs blinking alternated (fast)	ACA error.

3.4 mGuard smart

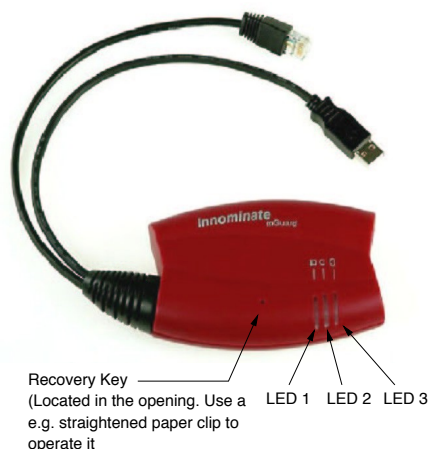

LEDs	Colour	State	Meaning
2	Red/Green	red/green flashing	Booting up. After connecting the device to the power supply. After a few seconds, the LED will switch to a heartbeat.
	Green	flashing	Heartbeat. The device is correctly connected and functioning.
	Red	flashing	System error. ☒ Perform a system restart. To accomplish this, briefly press the Rescue key (1.5 sec.) OR Disconnect the device from its power supply briefly and then reconnect it. If the error occurs again, start the <i>Recovery procedure</i> (see “Performing a Recovery” on page 142) or contact Support.
1 and 3	Green	on or flashing	Ethernet status. LED 1 shows the status of the internal interface, LED 3 the status of the external interface. As soon as the device is connected to the interface, the LEDs will be on continuously to indicate that there is a connection to the network. The LEDs will flash when data packets are transferred.
1, 2, 3	various LED codes		Recovery mode. After pressing the Rescue key See “The Rescue Button – restart, recovery procedure and to flash the firmware” on page 142.

3.5 mGuard PCI



LEDs	State	Meaning
WAN Red, LAN Red	flashing	Booting up. After starting or restarting the computer.
WAN Red	flashing	System error. ☒ Perform a system restart. To accomplish this, briefly press the Rescue key (1.5 sec.) OR Restart your computer. If the error occurs again, start the <i>Recovery procedure</i> (see “Performing a Recovery” on page 142) or contact Support.
WAN Green, LAN Green	on or flashing	Ethernet status. Shows the status of the LAN and WAN interface. As soon as the device is connected to the network, the LEDs will be on continuously to indicate that there is a connection. The LEDs will flash when data packets are transferred.
WAN Green, WAN Red, LAN Green	various LED codes	Recovery mode. After pressing the Rescue key See “The Rescue Button – restart, recovery procedure and to flash the firmware” on page 142.

4 Startup

Safety instructions The mGuard is intended for (protective) low voltage operation. Only connect the mGuard's network interfaces to LAN installations. Some telephone lines also use RJ45 jacks. The mGuard may not be operated on a telephone line.



Warning mGuard PCI! Before handling the mGuard PCI, touch the bare metal case of your PC to discharge static electricity from your body.



Warning! This is a Class A device. It may cause radio interference in a living area, in which case, the operator may be requested to take appropriate measures.

General notes regarding usage

- mGuard PCI: Your PC must provide a free PCI slot (3.3V or 5V).
- Use a soft cloth to clean the case of the device. Do not use any aggressive solvents!
- Environmental conditions:
0 to +40°C (blade, smart) 55°C (PCI) 60° (EAGLE)
max. 90% (EAGLE: 95%), non-condensing humidity
- To avoid overheating, do not leave it in direct sunlight or expose it to any other source of heat.
- Do not bend the cables sharply. Only use network cables to connect to a network.

Steps for starting up the device To startup the device, perform the following steps in the order listed:

Step	Objectives	Page
1	Check the package contents and read the Release Notes	"Package contents" on page 18
2	Connect the Device	<ul style="list-style-type: none">• "Connect the mGuard blade" on page 19• "Connect the mGuard delta" on page 21• "Connect the EAGLE mGuard" on page 22• "Connect the mGuard smart" on page 24• "Connect the mGuard PCI" on page 25
3	Configure the device to the extent necessary. To accomplish this, select from the various options offered in the mGuard's configuration menus. For more information regarding which options and settings are required (or desirable) for your operating environment, please read the relevant sections in this manual.	"Local Configuration: At startup" on page 34

4.1 Package contents

Included in the package

Before beginning to setup the device, check that the package is complete:

- a mGuard blade. delta, EAGLE, smart or PCI
- a manual in the Portable Document Format (PDF) on the CD-ROM
- a Quick Installation Guide / Discription and operating instruction


The mGuard bladePack also contains:

- the 19" mguardBlade base
- a mGuard blade as controller
- 2 power supplies
- 2 power cables
- 12 place holders
- 12 handle plates M1 to M12
- screws to install the bladeBase

The mGuard delta also contains:

- the 5V DC power supply
- two UTP ethernet cables
- a RS232 serial cable

4.2 Connect the mGuard blade

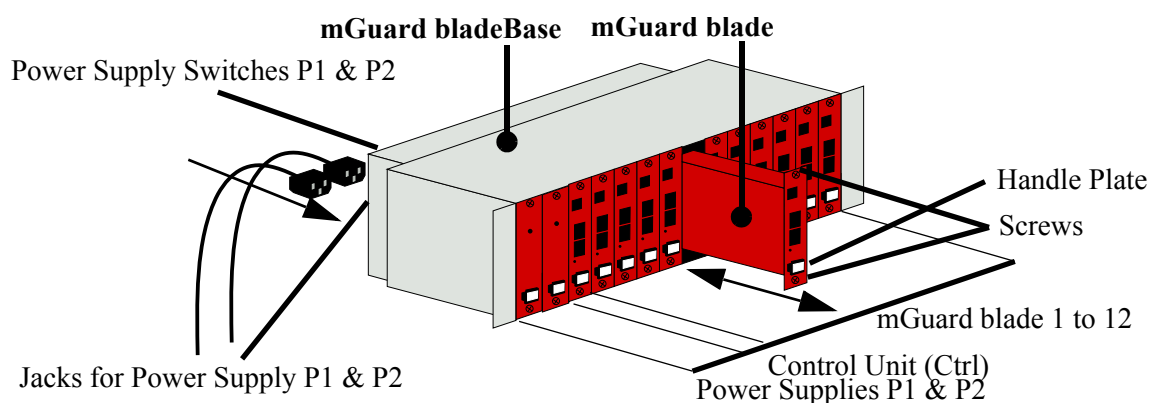

Installing mGuard bladeBase

- Install the mGuard bladeBase into the rack, e.g. close to the patch panel.
- Provide the two power supplies and the control unit at their front from the left to the right with the handle plates “P1”, “P2” and “Ctrl”.
- Connect both power supplies on the back of the mGuard bladeBase with 100V or 220/240V.
- Switch both power supplies on.
- The LEDs at the front of the power supplies flash now green.

☒ **It is necessary that a sufficient air circulation through the bladePack is guaranteed!**

☒ **When stacking several bladePacks, one or more 19" rack mount fan trays must be installed to exhaust the accumulated warm air!**

Installing mGuard blade

- Loosen the upper and lower screws of the place holder or mGuard blade you want to replace.
 - Remove the place holder or pull the old mGuard blade out of the bladeBase.
 - Insert the new mGuard blade with its circuit board into the bladeBase's plastic guidance and push until it is completely inside.
 - Secure the mGuard blade by light tightening of the upper and lower screws.
 - Replace the empty handle plate with the suitable number from the mGuard bladeBase accessories or the old mGuard blade, by shoving it in or out laterally.
- ☒ During installation or removal of an mGuard blade the bladeBase does not need to be switched of.


Control Unit (CTRL Slot)

Next to the two current supplies is the “CTRL” Slot. A mGuard blade operated therein works as a controller for all other mGuard blades.

During an mGuard blades first installation into the “CTRL” slot, the blade reconfigures itself into an control unit:

- The web interface is reconfigured to operate as a control unit.
- It switches itself into router mode with the local IP 192.168.1.1.
- The firewall, Anti-Virus and VPN services are reset and deactivated.


Connecting mGuard blade

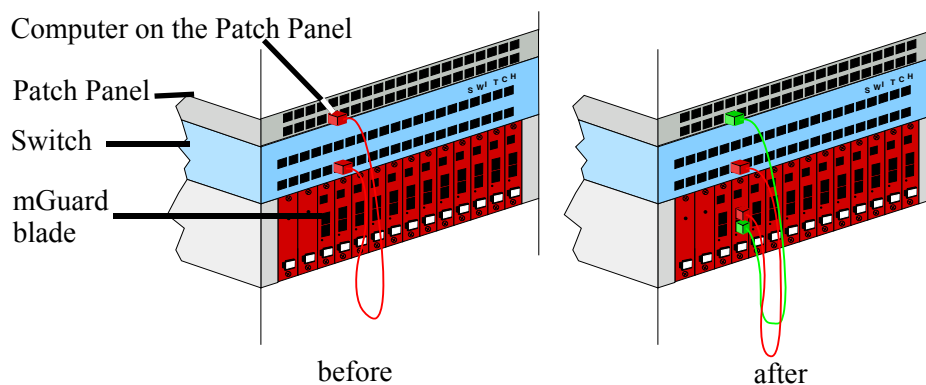

If your computer is already attached to a network, then you just need to patch the mGuard blade between the already existing network connection. Please note that the initial configuration can only be done using the LAN connector and that the firewall is rejecting all IP traffic from the WAN to the LAN interface.

- ☒ No additional driver needs to be installed.
- ☒ For reasons of security, we recommend that you change the default Root and Administrator passwords during the first configuration.

4.3 Connect the mGuard delta

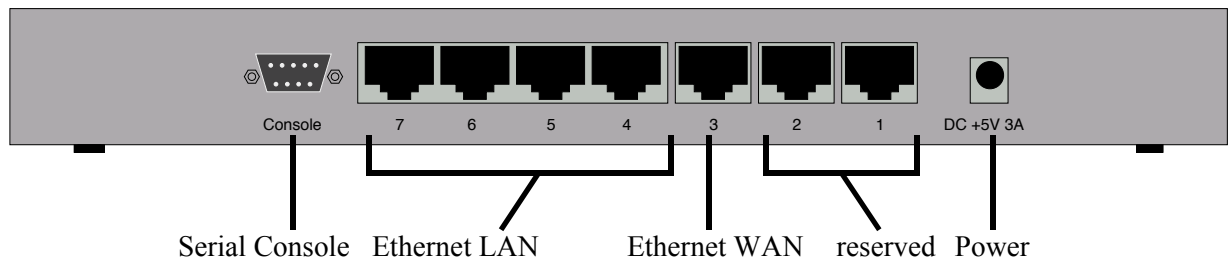


- Connect the power supply (5V DC, 3A) to the mGuard's power jack.
- Connect the local computer or network to one of the Ethernet LAN jacks (4 to 7) with an UTP (CAT5) ethernet cable.

4.4 Connect the EAGLE mGuard

Terminal block

The **supply voltage** and the **signal contact** are connected via a 6 pin terminal block with snap lock mechanism.

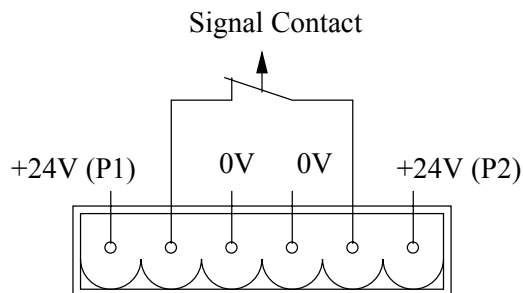

Warning!

The EAGLE mGuard is designed for operation with a safe extra-low voltage. Thus its power supply and signal contact connectors may only be connected with PELV circuits or, alternatively, SELV circuits with voltage restrictions in accordance with IEC/EN 60950.

Operating voltage

NEC Class 2 power source 12VDC or 24 VDC (-25% +33%) safe extra-low voltage (SELV/PELV, redundant inputs decoupled), 5 A maximum. Buffer time min. 10 ms at 24 VDC.

Redundant power supply

Redundant power supplies are supported. Both inputs are decoupled. There is no load distribution. With a redundant supply, only the power pack with the higher output voltage supplies the EAGLE mGuard. The supply voltage is electrically isolated from the housing.

Signal contact

The signal contact is used to supervise the functions of the EAGLE mGuard and thereby facilitates remote diagnosis. An interruption of the potential-free signal contact (relay contact, closed current circuit) indicates the following:

- The failure of at least one of the two supply voltages.
- A permanent fault on the EAGLE mGuard (internal 3.3 V DC voltage, supply voltage 1 or 2 < 9.6 V, ...).
- The faulty link status of at least one port.

The indication of the link state on the EAGLE mGuard can be masked on a port-by-port basis using the management software.

State of delivery: there is no link test.

- Self test error.

☒ In case of a non-redundant voltage supply, the EAGLE mGuard will indicate the failure of the supply voltage. You can correct this by connecting the supply voltage to both inputs.

Ground connection


The EAGLE mGuard is grounded with a separate screw connection.

Assembly

The equipment is delivered in a ready-to-operate condition. The following procedure is appropriate for assembly:

- Pull the terminal block off the EAGLE mGuard and wire up the supply voltage and signal contact lines.
- Fit the EAGLE mGuard on a 35 mm standard bar to DIN EN 50 022.

- Attach the upper snap-on slide bar of the EAGLE mGuard to the standard bar and press it down until it locks into position.
- Connect the device to the local network or the local PC which is to be protected (trusted port).
- Connect the socket for connection to the external network (untrusted port), e.g. the Internet. (Via this network the connections to the remote device or the remote network are realized.)

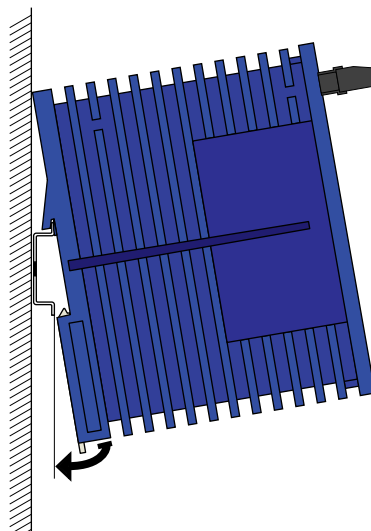

- ☒ The front panel of the EAGLE mGuard is grounded via a separate ground connection.
- ☒ Do not open the housing.
- ☒ The shielding ground of the twisted pair lines which can be connected is electrically connected to the front panel.

Startup procedure

You do start up the EAGLE mGuard by connecting the supply voltage via the 6-pin terminal block. Lock the terminal block with the snap lock mechanism.

Network connection


If your computer is already attached to a network, then you just need to patch the EAGLE mGuard between the already existing network connection. Please note that the initial configuration can only be done using the LAN connector and that the firewall is rejecting all IP traffic from the WAN to the LAN interface.

- ☒ No additional driver needs to be installed.
- ☒ For reasons of security, we recommend that you change the default Root and Administrator passwords during the first configuration.
- ☒ Both ports of the EAGLE mGuard are configured to be connected to a computer. If you connect the ports to a hub, please note that if *Autonegotiation* (See “MAU Configuration” on page 64.) is disabled, then the Auto-MDIX will also be deactivated, i.e. the port of the EAGLE mGuard has to be connected either to the uplink port of the hub or a cross-link cable has to be used.

Dismantling


To take the EAGLE mGuard off the ISO/DIN rail, insert a screwdriver horizontally under the housing into the locking slide, pull it (without tipping the screwdriver) downwards and lift the EAGLE mGuard upwards.

4.5 Connect the mGuard smart

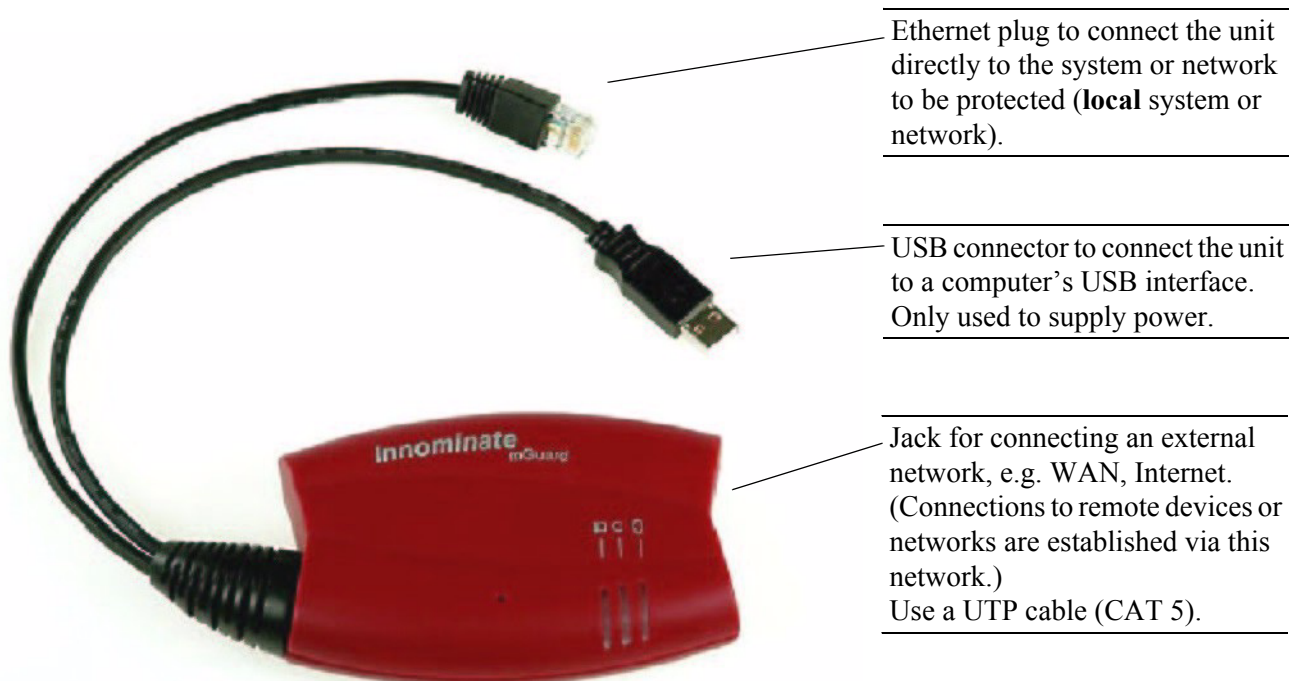


If your system is already connected to a network, simply insert the mGuard between the system's network interface and the network.

before:

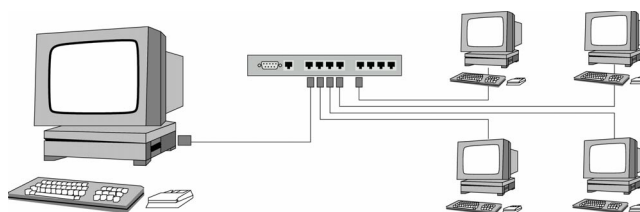

after:

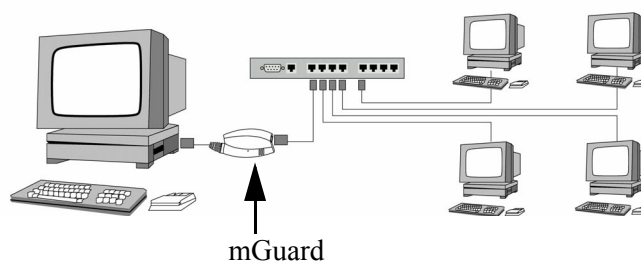

- ☒ No additional driver needs to be installed.
- ☒ For reasons of security, we recommend that you change the default Root and Administrator passwords during the first configuration.

4.6 Connect the mGuard PCI

4.6.1 Choice between Driver mode or Power-over-PCI mode

There are two operating modes: *Driver mode* or *Power-over-PCI mode*.
The mGuard is switched to operate in the desired mode via a jumper.

Driver mode:

The mGuard PCI can be used like a regular network card, enabling this network card to also provide the mGuard functions. In this case the included driver must be installed.

Power-over-PCI mode:


If the mGuard's network card functionality isn't needed or won't be used, then the mGuard PCI can be connected behind an existing network card (of the same computer or of another one), essentially acting as an mGuard standalone device. In this operating mode, in fact, the mGuard PCI is only plugged into the computer's PCI slot to be supplied with power and given a housing. This mGuard operating mode is called *Power-over-PCI mode*. No driver needs to be installed.

Decide in which mode you want the mGuard PCI to operate before installing it on your PC.

Driver Mode

In this mode a driver for the PCI interface of the mGuard PCI (available for Windows XP/2000 and Linux) needs to be installed later on the computer which will provide a “regular” network interface with additional security functions. In Driver Mode an additional network card isn't needed in the computer.

Transparent Mode with Driver Mode (Factory default)

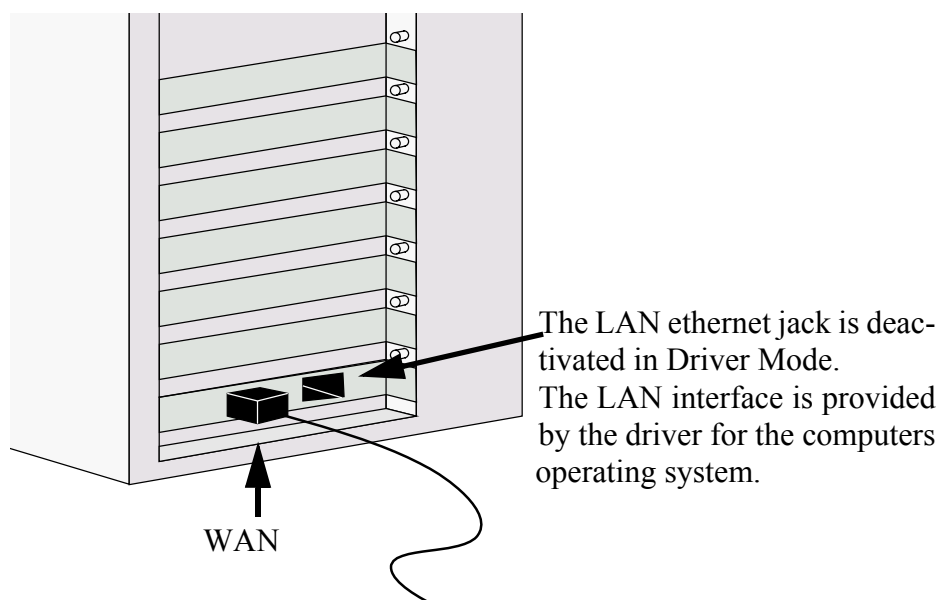


In this configuration the mGuard acts as normal network interface card (NIC) with additional security features and requires a driver for the host operating system. The IP address can be configured using the network utilities of the operating system.

As soon as an external router is available the mGuard can be configured using a webbrowser at the URL <https://1.1.1.1/>.

☒ In Transparent Mode it is not possible to use PPPoE or PPTP.

Router Mode with Driver Mode

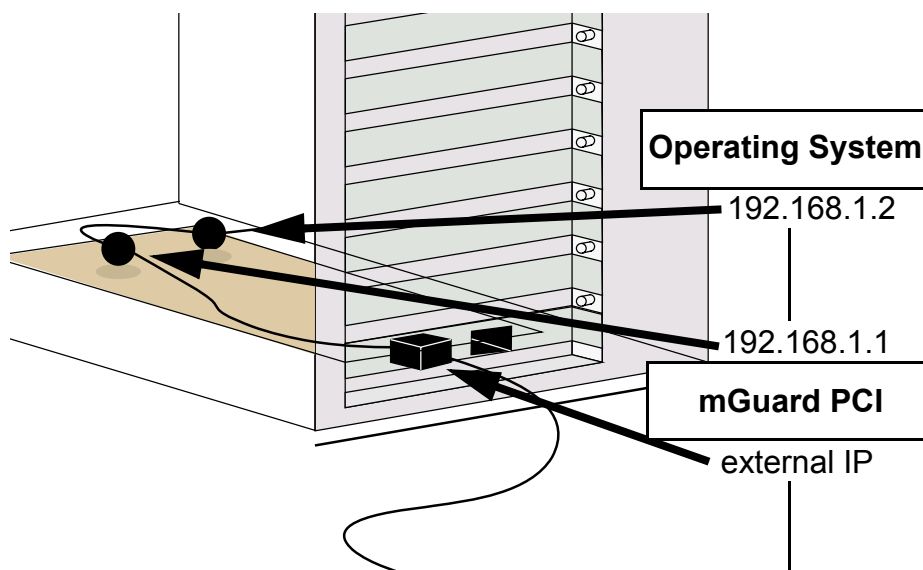


In router mode it is possible to use PPPoE and PPTP.
In this mode the mGuard and the network interface of the mGuard use a separate subnet. An example is shown in the illustration above: the mGuard's operating systems interface could use the IP 192.168.1.1 and the mGuard could use the IP 192.168.1.2. (Represented in the figure above by two black spheres.)
A third IP will be used on the WAN jack to communicate with a router or a PPPoE/PPTP capable DSL modem.

Power-over-PCI Mode

In this mode the software driver is not needed. The PCI interface is only used as a power supply and another network interface card, installed in the same or another computer, must be connected to the ethernet jack (3) instead.

Transparent Mode with Power-over-PCI Mode

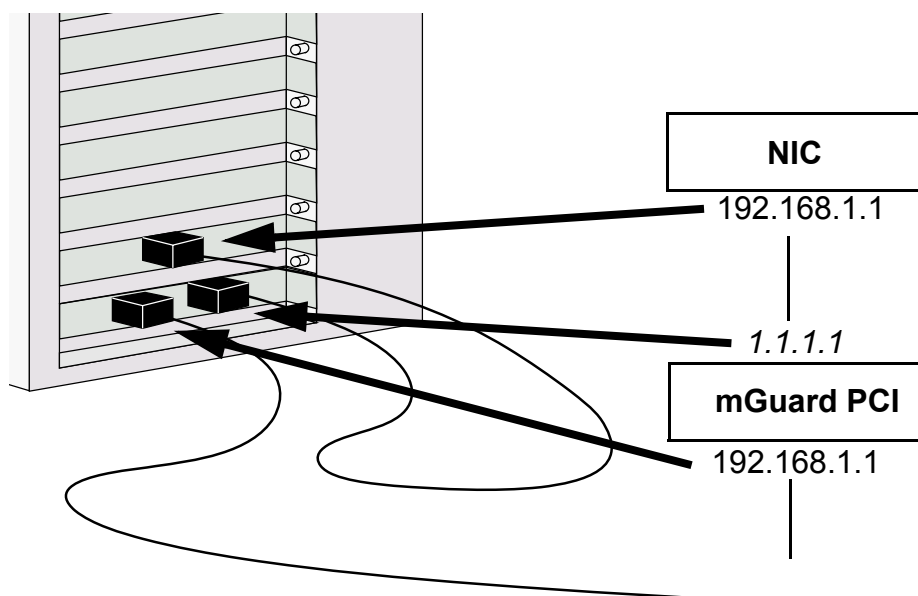


In Power-over-PCI Mode the mGuard does not require a driver for the host operating system. The PCI bus is only used as a power supply. The LAN jack of the mGuard must be connected to another NIC using an ethernet cable. At the WAN jack the mGuard automatically uses the IP address of the other network interface card.

As soon as an external router is available the mGuard can be configured with a

webbrowser at the URL <https://1.1.1.1/>.

☒ In Transparent Mode its not possible to use PPPoE or PPTP.

Router Mode with Power-over-PCI Mode

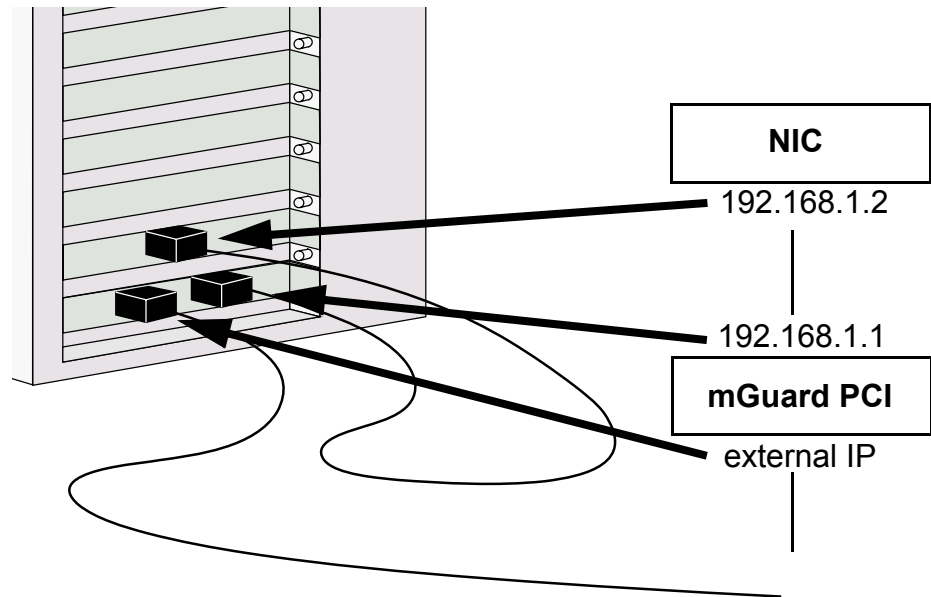


In router mode it is possible to use PPPoE and PPTP.


The mGuard and the network interface card (NIC) connected to the LAN jack use a separate subnet. E.g. the NIC could use the IP 192.168.1.1 and the mGuard's LAN jack could use the IP 192.168.1.2.

A third IP will be used on the WAN jack to communicate with a router or a PPPoE/PPTP capable DSL modem.


4.6.2 Hardware installation

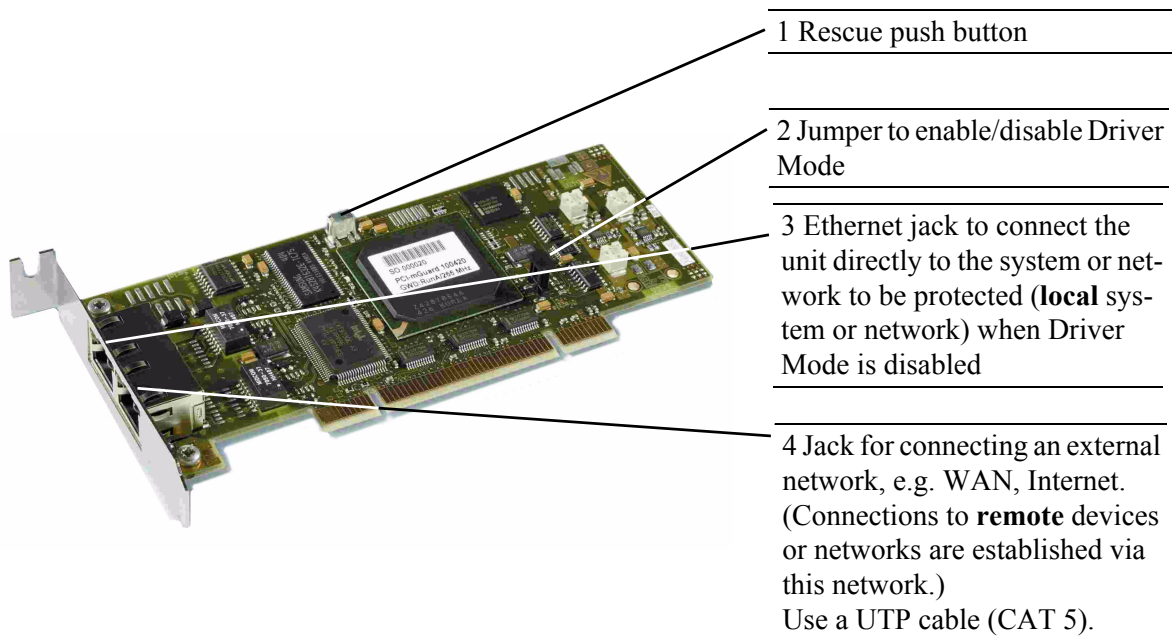

 1. Configure the mGuard for either Driver or Power-over-PCI mode. (See “Choice between Driver mode or Power-over-PCI mode” on page 25.)
To enable the **Driver Mode**, set the jumper (2) to the following position:



 To enable the **Power-over-PCI Mode**, set jumper (2) to the following position:



2. Turn off the power to your computer and any other connected peripheral devices. Follow the precautions for static electricity discharge.
3. Unplug the power cord from the back of the computer
4. Remove the computer's cover (please consult the manual of your computer).
5. Select a free PCI slot (3.3V or 5V) for the mGuard PCI.
6. Remove the selected slot bracket by unscrewing the holding screw and slide it out. Save this screw for securing the mGuard PCI card after it's installed.
7. To install the PCI card, carefully align the board's bus connector with the selected expansion slot on the motherboard. Push the board down firmly, but gently, until it is well seated.
8. Replace the slot bracket's holding screw to secure the board to the rear slot panel.
9. Put back the computer's cover.
10. Reconnect the power cord and turn on your computer.

4.6.3 Driver installation


Windows XP

☞ Please complete the steps described in section “Hardware installation” on page 28 first.


☒ The installation of the driver is only necessary (and will only work as described) in Driver Mode (see “Driver Mode” on page 25).

☒ The following screen shots show the german version of Windows XP.


To install the driver, switch your computer on, login with Administrator rights and wait for the following window to show up:

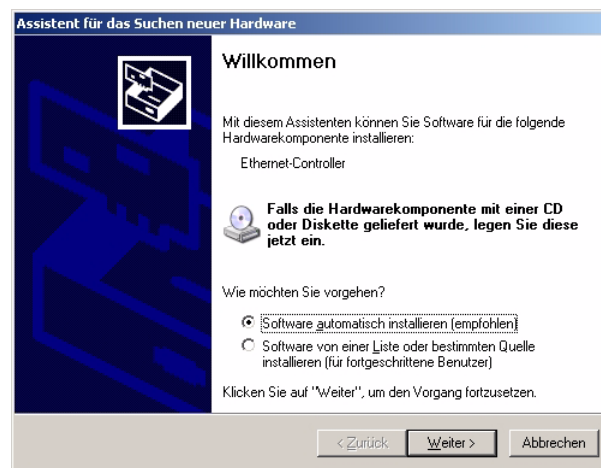


1. After inserting the mGuard-CD choose **From a list or specified location (Advanced)** and click on **Next**

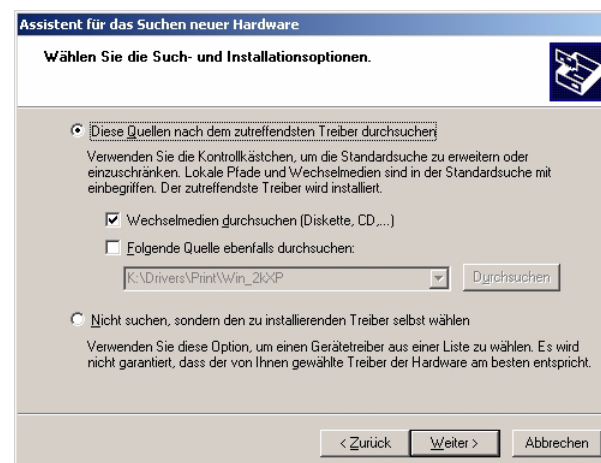

2. Click on **Next**

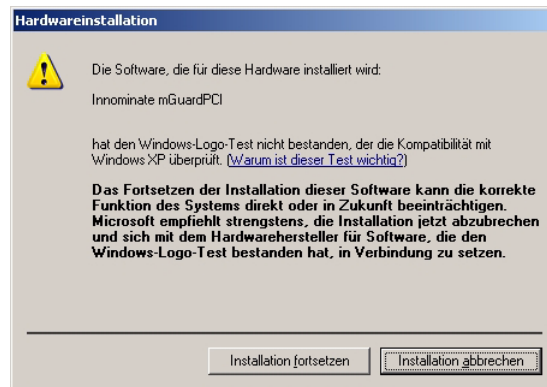

3. Click on **Continue anyway**

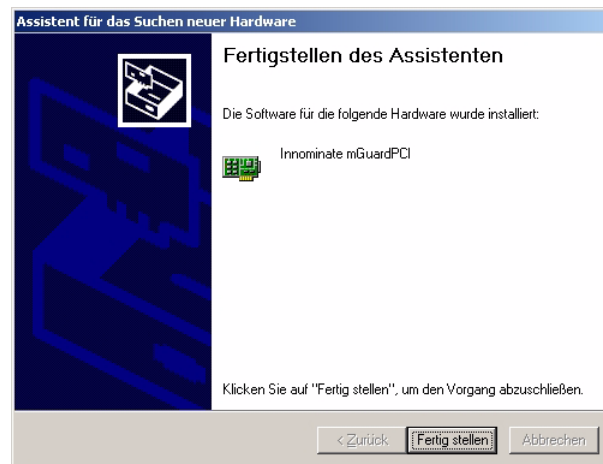


4. Click on **Finish**

Windows 2000

- ☞ Please complete the steps described in section “Hardware installation” on page 28 first.
- ☒ The installation of the driver is only necessary (and will only work as described) in Driver Mode (see “Driver Mode” on page 25)


To install the driver, switch your computer on, login with Administrator rights and wait for the following window to show up:

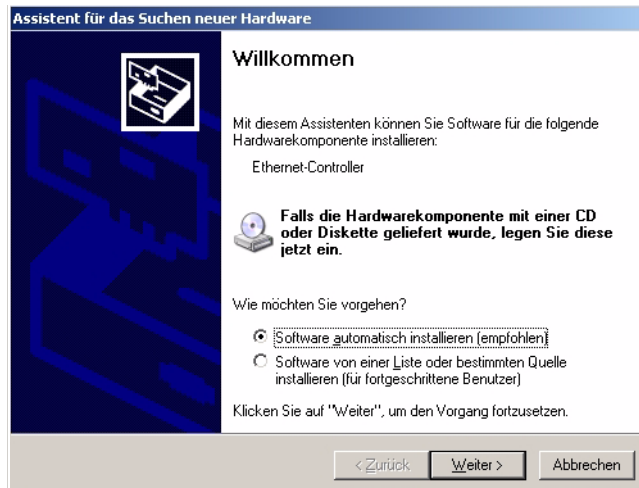


1. Click on **Next**



2. After inserting the mGuard-CD choose **Search for a suitable driver for my device** and click on **Next**

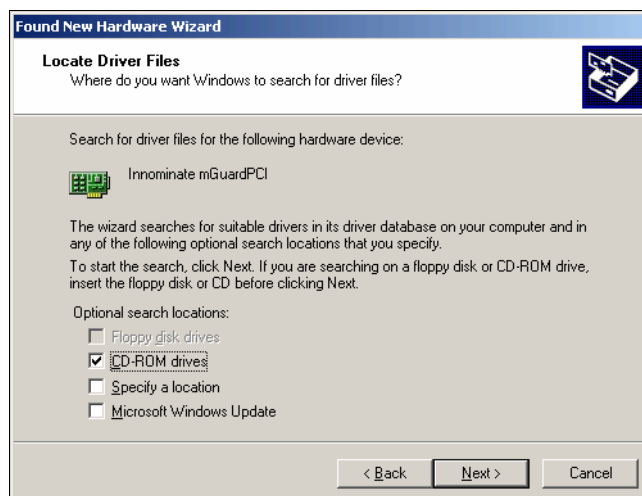

3. Select **CD-ROM drives** and click on **Next**

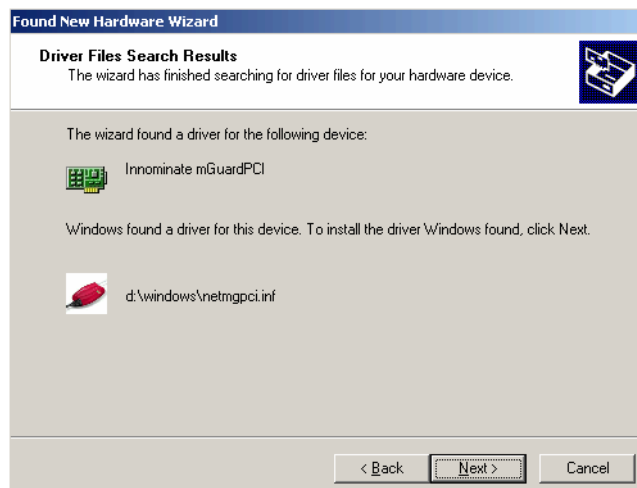

4. Click on **Next**



5. Click on **Yes**



6. Click on **Finish**

Linux

The Linux driver is available as a source archive and must be compiled before usage. To do this:

- Build and install the kernel (2.4.26) in **/usr/src/linux**
- Unpack the driver into **/usr/src/pci-driver**
- Issue the following commands in the shell
 - **cd /usr/src/pci-driver**
 - **make LINUXDIR=/usr/src/linux**
 - **install -m0644 mguard.o /lib/modules/2.4.26/kernel/drivers/net/**
 - **depmod -a**
- To load the driver run the following command
 - **modprobe mguard**

5 Configuration preparation

5.1 Connecting the mGuard

- | | |
|---------------------|---|
| mGuard blade | <ul style="list-style-type: none">• The mGuard blade must be installed inside the mGuard bladeBase and at least one of the bladeBases power supplies must be on.• <u>In a local configuration:</u> The system that you use for performing the configuration must either be<ul style="list-style-type: none">– connected to the LAN jack of the mGuard blade,– or connected to it via the local network.• <u>In the case of a remote configuration:</u> The mGuard must be configured to permit remote configuration.• The mGuard must be connected, i.e. the required connections must function. |
| mGuard delta | <ul style="list-style-type: none">• The mGuard must be connected to its power supply.• <u>In a local configuration:</u> The system that you use for performing the configuration must either be<ul style="list-style-type: none">– connected to the mGuard's LAN switch (ethernet jack 4 to 7)– or connected to it via the local network.• <u>In the case of a remote configuration:</u> The mGuard must be configured to permit remote configuration.• The mGuard must be connected, i.e. the required connections must function. |
| EAGLE mGuard | <ul style="list-style-type: none">• The EAGLE mGuard must be connected to an active power supply.• <u>In a local configuration:</u> The system that you use for performing the configuration must either be<ul style="list-style-type: none">– connected to the trusted port of the EAGLE mGuard,– or connected to it via the local network.• <u>In the case of a remote configuration:</u> The EAGLE mGuard must be configured to permit remote configuration.• The EAGLE mGuard must be connected, i.e. the required connections must function. |
| mGuard smart | <ul style="list-style-type: none">• The mGuard must be connected to a power-supply. In other words, its USB cable must be connected to a system (or power supply) that is ON.• <u>In a local configuration:</u> The system that you use for performing the configuration must either be<ul style="list-style-type: none">– connected to the mGuard's Ethernet plug,– or connected to it via the local network.• <u>In the case of a remote configuration:</u> The mGuard must be configured to permit remote configuration.• The mGuard must be connected, i.e. the required connections must function. |
| mGuard PCI | <ul style="list-style-type: none">• <u>In a local configuration:</u> The system that you use for performing the configuration must either be<ul style="list-style-type: none">– equipped with the mGuard drivers when using the Driver Mode or– connected to it via the LAN Ethernet connector when using the Power-over-PCI mode.• <u>In the case of a remote configuration:</u> The mGuard must be configured to permit remote configuration.• The mGuard must be connected, i.e. the required connections must function. |

5.2 Local Configuration: At startup

The mGuard is configured using a Web browser, which is running on the configuration system (e.g. Firefox, MS Internet-Explorer or Safari)

☒ **The Web browser must support SSL (in other words https).**

By default (factory settings), the mGuard is accessible at the following address:

Factory setting:

Transparent Mode: (default setting except mGuard delta)	https://1.1.1.1/
Router Mode: (default setting on mGuard delta)	https://192.168.1.1/

5.2.1 EAGLE mGuard

With a configured network interface

In order for the mGuard to be accessed via the address https://1.1.1.1/, it must of course first be connected to a configured network interface. This is the case, if you insert it into an existing network connection - see the illustration in the section

- “Connect the EAGLE mGuard” on page 22

In this case the Web browser can access the mGuard's configuration interface at the address https://1.1.1.1/ - see “Setting Up a Local Configuration Connection” on page 41. Continue from this point onwards in this case.

Without a configured network interface

If the computer's network interface has not yet been configured

If the system, which will be used to configure the device, was not previously connected to a network, e.g. because the computer is new, its network interface will generally not be configured yet. This means that the system has not yet “been informed” that network traffic should be handled by this interface.


In this case, you must initialize the standard gateway by assigning it a dummy value. To accomplish this, proceed as follows:

Initializing the standard gateway

1. Determine the currently valid standard gateway address.

If you are using Windows XP, click on **Start, Control Panel, Network Connections**: Right click on the icon of the LAN adapter and then click on **Properties** in the pop-up menu. In the dialog *Internet Protocol Properties* on the *General* tab, select **Internet Protocol (TCP/IP)** under “This connection uses the following items” and then click on the **Properties** button to open the following dialog:

The IP address of the standard gateway can be examined or set here.

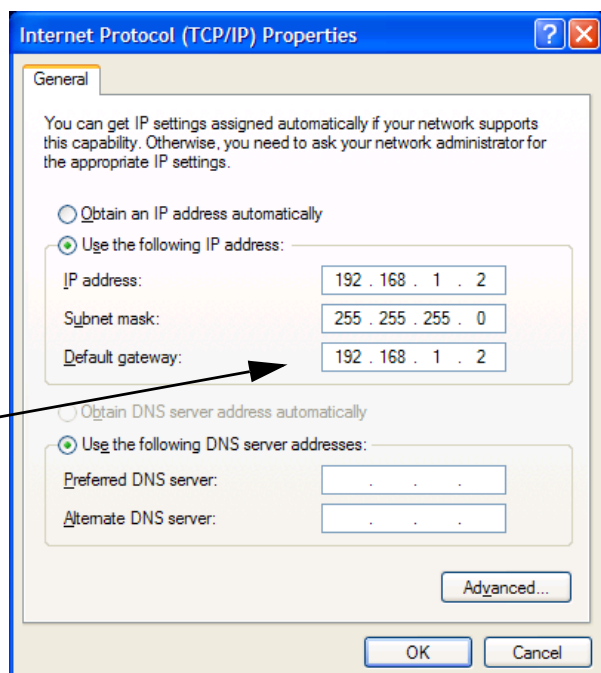

Entering the IP parameter via HiDiscovery

If no IP address has been entered for the standard gateway in this dialog box, e.g. because *Obtain an IP address automatically* has been activated, enter the IP address manually. To do so, first activate **Use the following IP** and then enter, as an example, the following addresses:


IP address:	192.168.1.2	<input checked="" type="checkbox"/> Do not under any circumstance assign the configuration system an address like 1.1.1.2!
Subnetwork mask:	255.255.255.0	
Standard gateway:	192.168.1.1	

The HiDiscovery protocol enables you to assign IP parameters to the Switch via the Ethernet.

You can easily configure additional parameters with the Web-based management (see “Configuration” on page 44).

Install the HiDiscovery software on your PC. The software is on the CD supplied with the Switch.

1. To install it, you start the installation program on the CD.
☒ The installation of HiDiscovery involves installing the WinPcap Version 3.0 software package.
If an earlier version of WinPcap is already installed on the PC, then you must first uninstall it. A newer version remains intact when you install HiDiscovery. However, this can not be guaranteed for all future versions of WinPcap. In the event that the installation of HiDiscovery has overwritten a newer version of WinPcap, then you uninstall WinPcap 3.0 and then re-install the new version.
2. Start the HiDiscovery program.

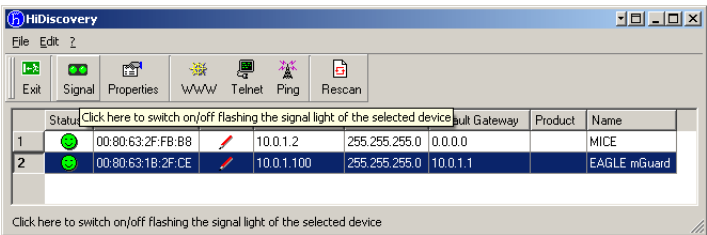

When HiDiscovery is started, it automatically searches the network for those devices which support the HiDiscovery protocol.


HiDiscovery uses the first PC network card found. If your computer has several network cards, you can select these in HiDiscovery on the toolbar.

HiDiscovery displays a line for every device which reacts to the HiDiscovery protocol.

- ☒ Depending on the protocol in the state of delivery the EAGLE mGuard displays the IP-Address 0.0.0.0 instead of 1.1.1.1.
- HiDiscovery enables you to identify the devices displayed.

3. Select a device line.
4. Click on the symbol with the two green dots in the tool bar to set the LEDs for the selected device flashing.
To Switch off the flashing, click on the symbol again.

By double-clicking a line, you open a window in which you can enter the device name and the IP parameter.

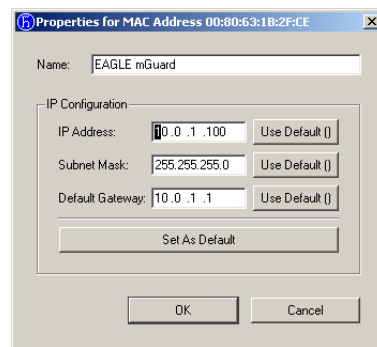

- ☒ After the IP address has been entered, the Switch loads the local configuration settings. Save the settings you have made so they will still be available after restart (see “Basic Settings → Load/Save” on page 65).
- ☒ For security reasons, Switch off the HiDiscovery function for the device in the Web-based interface, after you have assigned the IP parameters to the device (see “Basic Settings → System” on page 46).

5.2.2 mGuard blade and mGuard smart

With a configured network interface

In order for the mGuard to be accessed via the address <https://1.1.1.1/>, it must of course first be connected to a configured network interface. This is the case, if you insert it into an existing network connection - see the illustration in the section

- “Connect the mGuard blade” on page 19
- “Connect the mGuard smart” on page 24.

In this case the Web browser can access the mGuard's configuration interface at the address <https://1.1.1.1/> - see “Setting Up a Local Configuration Connection” on page 41. Continue from this point onwards in this case.

Without a configured network interface

If the computer's network interface has not yet been configured

If the system, which will be used to configure the device, was not previously connected to a network, e.g. because the computer is new, its network interface will generally not be configured yet. This means that the system has not yet “been informed” that network traffic should be handled by this interface.

In this case, you must initialize the standard gateway by assigning it a dummy value. To accomplish this, proceed as follows:


Initializing the standard gateway

1. Determine the currently valid standard gateway address.

If you are using Windows XP, click on **Start, Control Panel, Network Connections**: Right click on the icon of the LAN adapter and then click on **Properties** in the pop-up menu. In the dialog *Internet Protocol Properties* on the *General* tab, select **Internet Protocol (TCP/IP)** under “This connection

uses the following items” and then click on the **Properties** button to open the following dialog:

The IP address of the standard gateway can be examined or set here.

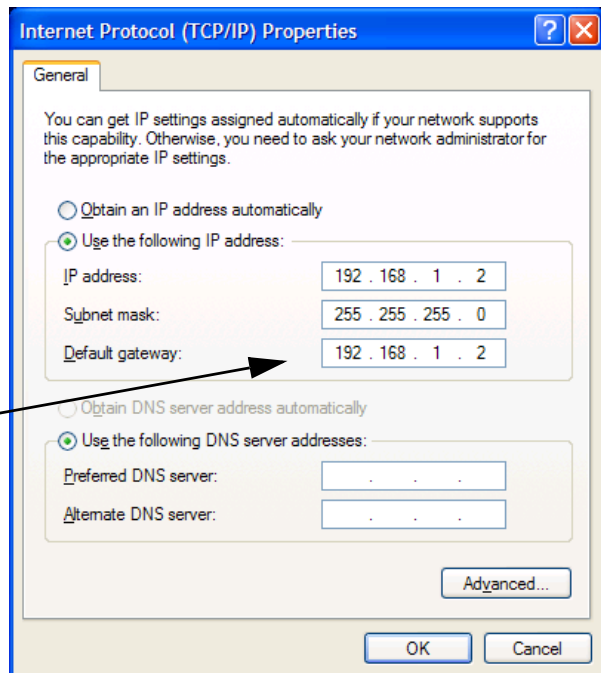

If no IP address has been entered for the standard gateway in this dialog box, e.g. because *Obtain an IP address automatically* has been activated, enter the IP address manually. To do so, first activate **Use the following IP** and then enter, as an example, the following addresses:

IP address: 192.168.1.2
Subnetwork mask: 255.255.255.0
Standard gateway: 192.168.1.1

☒ Do not under any circumstance assign the configuration system an address like 1.1.1.2!

2. On the DOS level (**Start, Programs, Accessories, Command Prompt**), enter:

arp -s <IP of the standard gateway> aa-aa-aa-aa-aa-aa

Example:

You have determined that the address of the standard gateway is [or you have set it to]: 192.168.1.1

Then the command should be:

arp -s 192.168.1.1 aa-aa-aa-aa-aa-aa

3. To proceed with the configuration, first establish the necessary connection - see “Setting Up a Local Configuration Connection” on page 41.
4. After setting the configuration, restore the original setting for the standard gateway address. To do so, either restart the configuration computer or enter the following command at the DOS level [in the Command Prompt window]:


arp -d

5.2.3 mGuard delta

The mGuard delta’s initial IP address on the LAN interfaces 4 to 7 is 192.168.1.1 within the network 192.168.1.0/24 and you may need to adjust the configuration off your computer to access it.

If you are using Windows XP, click on **Start, Control Panel, Network Connections**:

- Right click on the icon of the LAN adapter and then
- click on **Properties** in the pop-up menu.
- In the dialog *Internet Protocol Properties* on the *General* tab, select **Internet Protocol (TCP/IP)** under “This connection uses the following items” and then
- click on the **Properties** button to open the following dialog:

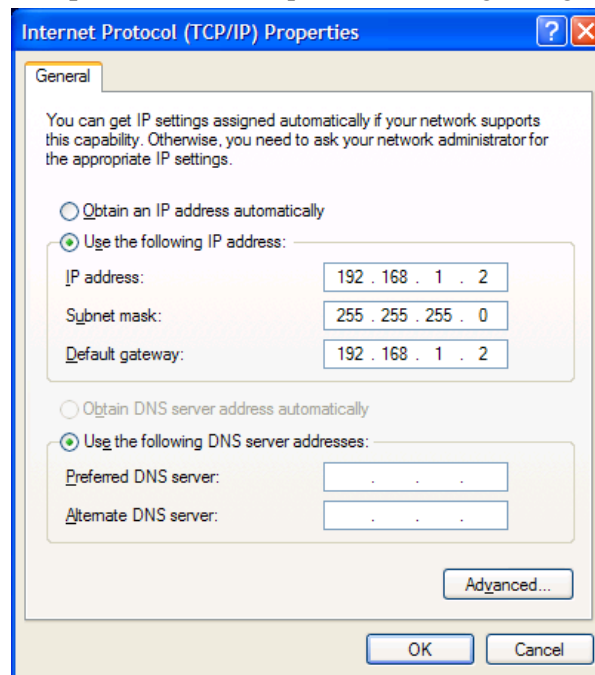

Activate **Use the following IP** and then enter the following address:

IP address:	192.168.1.2
Subnetwork mask:	255.255.255.0
Standard gateway:	192.168.1.1

- ☒ Depending on how you configure the mGuard, you may also need to modify the network interface settings of the locally connected system or network accordingly.

5.2.4 mGuard PCI

Install the mGuard PCI Card

When you haven't already installed the mGuard PCI card in your computer, please follow the steps as described in “Hardware installation” on page 28.

Install the mGuard PCI Driver

When you've configured the mGuard to run in Driver Mode, make sure that you've installed the drivers as described in “Driver installation” on page 29.

Configure the Network Interface

If you


- operate mGuard in the driver mode and the LAN interface (= computer's network interface) has not yet been configured

OR

- operate mGuard in the Power-over-PCI mode and the computer's network interface, which is connected to mGuard's LAN interface, has not yet been configured, this network interface must be configured before you can configure mGuard.

If you are using Windows XP:

- Click on **Start, Control Panel, Network Connections**
- Right click on the icon of the LAN adapter
- Click on **Properties** in the pop-up menu.
- In the dialog *Internet Protocol Properties* on the *General* tab, select **Internet Protocol (TCP/IP)** under “This connection uses the following items”
- Click on the **Properties** button to open the dialog you see to the right.

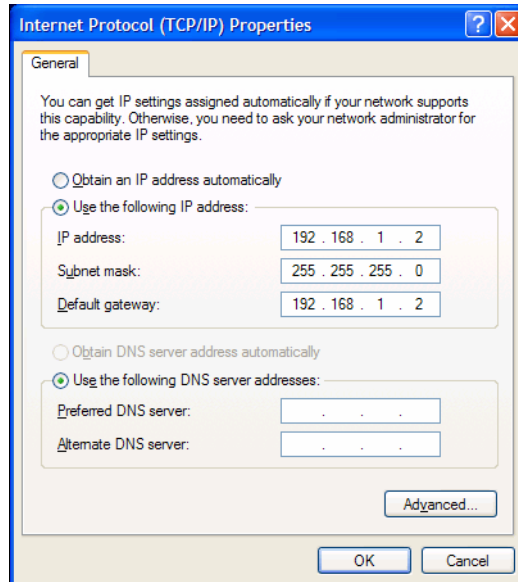

The Default Gateway

After you’ve configured the network interface, you should be able to access the mGuard’s configuration interface with a Web browser at the URL “https://1.1.1.1/”. In case this isn’t possible, then your computer’s default gateway might not be available and you must initialize the standard gateway by assigning it a dummy value. To accomplish this, proceed as follows:

Initializing the standard gateway

1. Determine the currently valid standard gateway address. If you are using Windows XP, follow the steps described above under “Configure the Network Interface” to open the **Internet Protocol (TCP/IP) Properties** dialog box.

If no IP address has been entered for the default gateway in this dialog box, e.g. because *Obtain an IP address automatically* has been activated, enter the IP address manually. To do so, first activate **Use the following IP** and then enter, as an example, the following addresses:

IP address:	192.168.1.2	<input checked="" type="checkbox"/> Do not under any circumstance assign the configuration system an address like 1.1.1.2!
Subnetwork mask:	255.255.255.0	
Standard gateway:	192.168.1.1	

2. On the DOS level (**Start, Programs, Accessories, Command Prompt**), enter:

```
arp -s <IP of the default gateway> aa-aa-aa-aa-aa-aa
```

Example:

You have determined that the address of the default gateway is [or you have set it to]: 192.168.1.1

Then the command should be:

```
arp -s 192.168.1.1 aa-aa-aa-aa-aa-aa
```

-
3. You should now be able to access the mGuard's configuration interface at the URL `https://1.1.1.1/`. Please see "Setting Up a Local Configuration Connection" on page 41 for full details.

4. After setting the configuration, restore the original setting for the standard gateway address. To do so, either restart the configuration computer or enter the following command at the DOS level [in the Command Prompt window]:

arp -d

- ☒ Depending on how you configure the mGuard, you may also need to modify the network interface settings of the host operating system or locally connected system accordingly.
-

5.3 Setting Up a Local Configuration Connection

Web-based Administrator interface

The mGuard is configured using a Web browser, which is running on the configuration system (e.g. Firefox since version 1.5, MS Internet-Explorer since version 5.0, Safari oder w3m.)

☒ **The Web browser must support SSL (in other words https).**

Depending on the mGuard's network mode (= mode of operation), it can be accessed (with the factory settings) at one of the following addresses:

Factory setting:

Transparent Mode (default setting): `https://1.1.1.1/`

Router / PPPoE / PPPT Mode: `https://192.168.1.1/`

Proceed as follows:

1. Start a Web browser.
(For example, Firefox, MS Internet Explorer or Safari; the Web browser must support SSL (i.e. https).)

2. Make certain that the browser does not automatically dialup a connection when it is started because this could make it more difficult to establish a connection to the mGuard.

In MS Internet Explorer, you can prevent this with the following setting: In the **Extras menu**, select **Internet Options...** and click on the *Connections* tab.

Make certain that *Never dial a connection* is selected under **Dial-up and Virtual Private Network settings**.

3. Enter the complete address of the mGuard into the browser's address field. In **Transparent** mode (= factory setting except mGuard delta) this address always is

The mGuard's default IP address in *Transparent* mode:

`https://1.1.1.1/`

and not in *Transparent* mode:

`https://192.168.1.1/`

`https://1.1.1.1/`

and in **Router** (= factory setting on mGuard delta), **PPPoE** or **PPTP** mode, the factory setting for the mGuard's address is

`https://192.168.1.1/`

Afterwards:

the mGuard's Administrator Web page will be displayed. The security notice shown under "After a connection has been successfully setup" on page 42 will

displayed.

- ☒ If you have forgotten the configured address: If the address of the mGuard – in *Router*, *PPPoE* or *PPTP* mode – has been changed to a different value and you do not know the device's current address, you must use the **Rescue** key to restore it to factory default. (see “Performing a Recovery” on page 142).
- ☒ If the Administrator Web page is not displayed... If – even after repeated attempts – the Web browser still reports that the page cannot be displayed, try the following:
- Check whether the standard gateway has been initialized on the connected configuration system. See “Local Configuration: At startup” on page 34
 - Try disabling any existing firewall.
 - Make certain that the browser does not use a proxy server.
In MS Internet Explorer (Version 6.0), you can prevent this with the following setting: In the **Extras** menu, select **Internet Options...** and click on the *Connections*: tab. Under *LAN Settings* click on the **Properties...** button and, in the *Local Area Network (LAN) Settings* dialog, check to make certain that **Use a proxy server for your LAN** (under Proxy server) is not activated.
 - If any other LAN connection is active on the system, deactivate it until the configuration has been completed.
Under the Windows **Start** menu, **Settings**, **Control Panel**, **Network Connections** or **Network and Dial-up Connections**, right click on the associated icon and select **Disable** in the pop-up menu.

After a connection has been successfully setup

After the connection has been successfully setup, the following security notice will be displayed (MS Internet Explorer):




Explanation:

Since administrative tasks can only be performed when a secure (encrypted) access has been established to the device, a signed (by the device) certificate will be returned.

Acknowledge the associated security notice by clicking on **Yes**.

Afterwards:

The login window is displayed:

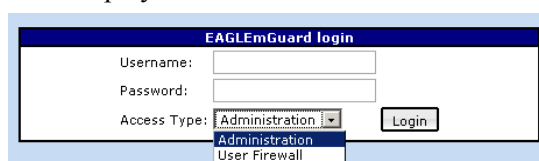

Choose the Access Type — Administration or User Firewall — and enter your

username and password for this access type. (Please see “Network Security → User Firewall” on page 95 for an explanation of the User Firewall.)

The factory settings for the Administration are:

Device	mGuard smart mGuard PCI mGuard blade mGuard delta	EAGLE mGuard
Login:	admin	admin
Password:	mGuard	private

☒ Please note, these entries are case-sensitive!

To configure the device, proceed as follows:

Configuring the device

1. Select the page with the desired configuration options from the menu - see Page 44.
2. Make the desired settings on the associated page.
3. Once you have confirmed the changes by clicking on **OK**, the new settings will be activated on the device.
The system will display a confirming message.

If the changes are not shown when you open the page again, because the browser has loaded the page from a cache, reload the page to refresh the display. To do so, click on the appropriate icon in the browser toolbar.

☒ Depending on how you configure the mGuard, you may also need to modify the network interface settings of the locally connected system or network accordingly.

5.4 Remote Configuration

Prerequisite

The mGuard must be configured to permit remote configuration.

☒ For reasons of security, remote configuration is disabled by default.

For information on how to enable remote configuration, see section “Security → Web Access” on page 79.

Remote configuration

To configure the mGuard from a remote computer, first establish a connection between it and the local mGuard.

Proceed as follows:

1. Start a Web browser (e.g. Firefox, MS Internet Explorer or Safari; the Web browser must support SSL (i.e. https)).
2. As the address, enter “https://” followed by the IP address or hostname under which the mGuard can be reached.

Example:

 
If this mGuard can be found in the Internet at the address 123.456.789.21 and the Port Number 443 has been set as the port for remote access, you must enter the following address in the Web browser’s address field on the remote system: https://123.456.789.21/. If a different Port Number is used, this must be appended to the IP address, e. g.: https://123.456.789.21:442/

6 Configuration

6.1 Operation

Screen Layout

1. Via the left-hand menu, click on the page with the desired setting possibilities, e.g. *Administration* -> *Licensing*. The page will then be displayed in the main window - in the form of a register card - on which you can define the settings. If necessary, the page will be organized into several register cards. You may browse through these cards using the tabs at the top.
2. On the relevant page or register card, make the desired entries. To do so, see also the subsection “What happens if inadmissible values are entered” on page 44.
3. In order to adopt the settings, click on the **Apply** button..



After the data has been saved by the system, you will receive a confirmation message. This indicates that the new settings have come into effect. They will also remain valid following restart (reset).

What happens if inadmissible values are entered

After inadmissible values are entered (for example, an inadmissible number in an IP address) and after subsequently clicking Apply, the letters of the relevant tab card titles will be displayed in red. This helps you in tracking down the error.

Working with tables

Many settings are saved as data records. Correspondingly, the adjustable parameters and their values are presented in the form of table rows. If settings have been created for several data records (e.g. firewall rules), these will be queried or processed based on the sequence of entries from top to bottom. Therefore, if applicable, it is important to pay attention to the order of the entries. By shifting table rows either up or down, the order can be changed.

With tables, you can

- insert rows in order to set up a new data record with settings (e.g. the firewall rules for a specific connection)
- move rows (i.e. shift them to another location) and
- delete rows, in order to delete the entire data record.

Insert row




1. Click on the arrow under which you want to insert a new row:



2. Result: The new row is inserted.

Move rows

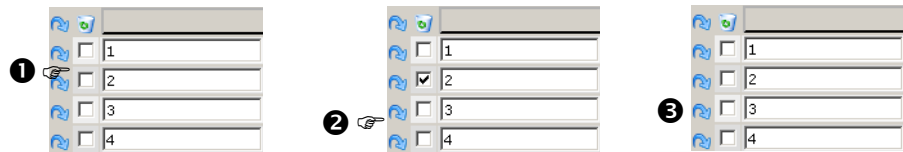


1. Mark one or more rows you want to move.
2. Click on the arrow under which you want to move the marked rows:



3. Result: The rows are moved.

Delete rows

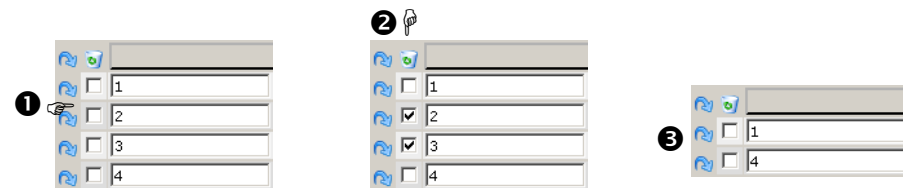

1. Mark the rows you want to delete.
2. Click on the symbol to delete the rows:



3. Result: The rows are deleted.

Further operating remarks

- ☒ If the browser is reloading a page from the cache and therefore displaying an earlier version, you may update the page display to the latest version. To do so, click the update symbol in the browser toolbar.

The following buttons are located in every page header on the mGuards smart, blade, PCI and delta:

	For logging out after configuration access to the mGuard. If the user does not conduct a logout procedure, the logout is automatically conducted if no more activity takes place and the timeout has expired. Renewed access is only granted after the login process has been repeated.
	Optional button. Resets data to the previous values. If you have entered values on a configuration page and these haven't yet been applied, you can restore the previous values on the page by clicking the Reset button. This button is only included in the page header if the validity range of the Apply button is set to <i>include all pages</i> - see "Security → Web Access" on page 79.
	Optional button. Functions similar to the Apply button (see above) but is valid for all pages. This button is only included in the page header if the validity range of the Apply button is set to <i>include all pages</i> - see "Security → Web Access" on page 79.

6.2 Menu Basic Settings

- ☒ For reasons of security, we recommend that you change the default Root and Administrator passwords during the first configuration - see “Passwords” on page 81. As long as the passwords have not been changed, you will see a notice at the top of the page.

6.2.1 Basic Settings → System

Host

Logged in as 'admin' from 10.0.1.159 on 'LocalRouter'.

HIRSCHMANN

System

Host | Signal Contact | Time and Date | ☐ Shell Access

System

Power supply 1 / 2: ok / ok
Uptime: 2:53
Temperature (°C): 42.5

System DNS Hostname

Hostname mode: User defined (from field below) ▼
Hostname: LocalRouter
Domain search path: example.local

SNMP Information

System Name:
Location:
Contact: Gerhard

HiDiscovery

Local HiDiscovery Support (SCT/MCT, internal/trusted port only): Enabled ▼
HiDiscovery Frame Forwarding (SCT/MCT, bidirectional): No ▼

Apply

System (only EAGLE mGuard)

Power supply 1/2

The state of both power supplies.

Uptime

The system uptime since the last reboot.

Temperature (°C)

If the temperature exceeds the specified range a SNMP trap is sent.

System DNS Hostname

Hostname mode

Using the *Hostname mode* and *Hostname* fields, you can assign a name to the mGuard. This will then be displayed, e.g. when logging in via SSH. The administration of multiple mGuards is simplified if you assign hostnames to them.

User defined (see below)

(Default) The name entered in the *Hostname* field is assigned to the mGuard.

- ☞ If the mGuard is running in *Transparent* mode, the option *User defined* must be selected under *Hostname mode*.

Provider defined (e.g. via DHCP)

If the selected network mode permits the external setting of the hostname e.g. via DHCP, the name received from the provider will be assigned to the mGuard.

Hostname

If the option *User defined* is selected under *Hostname mode*, enter the name which should be assigned to the mGuard here.

Otherwise, i.e. if the option *Provider defined (e.g. via DHCP)* is selected under *Hostname mode*, the entry in this field will be ignored.

Domain search path

This entry makes it easier for the user to specify a domain name: If the user enters the domain name in an abbreviated form, the mGuard will extend the entry by appending the domain suffix, which is defined here in the *Domain search path*.

SNMP Information

Systemname

An informational name for the mGuard, eg. “Hermes”, “Pluto”.
(sysName under SNMP)

Location

The physical location of this mGuard.
(sysLocation under SNMP)

Contact

The name of the contact person for this mGuard, together with information on how to contact this person.
(sysContact under SNMP)

Rack ID (only mGuard blade)

The ID of the rack in which the mGuard is installed. On the controller this value can be changed.

Slot ID (only mGuard blade)

The ID of the slot in which the mGuard is installed. Either “Ctrl” or a number between 1 and 12.

HiDiscovery

HiDiscovery is a protocol which supports the initial start-up of new network devices and is activated in the mGuard's *Transparent* mode on the mGuard's LAN port.

☞ HiDiscovery can be accessed from the trusted network only.

☞ The mGuard must be operated in the Transparent mode.

Local HiDiscovery Support

Activated

The HiDiscovery protocol is activated.

Read only

The HiDiscovery protocol is activated, but the mGuard cannot be configured through it.

Deactivated

The HiDiscovery protocol is deactivated.

HiDiscovery Frame Forwarding

If this option is activated, then HiDiscovery frames are forwarded from the trusted port via the untrusted port.

Signal contact (only EAGLE mGuard)

Logged in as 'admin' from 10.0.1.159 on 'LocalRouter' .

HIRSCHMANN

System

Host | **Signal Contact** | Time and Date | ☐ Shell Access

Mode
Signal contact

Operation supervision
Contact **[Closed (Ok)]**
Redundant power supply
Link supervision

Manual settings
Contact

The signal contact is a relais which is used by the mGuard to signal error conditions. (See “Signal contact” on page 22.)

Mode

Signal contact

The signal contact can be controlled by the mGuard through automatic **Operation supervision** or **Manual setting**.

Operation supervision

Contact

Displays the state of the the signal contact. Either **Open (Error)** oder **Closed (Ok)**.

Redundant power supply

If set to **Ignore**, the power supply doesn't influence the signal contact. If set to **Supervise**, the signal contact will be opened when one of the power supplies fails or during permanent malfunction inside the mGuard (internal voltage of 3,3 VDC, power supply < 9,6V, ...).

Link supervision

Supervision of the ethernet interfaces link state. Possible settings are:

- Ignore
- Supervise only trusted port
- Supervise only untrusted port
- Supervise both ports

Manual settings

Contact

If the signal contact is set to **Manual setting**, this option sets the contact to **Closed** or **Open (Alarm)**.

Time and Date

Logged in as 'admin' from 10.0.1.159 on 'LocalRouter' .

System

Host | Signal Contact | **Time and Date** | Shell Access

Time and Date

Current system time (UTC) | Sat Jan 1 02:53:30 UTC 2000

Current system time (local) | Sat Jan 1 02:53:30 UTC 2000

Local system time
(2000.01.01-02:53:30) | (YYYY.MM.TT-HH:MM:SS)

Timezone in POSIX.1 notation | UTC
(Eg: "CET-1" for the EU or "CET-1CEST,M3.5.0,M10.5.0/3" with automatic daylight saving time switching)

Time stamp in filesystem
(2h granularity) | No

NTP Server

Enable NTP time synchronization | No

NTP State | (disabled)

NTP Server

Apply

Time and Date

Current system time (UTC)

Displays the current system time in Universal Time Coordinates (UTC). If the *Enable NTP time synchronisation* is not yet activated (see below) and *Time stamp in filesystem* is deactivated, the clock will start with 1 January 2000.

Current system time (local)

If the possibly differing current local time should be displayed, you must make the corresponding entry under *Timezone in POSIX.1 notation...* (see below).

Local system time

Here you can set the mGuard's in case no NTP server has been specified or the NTP server isn't reachable.

The date and time are specified in the format YYYY.MM.DD-hh:mm:

YYYY	Year
MM	Month
DD	Day
hh	Hour
mm	Minute

Timezone in POSIX.1 notation...

If the Current *system time* above should display your current local time instead of the current time (if it is different to the Greenwich Mean Time), you must enter the number of hours (plus or minus) that your local time differs from Greenwich Mean Time.

Examples:

In Germany, the time is one hour earlier than in Greenwich. Therefore, enter: CET-1.

In New York the clock is behind by hours relative to Greenwich Mean Time. So you enter: GMT+5. The only important thing is the value -1, -2 or +1 etc., because only this will be evaluated – the preceding letters won't be. They can be substituted with "CET" or any other designation, such as "UTC".

If you wish to display Central European Time (for example for Germany) and have it automatically switch to/from daylight saving time, enter:
CET-1CEST,M3.5.0,M10.5.0/3

Time stamp in filesystem (2hr granularity): Yes / No

If this option is set to **Yes**, the mGuard will save the current system time to its memory every two hours.

Afterwards: If the mGuard is switched off and back on, a time from this two hour period of time will be displayed when the mGuard is switched on and not (the factory setting) a time on 1 January 2000.

NTP Server

Enable NTP time synchronisation Yes / No

Once the NTP is enabled, the mGuard takes the time from the Internet and displays this as its current system time. The synchronisation can take several seconds.

If this option is set to **Yes** and at least one time server is specified under *NTP servers to synchronize to* (see below), the current system time will be retrieved over the internet.

NTP State

Displays the current NTP state

NTP server

Enter one or more time servers from which the mGuard should obtain the current time. If you enter multiple time servers, the mGuard will automatically connect with all of them to determine the current time.

- ☞ If you enter a hostname, e.g. pool.ntp.org, instead of an IP address, a DNS server must also be specified - see “Log → Settings” on page 126.
- ☞ If the mGuard is operating in *Router*, *PPPoE* or *PPTP* mode, it will also make the NTP time available to the locally connected systems.

Shell Access

Logged in as 'admin' from 10.0.1.159 on 'LocalRouter' .

System

Host | Signal Contact | Time and Date | ☒ Shell Access

Shell Access

Enable SSH remote access: No

Port for incoming SSH connections (remote administration only): 22

Allowed Networks

N°	From IP	Interface	Action	Comment	Log
----	---------	-----------	--------	---------	-----

Log ID: fw-ssh-access-N°-00000000-0000-0000-0000-000000000000

These rules allow to enable SSH remote access.

Important: Make sure to set secure passwords before enabling remote access.

Note: In Transparent mode incoming traffic on the given port is no longer forwarded to the client.

Note: In router mode with NAT or portforwarding the port set here has priority over portforwarding.

Note: The SSH access from the internal side is enabled by default and can be restricted by firewall rules.

Apply

Shell Access

When SSH Remote Access is enabled the mGuard can be configured from a remote system using the command line interface.

This option is disabled by default.

IMPORTANT: If you enable remote access, make certain that you have secure root and administrator passwords.

To enable SSH Remote Access, proceed as follows:

Enable SSH remote access: Yes / No

If you want to allow SSH connections, set this switch to **Yes**.

☞ In this case, make certain that the firewall rules on this page permit the mGuard be accessed from a remote site.

Port for incoming SSH connections (remote administration only)

Standard: 22

You can select a different port.

Example:

If this mGuard can be found in the Internet at the address 123.456.789.21 and the Port Number 22 has been set as the port for remote access, you may need not enter this port number in the address field on the remote system's SSH client.

If a different port number has been set (e.g. 22222), this must be specified to the SSH client, e.g.:

```
ssh -p 22222 123.456.789.21
```

Allowed Networks

Lists the firewall rules that have been set. These apply for the incoming data packets of an SSH remote access.

You can define (further more) rules.

From IP

Enter the address(es) of the system(s) that is/are allowed remote access in this field.

You have the following options for the entries:

- IP address: **0.0.0.0/0** means all addresses. To enter an address space, use the CIDR notation – see “CIDR (Classless InterDomain Routing)” on page 140.

Interface**Trusted OR Untrusted**

Defines for which interface the rule applies, the trusted port or the untrusted port.

State on delivery: the untrusted port discards all, the trusted port accepts all.

Action

Possible settings:

- Accept
- Reject
- Drop

Accept means that the data packets should be passed through.

Reject means that the data packets should be rejected so that the sender is informed that the data packets have been rejected. (In *Transparent* mode, *Reject* has the same effect as *Drop*.)

Drop means that the data packets should not be passed through. The data packets will be discarded so that the sender will not be informed as to what happened to them.

☞ In *Transparent* mode, *Reject* is not supported.

Comment

An informational comment for this rule.

Log

You can specify - for each individual firewall rule - whether the use of the rule

- should be logged by setting - *Log* to **Yes**
- or should not be logged by setting - *Log* to **No** (factory setting).

6.2.2 Basic Settings → Network Interfaces

General

logged in as 'admin' from 10.0.1.159 on 'EAGLE' (EAGLE mGuard) .

HIRSCHMANN

Network Interfaces

General | Ethernet | Serial Port | Hardware

Network Status

External IP address	10.0.1.100
Network Mode Status	Transparent-multi (up)
Active Defaultroute	10.0.1.1

Network Mode

Network Mode: Router

External Networks

Obtain external configuration via DHCP: No

External IPs (untrusted port)

IP	Netmask	Use VLAN	VLAN ID
10.0.0.152	255.255.255.0	No	1

Additional External Routes

Network	Gateway
10.0.0.253	

IP of default gateway: 10.0.0.253

Internal Networks

Internal IPs (trusted port)

IP	Netmask	Use VLAN	VLAN ID
192.168.1.1	255.255.255.0	No	1

Additional Internal Routes

Network	Gateway
---------	---------

Apply

Network Status

External IP address – WAN port address

Display only: The addresses through which mGuard can be accessed by devices from the external network. They form the interface to other parts of the LAN or to the Internet. If the transition to the Internet takes place here, the IP addresses are usually designated by the Internet Service Provider (ISP). If mGuard is assigned an IP address dynamically, you can look up the currently valid IP address here.

In *Transparent mode*, mGuard adopts the address of the connected local computer as its external IP.

Network mode status

Displays the status of the selected network mode.

Active default route

The IP address that mGuard uses to try to reach networks unknown to it is displayed here. If mGuard is in Transparent mode or if the IP address that is specified as the standard gateway in the connected computer's configuration is not correct, (none) is shown here.

Network mode

The mGuard has to be set to the network mode that corresponds to its local computer or network connection, respectively. See "Typical application scenarios" on page 11



Depending to which Network Mode the mGuard is set, the page is also modified using the configuration parameters defined for it:

- **Transparent** (*factory setting (except mGuard delta)*)

Transparent mode is only used when a single computer is locally connected to the device as a client.

In this mode, the device can be simply integrated (inserted) into an existing network connection of the respective computer. In this case, simply insert the mGuard into the network line - see the illustration in the section “Connect the mGuard smart” on page 24.

The mGuard will analyze the network traffic passing through it and configure its network connection accordingly. It will then operate transparently, i.e. without requiring that the client be reconfigured.

As in the other modes, the mGuard supports the Firewall, Anti Virus and in Single Transparent mode VPN security functions.

DHCP data (received from outside) will be passed through to the connected client.



In case a firewall is installed on the client, it must be configured to allow ICMP Echo Requests (ping). Otherwise the mGuard won't be able to use services like VPN, DNS, NTP, etc.



In Transparent mode the mGuard uses 1.1.1.1 as its internal IP address which is accessible when the client's configured default gateway is also accessible.

- **Router** (*factory setting (mGuard delta)*)

If the mGuard is not in *Transparent* mode, it serves as a gateway between different networks and has both an external and an internal IP address.

External Interface (= untrusted port):

The external interface (WAN) of the mGuard is connected to the Internet or other parts of the LAN.

- mGuard smart: the ethernet jack

Internal Interface (= trusted port):

A network or a single system is connected to its internal interface (LAN):

- mGuard smart: the Ethernet plug
- mGuard PCI: The internal interface is in Driver Mode the network interface of the Operating System or in Power-over-PCI mode the LAN Ethernet jack of the mGuard PCI.

As in the other cases, the mGuard supports the Firewall and VPN security functions in this mode of operation as well.



If the mGuard is operated in *Router* mode, you must set it as the standard gateway in the locally connected client computers. In other words, the address entered for the standard gateway must be the internal IP address of the mGuard. See “Initializing the standard gateway” on page 37.



If the mGuard is operated in *Router* mode and is used to establish the connection to the Internet, you should activate NAT to allow access to the Internet from the local network - see “Network Address Translation/ IP Masquerading” on page 90. If NAT is not activated, the device may only allow VPN connections.

- **PPPoE**

PPPoE mode corresponds to the Router mode with DHCP – with one difference: The PPPoE protocol, which is used by many DSL modems (for DSL Internet access), will be used, - as it is in Germany, for connecting to the

external network (Internet or WAN). The external IP address, under which the mGuard can be reached from a remote site, is assigned by the Internet Service Provider.

- ☞ If the mGuard is operated in *PPPoE* mode, you must set it as the standard gateway in the locally connected client computers. In other words, the address entered for the standard gateway must be the internal IP address of the mGuard. See “Initializing the standard gateway” on page 37.
- ☞ If the mGuard is in *PPPoE* mode, NAT must be activated to enable access to the Internet - see “Network Address Translation/IP Masquerading” on page 90. If NAT is not activated, the device will only allow VPN connections.

- **PPTP**

This mode is similar to *PPPoE* mode. In Austria, for example, PPTP is used instead of the PPPoE protocol for DSL connections.

(PPTP is the protocol, which was originally used by Microsoft for VPN connections.)

- ☞ If the mGuard is operated in *PPTP* mode, you must set it as the standard gateway in the locally connected client computers. In other words, the address entered for the standard gateway must be the internal IP address of the mGuard. See “Initializing the standard gateway” on page 37.
- ☞ If the mGuard is operated in *PPTP* mode, you should activate NAT to allow access to the Internet from the local network - see “Network Address Translation/IP Masquerading” on page 90. If NAT is not activated, the device will only allow VPN connections.

- ☒ When the Network Mode has been changed to or away from *Transparent* mode, the device will reboot automatically.
- ☒ If you change the address of the mGuard (e.g. by changing the Network Mode from *Transparent* to *Router*), the device will only be accessible at the new address.
When the change is done from the local interface, you will get a message telling you the new address before the change becomes active. When the change is done from the external interface you will not receive feedback from the mGuard.
- ☒ If you set the Network Mode to *Router*, *PPPoE* or *PPTP* and then change the internal IP address and/or the local netmask, make very certain that you enter the correct values. Otherwise, the mGuard may no longer be accessible.

External IP Address

Address under which the mGuard is accessible for external network devices. If the mGuard has been allocated an IP address dynamically, you will see here the IP address that is currently valid.

In *Transparent* mode, the mGuard assumes the address of the computer which is connected locally as its external IP.

Network Mode Status

Displays the status of the selected network mode.

Active Default Route

Here the IP address is displayed via which the mGuard tries to reach networks that are unknown to it. The display will read "(none)" if the mGuard is running in *Transparent* mode, or if the IP address which has been defined in the configuration for the connected computer as the default gateway is not correct..

Network Mode →
Transparent (factory
setting except mGuard
delta)

The screenshot shows the Hirschmann EAGLE web interface. At the top, it says 'Logged in as 'admin' from 10.0.1.159 on 'EAGLE'.' The Hirschmann logo is on the right. The main heading is 'Network Interfaces'. There are four tabs: 'General', 'Ethernet', 'Serial Port', and 'Hardware'. The 'General' tab is selected. Under 'Network Mode', there is a dropdown menu set to 'Transparent'. Below this, 'External IP address' is 10.0.1.100, 'Network Mode Status' is 'Transparent-multi (up)', and 'Active Defaultroute' is 10.0.1.1. The 'Transparent configuration' dropdown is set to 'Multiple client transparent mode (MCT)'. A note below states: 'Please note: The VPN functionality is disabled when "Transparent configuration" is set to "Multiple client transparent mode (MCT)".' The 'Transparent Local IP settings' section has a note: 'Here you can specify an additional IP address to administrate the EAGLE. If you have set "Transparent configuration" to "Multiple client transparent mode (MCT)", remote access will only be possible using this IP address. An IP address of "0.0.0.0" disables this feature.' The fields for 'IP address' (10.0.1.100), 'Netmask' (255.255.255.0), 'Default gateway' (10.0.1.1), 'Use Management VLAN' (No), and 'Management VLAN ID' (1) are shown. An 'Apply' button is at the bottom right.

Network Mode

Transparent configuration

Single client transparent mode (SCT) autodetect

(Standard) The mGuard will analyse the network traffic and configure its network interface accordingly and will then function transparently. For special cases, you can also preset these values, e.g. in the following case: The connected computer only accepts incoming connections so that it is not possible to configure the device automatically.

Single client transparent mode (SCT) static

If the mGuard cannot analyse the network traffic passing through, e.g. because the locally connected computer only receives data, the *Transparent configuration* must be set to **Static**.

Multiple client transparent mode (MCT)

Like **autodetect**, but it is possible to use multiple devices and IPs on the mGuard's internal interface (LAN). For technical reasons VPN can't be used with this mode.

Transparent Local IP settings (Network Mode = Transparent)

An additional IP address can be specified here to administrate the mGuard. If

- *Transparent configuration* is set to the option **Multiple client transparent mode (MCT)** or
- the client doesn't answer ARP requests or
- there is no client at all,

then the remote administration via HTTPS, SNMP and SSH is only possible using the management IP address.

IP address

The additional IP address to contact the mGuard.

The IP address "0.0.0.0" disables the *Management IP Address*.

Netmask

The netmask for the IP address above.

Default Gateway

The default gateway of the network the mGuard is located in.

Use Management VLAN

If this IP address is to be inside a VLAN, this option must be set to **Yes**. The mGuard supports in MCT and Router mode.

Management VLAN ID

A VLAN ID between 1 and 4095.



An explanation of the term “VLAN” can be found under “VLAN” on page 153.

Transparent Static-Single-Client-Transparentmodus (SCT) (Transparent Configuration = static)

Transparent Static single client transparent mode (SCT)	
Client's IP address	<input type="text" value="0.0.0.0"/>
Client's MAC address	<input type="text" value="0:0:0:0:0:0"/>

Client's IP address

The IP address of the client.

Client's MAC address

This is the physical address of the local computer's network adapter to which the mGuard is connected.

☒ The MAC address can be determined in the following manner:

On the DOS level (**Start, Programs, Accessories, Command Prompt**), enter the following command:

ipconfig /all

Network Mode →
Router (factory setting
mGuard delta)

Logged in as 'admin' from 10.0.1.159 on 'LocalFW'.

HIRSCHMANN

Network Interfaces

General | Ethernet | Serial Port | Hardware

Network Mode: Router

Network Mode: Router

External IP address: 10.0.1.100

Network Mode Status: Transparent-multi (up)

Active Defaultroute: 10.0.1.1

External Networks

Obtain external configuration via DHCP: No

External IPs (untrusted port)

IP	Netmask	Use VLAN	VLAN ID
<input type="text" value="10.0.0.152"/>	<input type="text" value="255.255.255.0"/>	<input type="text" value="No"/>	<input type="text" value="1"/>

Additional External Routes

Network	Gateway
<input type="checkbox"/> <input type="text" value="10.0.0.0/24"/>	<input type="text" value="10.0.1.2"/>
<input type="checkbox"/> <input type="text" value="192.168.100.0/24"/>	<input type="text" value="10.0.1.3"/>
<input type="checkbox"/> <input type="text" value="192.168.200.0/24"/>	<input type="text" value="10.0.1.4"/>
<input type="checkbox"/> <input type="text" value="192.165.100.0/24"/>	<input type="text" value="10.0.1.5"/>

IP of default gateway:

Internal Networks

Internal IPs (trusted port)

IP	Netmask	Use VLAN	VLAN ID
<input type="text" value="10.0.1.1"/>	<input type="text" value="255.255.255.0"/>	<input type="text" value="No"/>	<input type="text" value="1"/>

Additional Internal Routes

Network	Gateway
---------	---------

External Networks (Network Mode = Router)

These are the addresses under which the mGuard can be accessed by devices in the external networks (connected to the mGuard's Ethernet connector). If this unit is serving as a gateway to the Internet, the IP addresses will be assigned by the Internet Service Provider (ISP).

Obtain external configuration via DHCP: Yes / No

- ☞ If the mGuard obtains the configuration data via DHCP (Dynamic Host Configuration Protocol) from a DHCP server, enter **Yes**. In that case, all other entries made on this page will be ignored.
- ☞ If the mGuard does not obtain the configuration data via DHCP (Dynamic Host Configuration Protocol) from a DHCP server, enter **No** and make the following additional entries:

External IPs (untrusted port)

IP/Netmask

IP and netmask for the external interface (WAN).

Use VLAN

If this IP address is to be inside a VLAN, this option must be set to **Yes**.

VLAN ID

A VLAN ID between 1 and 4095.

- ☞ An explanation of the term “VLAN” can be found under “VLAN” on page 153.
- ☞ Inserting, moving and deleting rows is explained under “Working with tables” on page 44.
(The first address in the list can’t be removed.)

Additional External Routes

In addition to the Default Route (see below), you can define additional, external routes.

- ☞ Inserting, moving and deleting rows is explained under “Working with tables” on page 44.

IP of default Gateway


The IP address of a device in the local network (connected to the LAN port) or the IP address of a device in the external network (connected to the WAN port) can be specified here. If mGuard establishes the transition to the Internet, this IP address is specified by the Internet Service Provider (ISP). If mGuard is utilised within the LAN, the default gateway’s IP address will be specified by the network administrator. (See example sketch below).

- ☒ If the local network is not known to the external router, e.g. in the case of configuration by DHCP, enter the address of your local network under Firewall → NAT, in other words 0.0.0.0/0 (see “Network Address Translation/IP Masquerading” on page 90)

Internal Networks

See “Network Mode → Router, PPPoE or PPTP” on page 60.

Example for the configuration of external networks:

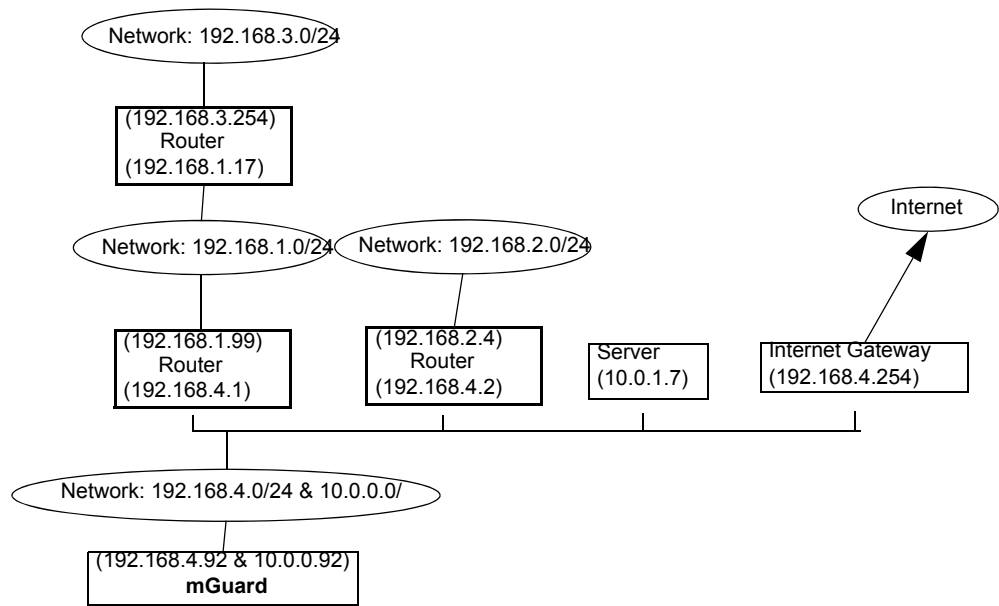

For the szenario above the mGuard would have the following configuration:

external IPs:

IP address	Networkmask
192.168.4.92	255.255.255.0
10.0.0.92	255.255.0.0

Additional external Routs:

Network	Gateway
192.168.2.0/24	192.168.4.2
192.168.1.0/24	192.168.4.1
192.168.3.0/24	192.168.4.1

IP of the Default Gateway:

192.168.4.254

Network Mode → PPPoE

Logged in as 'admin' from 10.0.1.159 on 'LocalFW' .

HIRSCHMANN

Network Interfaces

General | Ethernet | Serial Port | Hardware

Network Mode
 Network Mode:
 External IP address: 10.0.1.100
 Network Mode Status: Transparent-multi (up)
 Active Defaultroute: 10.0.1.1

PPPoE
 PPPoE Login:
 PPPoE Password:

Internal Networks
 Internal IPs (trusted port):

IP	Netmask	Use VLAN	VLAN ID
<input type="text" value="10.0.1.1"/>	<input type="text" value="255.255.255.0"/>	<input type="text" value="No"/>	<input type="text" value="1"/>

 Additional Internal Routes:

Network	Gateway
<input type="text"/>	<input type="text"/>

Apply

PPPoE (Network Mode = PPPoE)

The Internet Service Provider (ISP) applies the user with a user name (Login) and a password for the access to the internet. When establishing a connection to the internet these will be requested.

PPPoE Login

In this field, enter the user name (Login), which is expected by your Internet Service Provider (ISP) when you setup a connection to the Internet.

PPPoE Password

In this field, enter the password, which is expected by your Internet Service Provider when you setup a connection to the Internet.

Internal Networks

See “Network Mode → Router, PPPoE or PPTP” on page 60.

Network Mode → PPTP

Logged in as 'admin' from 10.0.1.159 on 'LocalFW' .

HIRSCHMANN

Network Interfaces

General | Ethernet | Serial Port | Hardware

Network Mode
 Network Mode:
 External IP address: 10.0.1.100
 Network Mode Status: Transparent-multi (up)
 Active Defaultroute: 10.0.1.1

PPTP
 PPTP Login:
 PPTP Password:

Local IP Mode
 Local IP Mode:
 Local IP:
 Modem IP:

Internal Networks
 Internal IPs (trusted port):

IP	Netmask	Use VLAN	VLAN ID
<input type="text" value="192.168.1.1"/>	<input type="text" value="255.255.255.0"/>	<input type="text" value="No"/>	<input type="text" value="1"/>

 Additional Internal Routes:

Network	Gateway
<input type="text"/>	<input type="text"/>

Apply

PPTP (Network Mode = PPTP)

PPTP Login

In this field, enter the user name (Login), which is expected by your Internet Service Provider when you setup a connection to the Internet.

PPTP Password

In this field, enter the password, which is expected by your Internet Service Provider when you setup a connection to the Internet.

Local IP Mode

Via DHCP

If the address data for the access to the PPTP server is supplied by the Internet Service Provider via DHCP, select **Via DHCP**.

In this case, you need not make an entry in the **Local IP** field.

Static (from field below)

If the address required to access the PPTP server is not supplied by the Internet Service Provider via DHCP, you must enter the IP address of the remote PPTP server and possibly that of the mGuard in the following two fields.

Local IP

The IP address under which the mGuard can be accessed by the PPTP server.

Modem IP

This is the address of the Internet Service Provider's PPTP server.

Internal Networks

See "Network Mode → Router, PPPoE or PPTP" on page 60.

Network Mode → Router, PPPoE or PPTP

Internal Networks (Network Mode is not Transparent)

Internal IPs

The Internal IP is the IP address, under which the mGuard can be accessed from the locally connected LAN.

In **Router / PPPoE / PPTP** mode, the default settings are:

IP address:	192.168.1.1
Local Netmask:	255.255.255.0

You can also specify other addresses, under which the mGuard can be accessed by devices on the locally connected network. This can be useful, for example, if the locally connected network is divided into subnetworks. In this case, multiple units on different subnetworks can access the mGuard under different addresses.

IP

IP-Adresse, under which the mGuard shall be accessible on the internal interface (LAN).

Netmask

A netmask for the internal interface (LAN).

Use VLAN

If this IP address is to be inside a VLAN, this option must be set to **Yes**. The mGuard supports in MCT and Router mode.

VLAN ID

A VLAN ID between 1 and 4095.

- ☞ An explanation of the term “VLAN” can be found under “VLAN” on page 153.
- ☞ The first entry in the list cannot be deleted.

Additional internal routes

If the locally connected network includes subnetworks, you can define additional routes.

Network

The network in CIDR notation – see “CIDR (Classless InterDomain Routing)” on page 140.

Gateway

The gateway used to reach this network.

- ☞ Siehe auch “Network Sketch” on page 141.

Ethernet

Logged in as 'admin' from 10.0.1.159 on 'LocalFW' .

HIRSCHMANN

Network Interfaces

General | **Ethernet** | Serial Port | Hardware

ARP Timeout
ARP Timeout: 30

MTU Settings

MTU of the internal interface	1500
MTU of the internal interface for VLAN	1500
MTU of the external interface	1500
MTU of the external interface for VLAN	1500
MTU of the Management Interface	1500
MTU of the Management Interface for VLAN	1500

Apply

ARP Timeout

ARP Timeout

Lifetime of entries in the ARP table.

MTU Settings

MTU of the ... interface

The Maximum Transfer Unit (MTU) defines the maximal frame size when sending from this interface and is usually 1500 for ethernet interfaces.

☒ VLAN interfaces

VLAN frames contain 4 bytes more than frames without VLAN which may cause problems with certain network equipment. By reducing the MTU to 1496 such problems can be avoided.

**Serial Port (only
mGuard blade, delta
and EAGLE mGuard)**

The screenshot shows the 'Serial Port' configuration window in the Hirschmann Network Interfaces software. The window has tabs for 'General', 'Ethernet', 'Serial Port', and 'Hardware'. The 'Serial Port' tab is active. It contains sections for 'Serial Port/Modem', 'PPP dialin options', 'PPP Interface', and 'Trusted Port'. The 'Serial Port/Modem' section has fields for Baudrate (9600), Modem (PPP) (Off), and Hardware handshake RTS/CTS (Off). The 'PPP dialin options' section has fields for Local IP (192.168.2.1), Remote IP (192.168.2.2), PPP Login name (admin), and PPP Password (*****). The 'PPP Interface' and 'Trusted Port' sections each have a table with columns for Protocol, From IP, From Port, To IP, To Port, Action, and Comment. Both tables have a single entry for TCP with From IP 0.0.0.0/0, From Port any, To IP 0.0.0.0/0, To Port any, and Action Accept. Below the tables are checkboxes for 'Log entries for unknown connection attempts' (set to No). At the bottom, there is a note: 'In addition to the rules you configured above the PC dialed in via PPP has IP access to HTTPS, SSH and SNMP management. With the rules above you can configure additional access to the internal or external network. Please note: On some platforms the serial port is not accessible.'

Some mGuards, like the mGuard blade, delta or EAGLE, offer a serial V.24 interface with RJ45 socket which is accessible from the outside. The mGuard's configuration can also take place via this interface. The following possibilities are available:

- Connecting mGuard's serial interface to the serial interface of a PC. Establish the connection to the mGuard on a PC by using a terminal programme and carry out the configuration via SSH.
- Connect a modem, which is connected to the telephone (fixed-line or GSM) network, to the mGuard's serial interface. This enables a remote PC, also connected to the telephone network, by means of a modem to establish a PPP (Point-to-Point Protocol) dial-up connection to the mGuard. On a Windows PC, in order to be able to access mGuard's web configuration user interface using the PC's web browser via TCP/IP, you must set up a dial-up network connection to the mGuard.

Serial Port / Modem

Baudrate

The speed of the serial port.

MODEM (PPP)

When set to **Off**, the serial interface can be used with a terminal client. When set to **On**, the serial interface can be used with PPP.

Hardware handshake RTS/CTS

Use the RTS and CTS signals for the PPP connection.

PPP dialin options

Local IP

IP of the mGuard for the PPP connection.

Remote IP

IP of the remote peer for the PPP connection.

PPP Login name

Login to be send by the remote PPP peer.

PPP Password

Password to be send by the remote PPP peer.

Firewall Incoming (PPP-Interface)

Firewall rules for connection from the PPP to the internal ethernet interface (LAN).

You have the following options for the entries:

Protocol

All means: TCP, UDP, ICMP and other IP protocols.

IP address

0.0.0.0/0 means all addresses. To enter an address space, use the CIDR notation – see “CIDR (Classless InterDomain Routing)” on page 140.

Port

(This is only evaluated by the TCP and UDP protocols)

any means each and every port.

startport:endport (e.g. 110:120) defines a range of ports.

You can specify individual ports by giving either their port number or the corresponding service name: (e.g. 110 for pop3 or pop3 for 110).

Action

Accept means that the data packets are passed through.

Reject means that the data packets are rejected so that the sender is informed that the data packets have been rejected. (In *Transparent* mode, Reject has the same effect as *Drop*.)


Drop means that the data packets are not passed through. The data packets will be discarded so that the sender will not be informed as to what happened to them.

Comment

An informational comment for this rule.

Log

You can specify - for each individual firewall rule - whether the use of the rule

 should be logged by setting - *Log* to **Yes**

 or not by setting - *Log* to **No** (factory setting).

Log entries for unknown connection attempts

If this is set to Yes, all attempts to establish a connection, which were not covered by the rules defined above, will be logged.


Firewall Incoming (PPP-Interface)

Firewall rules for connection from the the internal ethernet interface (LAN) to PPP.

(All other settings conform to *Firewall Incoming (PPP-Interface)*.)

Hardware

Logged in as 'admin' from 10.0.1.159 on 'LocalFW' .

 **HIRSCHMANN**

Network Interfaces

General Ethernet Serial Port Hardware

MAU Configuration

Port	Media Type	Link State	Automatic Configuration	Manual Configuration	Current Mode	Port On
Untrusted Port	10/100 BASE-T/RJ45	down	Yes	100 Mbit/s FDX	-	Yes
Trusted Port	10/100 BASE-T/RJ45	up	Yes	100 Mbit/s FDX	100 Mbit/s FDX	Yes

Apply

Configuration and status display of the ethernet ports:

MAU Configuration

Port

Name of the interface the row refers to.

Media Type

Media type of the interface.

Link State

The state of the ethernet link which can be either **Up** or **Down**.

Automatic Configuration

When set to **Yes** the interface will be configured automatically. When set to **No**, the setting from the column **Manual Configuration** will be used.

- ☒ Both ports of the mGuard are configured to be connected to a computer. If you connect the ports to a hub, please note that if *Automatic Configuration* is disabled, then the Auto-MDIX function will also be deactivated, i.e. the port of the mGuard has to be connected either to the uplink port of the hub or a cross-link cable has to be used.

Manual Configuration

The configuration for the interface to be used when **Automatic Configuration** is set to **No**.

Current Mode


The current configuration of the interface.

Port on (only EAGLE and smart)

Enables/disables the port.

6.2.3 Basic Settings → Load/Save

Load/Save

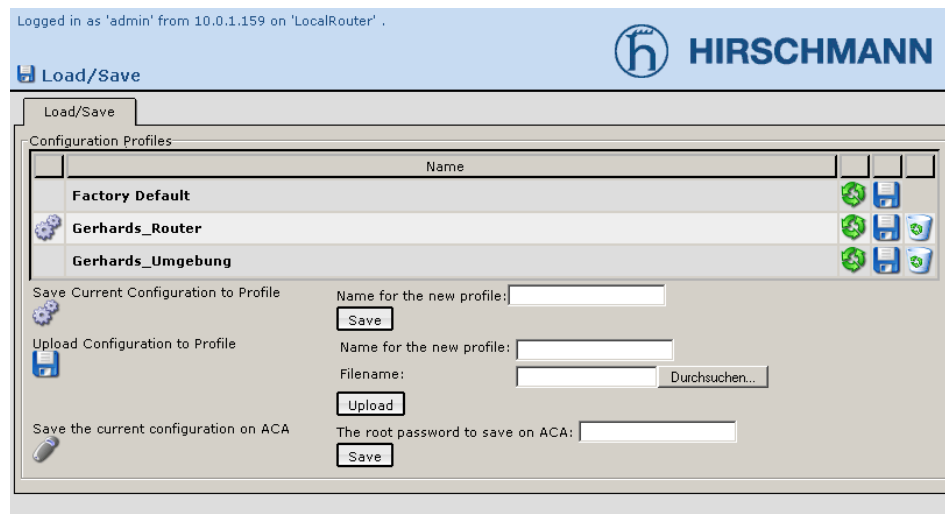

You can save the configuration settings as a configuration profile under any name in the mGuard. You can create and save multiple configuration profiles. You can then select and activate the configuration profile appropriate at the time, if you use the mGuard in different operating environments.

Furthermore, you can also save configuration profiles as files on the configuration system. Naturally, these configuration files can then be read back into the mGuard and activated.

Furthermore, you can restore the mGuard to the factory settings at any time.

Also you can save configuration profiles on an external AutoConfiguration Adapter (ACA) which you can connect to the V.24 port - see “Profiles on the ACA (EAGLE mGuard only)” on page 66.

⊗ Passwords and user names are not saved in the configuration profiles.

Configuration profiles

The top of the Configuration profile page has a list of configuration profiles that are stored in mGuard, for example, the Factory settings configuration profile. If any configuration profiles have been saved by the user (see below), they will be listed here.

Active configuration profile: The configuration profile that is currently in effect is shown with the *Aktive* symbol to the entry.



You can do the following with configuration profiles that are stored in mGuard:

- Activate them
- Save them to a file on the connected configuration computer
- Delete them
- Display them.

Displaying the configuration profile:

Click the name of the configuration profile in the list.

Applying the factory setting or a configuration profile setting that has been stored by the user

Click the **Restore** button located to the right of the name of the relevant configuration profile.



Result:

The corresponding configuration profile is activated.

-
- ☒ If the restoration involves a switch between the Transparent mode and another network mode, then mGuard is re-started.

Saving the configuration profile as a file to the configuration computer

1. Click the Download button to the right of the name of the respective configuration profile.
2. Specify the file name and folder in which the configuration profile is to be saved as a file in the displayed dialogue box. (You can give the file any name.)



Deleting a configuration profile:

Click the **Delete** button to the right of the name of the respective configuration profile.



- ☒ The **Factory settings** profile can't be deleted.

Saving the current configuration as a configuration profile in mGuard

1. Enter the desired profile name in the name field behind "Save current configuration as profile."
2. Click the Save button.

Result:

The configuration profile is saved in mGuard, and the name of the profile is displayed in the list of profiles already saved in mGuard.

Uploading a configuration profile that has been saved to the configuration computer

Prerequisite: You have saved a configuration profile to the configuration computer as a file according to the procedure described above.


1. Enter the desired *new profile name* in the name field behind "Upload a configuration as profile".
2. Click the **Browse...** button and select the respective file in the displayed dialogue box and open it..
3. Click the **Upload** button

Result:

The configuration profile is loaded into mGuard, and the name assigned in Step 1 will be displayed in the list of the profiles already stored in mGuard.

Profiles on the ACA (EAGLE mGuard only)

Configuration profiles also can be stored on an external *autoconfiguration adapter* (ACA) which is to be connected to the EAGLE mGuard's V.24 (ACA11) or USB (ACA21) port. If both ACA's are connected, the EAGLE mGuard prefers the ACA 21-USB.

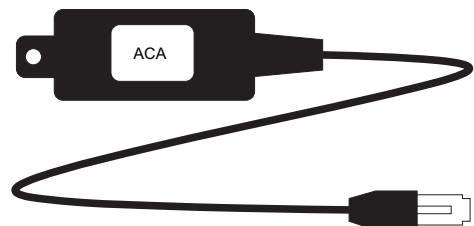

Store a profile on the ACA

- When the password of the EAGLE mGuard, on which you will later import the profile, has a root password unequal "root" you must enter that password under **The root password to save on ACA**.
- Press the button **Save Current Configuration to ACA** to write the current configuration to the ACA.

The LED STATUS and also the V.24 LED will blink until the store procedure is finished. The EAGLE mGuard saves the configuration into the file EAGLEmGuard.cfg on the ACA.

Restore profile from the ACA

Plug the ACA in mGuard's V.24/USB socket. Start mGuard while the ACA is plugged in. The mGuard's password has to be either 'root' or correspond to the password designated when saving the profile.

The STATUS LED and also the V.24 LED will flash until the loading process has ended.

Result:

The configuration profile with the name EAGLEmGuard.cfg is loaded from the ACA into the EAGLEmGuard and launched. It doesn't appear in the list of configuration profiles stored in EAGLE mGuard.

☒ The configuration on the ACA also includes the root, admin and user passwords, which will also be used when restoring a configuration from the ACA.

6.2.4 Basic Settings → Central Management

Configuration Pull

The screenshot shows the 'Configuration Pull' settings in the Hirschmann Central Management interface. At the top, it says 'Logged in as 'admin' from 10.0.1.159 on 'EAGLE'.' The Hirschmann logo is in the top right. The 'Configuration Pull' tab is selected. The settings include: 'Pull Schedule' set to 'Never'; 'Server' set to 'config.example.com'; 'Directory' is empty; 'Filename' is empty with a note '(When empty, '.atv' will be used.)'; 'Login' set to 'anonymous'; 'Password' is masked with '*****'; 'Server Certificate' shows 'No certificate installed' with a 'Durchsuchen...' button; 'Download Test' also shows 'No certificate installed' with an 'Import' button and a 'Test Download' button. An 'Apply' button is at the bottom right.

The mGuard can retrieve new configuration profiles from a HTTPS server in configurable time intervals. When a new configuration differs from the current configuration, it will be activated automatically.

Configuration Pull

Pull Schedule

Intervall, at which new configurations will be searched on the server

Server

IP or Hostname of the server, which provides the configuration profiles.

Directory

The directory on the server in which the configuration is located.

Filename

The name of the file in the directory defined above. In case no filename is defined here, the name of the configuration file the mGuard's serial number with the suffix ".atv" is used.

Login

The login on the HTTPS server.

Password

The Password on the HTTPS server.

Server Certificate

The certificate, which authenticates the HTTPS server from which the configuration is fetched. It is used to prevent unauthorized configurations from being installed on the mGuard.

- ☞ In case the configuration profiles do contain the machine certificate or PSKs for VPN connections the password should consist of at least 30 random upper and lower case letters and numbers, in order to prevent unallowed access to the keys.
The HTTPS server should further only grant access to a single configuration profile per login and password. Otherwise users of other or even compromised mGuards may gain access to other configurations.
- ☞ The IP address or the hostname specified under *Server* must be the same as the certificates Common Name (CN) entry.
- ☞ Self signed certificates should not use the "key-usage" extension.

☞ In case the server certificate is self signed, that server certificate must be imported here. In case the certificate was signed by a certification authority (CA), the CA's certificate must be imported here.

To install the certificate perform the following steps:

1. Click on **Browse...** so select the certificate file.
2. Click on **Import**.

Download Test

By clicking on **Test Download** you can test – without actually saving the modified parameters or activating the profile – if the parameters are correct. The result of the test will be displayed in the right column.

☒ You should make sure that the profile on the server doesn't contain unwanted variables beginning with "GAI_PULL_" which overwrite the pull configuration made here.

6.2.5 Basic Settings → Licensing

Overview

Logged in as 'admin' from 10.0.1.159 on 'EAGLE'.

Licensing

Overview | Install

(EAGLE Flash ID 002800033f8013c6-053b)

AntiVirus License

AntiVirus license installed: no

Expiry date: -

Feature License

License with priority 0

licence_date	1970-01-01T00:00:00
licence_id	0
flash_id	002800033f8013c6
licence_type	EAGLE (builtin)
vpn_channels	-1
l2tp_server	1
fw_redundancy	1

AntiVirus License

Anti-Virus license installed

Here you can examine the validity of the installed AVP license.

Expiry date

Shows the expiry date of your anti-virus license.

Feature License

Shows which functions are included with the mGuard license you have purchased, e.g. the number of possible VPN tunnels.

Install

Logged in as 'admin' from 10.0.1.159 on 'EAGLE' .

HIRSCHMANN

Licensing

Overview | **Install**

Automatic License Installation

Voucher Serial Number/Voucher Key

Reload Licenses

Manual License Installation

Order License

Filename

Offline License Request

Please follow the instructions in the generated text file to send an email with the licence request.

Voucher Serial Number/Voucher Key

You can subsequently expand the range of the mGuard license you have purchased with further functions. In this window, you will find a license or voucher key and a license or voucher serial number. With these, you can

1. request the necessary feature license file, before
2. installing the license file which you will then receive.

Automatic license installation

Voucher Serial Number/Voucher Key

Enter here the serial number that is printed on the voucher, as well as the accompanying license key and then click

Online License Request.

Result:

mGuard now establishes a connection via the Internet and installs the respective license on the mGuard if the voucher is valid.

Restoring licenses

Use this function if the license installed in mGuard has disappeared for some reason, such as flashing the firmware. To do so, click the **Online license restoration** button. The license(s) that had been issued for this mGuard previously will be retrieved from the server and installed.

Manual license installation

After clicking the **License Request Form** button, an online form will be provided which can be used to order the desired license. On the request form, enter the following information:

Voucher Serial Number: the serial number that is printed on your voucher

Voucher Key: the license key on your voucher

Flash Id: is automatically filled in

Email Address: the email address to which the license file will be sent

After you have completed the form, the license file will be sent to the email address indicated. Under *Filename* you can apply the license file.

Install License

Once the license has been purchased, the license file will be sent to you as an email attachment. In order to apply the license, first save the license file as a separate file on your computer and continue as follows:

- Click the **Browse** button, select the file and open it so that the path or the file name is displayed in the *File Name* field.
- Then click the **Install License File** button.

6.2.6 Basic Settings → Update

Overview

Logged in as 'admin' from 10.0.1.159 on 'EAGLE'.

HIRSCHMANN

Update

Overview | Update | AntiVirus Pattern

System Information

Version: 04.1.00-pre10.eagle
Base: 04.1.00-pre10.eagle
Updates: [none]

AntiVirus Information

AntiVirus Engine Status: up
Last AntiVirus Update: main(40):17 Aug 2006 06-57 +0200
daily(1727):25 Aug 2006 06-57 +0200
771 seconds have passed since the last run of the update mechanism.
The AntiVirus database is up to date.
AntiVirus Update Status: ok

Package Versions

Package	Number	Version	Flavour
bootloader	0	1.3.2	default
bridge-utils	0	0.9.5	default
busybox	0	1.1.6	default
bzip2	0	0.0.2	default
clamav	0	0.89.33	default
djbdns	0	1.5.1	default
ebtables	0	0.3.0	default

You can examine the successful clearing of the virus filter feature.

For the information about the expiration date of your anti-virus license please see “Basic Settings → Licensing” on page 69

System Information

Version

The current software version of the mGuard

Base

The software version that was originally used to flash this mGuard.

Updates

List of updates that have been installed on the base.

AntiVirus Information

Anti-Virus Engine Status

Displays the state of the scan-engine. If you have activated the anti-virus protection for at least one protocol, the status will be displayed as “up”.

Last Anti-Virus Update

Displays the current release date of the anti-virus database as well as the time which is passed through since the last update in seconds and if the AntiVirus database has the current state.

The database is made up of the files main.cvd and daily.cvd, whereas the latter is updated frequently.

Anti-Virus Update Status


Shows if the anti-virus update is activated or currently downloading

Package Versions

Lists the individual software modules of the mGuard. Could be used for support purposes, as applicable.

Update

Logged in as 'admin' from 10.0.1.159 on 'EAGLE' .

Update  **HIRSCHMANN**

Overview | **Update** | AntiVirus Pattern

Local Update

Filename The filename of the package set has the extension '.tar.gz'.
The format of the filename you have to enter is: 'update-a.b.c-d.e.f.tar.gz'.

Online Update



Package set name

Automatic Update

Automatically install the latest patch release

Automatically install the latest feature release

Update Servers

	Protocol	Server	Login	Password
		<input type="text" value="http://"/>	<input type="text" value="eagle.update.hirschma"/>	<input type="text"/>

There are two possibilities for conducting a software update:

- You have the updated package set file on your computer (the file name ends with ".tar.gz") and you conduct a local update.

OR

- You can download the package set file via the Internet from the update server and then install the packet.

☒ Depending on the size of the update, this may take several minutes.

☒ If a reboot is necessary after a system update, a message to this effect will be displayed.

☒ Do not interrupt the power supply during the update procedure! Otherwise the device could be damaged and may be left inoperable, and will require your device to be sent to the manufacturer.

Local Update

Filename

To install the packages proceed as follows:

1. Click on **Browse...**, select and open the file so that its path or file name is shown in the field Filename.
The format of the filename is: update-a.b.c-d.e.f.tar.gz.
2. Click on **Install Packages** to transfer them to the device.

Online Update

To perform an online update proceed as follows:

1. Be sure that at least one valid entry exists under **Update Server**. You should have received the necessary details from your licensor.
2. Enter the update's name in the entry field, e.g. "update-4.0.x-4.1.0".
3. Click on **Install Package Set** to transfer them to the device.

Depending on the size of the update, this may take several minutes.

If a reboot is necessary after a system update, a message to this effect will be displayed.

Automatic Update

This is a variation of the online update in which the mGuard independently determines the required package set name.

Automatically install the latest patch release

Patch releases regulate errors in previous versions and have a version number which only changes in the third digit position:

e.g. 4.0.1 is a patch release for version 4.0.0.

Automatically install the latest feature release

Feature releases supplement the mGuard with new attributes or contain modifications to the behavior of the mGuard. Their version number only change in the first and second digit position.

e.g. 4.1.0. is a feature release for the versions 3.1.0. and 4.0.1.

Update Servers

Here you can specify the servers from which the mGuard shall retrieve its updates.

☒ The list of the servers is processed top-down until an available server is found.

Protocol

The update files can be downloaded using either HTTP or HTTPS.

Server

In this field, enter the FQDN or IP address of the server from which the update files shall be downloaded, eg. "123.456.789.21" or "update.example.com".

Login

In this field, enter the user name to be used for connecting to the server.

Password

In this field, enter the password to be used when logging in.

AntiVirus Pattern

The screenshot shows the 'Update' configuration window for Hirschmann mGuard. The 'AntiVirus Pattern' tab is selected. The 'Schedule' section has a dropdown menu set to 'Never'. The 'Update Servers for AVP' section has a text input field for 'Update Location (Hostname)'. The 'Proxy Settings' section has four input fields: 'HTTP Proxy Server', 'Port', 'Login', and 'Password'. An 'Apply' button is at the bottom right. The top status bar indicates the user is logged in as 'admin' from 10.0.1.159 on 'EAGLE'.

The virus signature files can be updated from a selected update server at intervals defined by the user. The update is performed without interrupting the operation of the anti-virus filter. The mGuard is delivered without any virus signatures installed. Therefore, after the anti-virus protection has been activated with the corresponding license, you should also set the update schedule. The course of the updates can be examined in the Event Logs by selection of anti-virus Update.

Schedule

Update Schedule

This parameter is used to set how often the signature files are updated. The size of the signature file is currently about 5 MByte. The system will only download the updated files from the update server.

Update Servers for AVP

You can select the server from which the updated signature files should be downloaded. A default server has already been entered. If necessary, you can enter your own servers.

☒ The list of servers will be processed from the top down until an available server is found.

-
- ☞ Inserting, moving and deleting rows is explained under “Working with tables” on page 44.

Proxy Settings

When the mGuard is located behind a firewall which restricts HTTP or FTP access to use a proxy server, the following rows can be used to specify the required proxy settings.

- ☞ For the proxy server to be used the fields **HTTP/FTP Proxy Server** and **Port** must be set.
- ☞ To authenticate with the proxy server the fields **Login** and **Password** must be set.

HTTP/FTP Proxy Server

The proxy servers IP or hostname.

Port

The port belonging to the IP or hostname of the proxy server.


Login

The login in case the proxy server requires authentication.

Password

The password belonging to the login.

6.2.7 Basic Settings → Restart

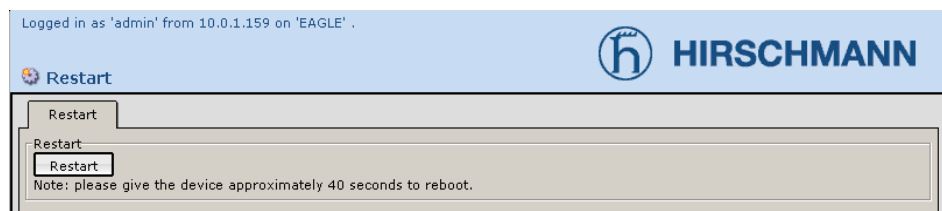

A new start (= reboot) is necessary in the event that a fault occurs. It may also be necessary after a software update.

(You can also reboot the device by switching it off and back on again.)

6.3 Menu Security

6.3.1 Security → SNMP

Query

Logged in as 'admin' from 10.0.1.159 on 'EAGLE'.

HIRSCHMANN

SNMP

☒ Query ☐ Trap ☐ LLDP

Settings

Enable SNMPv3 access

Enable SNMPv1/v2 access

Port for incoming SNMP connections (external interface only)

SNMPv1/v2 Community

Read-Write Community

Read-Only Community

Allowed Networks

No	From IP	Interface	Action	Comment	Log

Log ID: fw-snmp-access-NR-00000000-0000-0000-0000-000000000000

These rules allow to enable SNMP access.
Important: Make sure to set secure passwords for SNMPv3 before enabling remote access.
Note: In Transparent mode incoming traffic on the given port is no longer forwarded to the client.
Note: In router mode with NAT or portforwarding the port set here has priority over portforwarding.
Note: Enabling SNMP access automatically accepts incoming ICMP packets.
Note: The SNMP access from the internal side is allowed by default and can be restricted by firewall rules.

Apply

SNMP (Simple Network Management Protocol) is mainly used in more complex networks to monitor the status and operation of devices.

SNMP is available in several releases: SNMPv1/SNMPv2 and SNMPv3.

The older versions SNMPv1/SNMPv2 do not use encryption and are not considered to be secure. We therefore recommend that you do not use SNMPv1/SNMPv2.

As far as security is concerned, SNMPv3 is considerably better, but not all management consoles support it.

The Hirschmann Network Management HiVision communicates via SNMPv1 with the devices.

The Network Management System Industrial HiVision can communicate via SNMPv1/SNMPv2 and SNMPv3 with the devices. Recommendable is using SNMPv3.

- ☒ It can take more than one second to process SNMP- "get" or "walk" requests. However the factory settings for the time-out of many Network Management Applications is set to one second. In case you experience time-out problems, please set the time-out of your Management Application to values between 3 and 5 seconds.

Settings

Enable SNMPv3 access: Yes / No

If you wish to allow monitoring of the mGuard via SNMPv3, set this switch to **Yes**.

The access via SNMPv3 requires an authentication with a login and a password. The factory settings for these entries are:

Login: admin

Password: private (EAGLE mGuard)

MD5 is supported for the authentication; DES is supported for encryption.

The login parameters for SNMPv3 can be changed only by using SNMPv3.

Example for changing the SNMPv3 password via Industrial HiVision.

1. Click on the mGuard and in the menu bar of Industrial HiVision select "Tools:SNMP Browser".
2. In the menu bar of the SNMP Browser select "Edit:SNMP Configuration".

-
3. In the "Protocol Version" frame of the "SNMP Configuration" dialog click on "V3 (USM)".
 4. In the filecard "V3 (USM)" of the "SNMP Configuration" dialog enter the username (state of delivery: "admin").
 5. In the "Authentication" frame of the filecard "V3 (USM)" of the "SNMP Configuration" dialog click on "MD5" and enter the password (state of delivery: "private").
 6. In the "SNMP Configuration" dialog click on **Close** to close the window.
 7. In the menu bar of the SNMP Browser select "Edit:SNMPv3 Usermanagement".
Click on **Reload** to see existing entries.
 8. Click on **Change Password**.
 9. In the line "Old authentication Password" enter the old SNMPv3 password (state of delivery: "private").
 10. In the line "New Authentication Password" enter the new SNMPv3 password.
 11. Click on **Change** to apply the changes and close the window.

Enable SNMPv1/v2 access: Yes / No

If you wish to allow monitoring of the mGuard via SNMPv1/v2, set this switch to **Yes**.

Port for incoming SNMP connections (external interface only)

Standard: 161

SNMPv1/v2 Community

Read-Write Community

Read-Only Community

Enter the required login data in these two fields.

Allowed Networks

Lists the firewall rules that have been set. These apply for the incoming data packets of an SNMP remote access.

From IP

Enter the address(es) of the system(s) that is/are allowed access for the purpose of SNMP monitoring in this field.

You have the following options for the entries:

- An IP address.
- To enter an address space, use the CIDR notation – see “CIDR (Classless InterDomain Routing)” on page 140.
- 0.0.0.0/0 means all addresses.

Interface

Indicates whether the rule applies to the external interface (= ungesicherter port) or the internal interface (= gesicherter port).

Action

Possible settings:

- Accept
- Reject
- Drop

Accept means that the data packets should be passed through.

Reject means that the data packets should be rejected so that the sender is informed that the data packets have been rejected. (In *Transparent* mode, *Reject* has the same effect as *Drop*.)

Drop means that the data packets should not be passed through. The data packets will be discarded so that the sender will not be informed as to what happened to them.

☞ In Transparent mode, *Reject* is not supported.

Comment

An informational comment for this rule.


Log

You can specify - for each individual firewall rule - whether the use of the rule

- should be logged by setting - *Log* to **Yes**
- or should not be logged by setting - *Log* to **No** (factory setting).

Trap

Logged in as 'admin' from 10.0.1.159 on 'EAGLE' .

 **HIRSCHMANN**

SNMP

☐ Query ☒ Trap ☐ LLDP

Basic traps

SNMP authentication

Link Up/Down

Coldstart

Admin access (SSH, HTTPS), new DHCP client

Hardware related traps

Chassis (power, signal relay)

Agent (ACA, temperature)

Anti-Virus traps

Successful update of AV pattern

AV update or scanning problem

Found virus or skipped scanning


Redundancy traps

Status change

Userfirewall traps

Userfirewall traps

Trap destinations

	Destination IP	Destination Name	Destination Community
---	----------------	------------------	-----------------------

Platform-specific configurations are only effective on the platform in question.
Similarly AV traps are only sent when a licensed anti-virus system is active.
SNMP-traps only are sent if SNMP access is enabled.

On certain events the mGuard can send SNMP traps. These traps are compatible with SNMPv1. For each settings the traps being send are explained in the MIB file on the product CD-ROM or under www.hirschmann-ac.com.

SNMP Trap Destinations

Traps can be send to one or more targets.

Destination IP

IP, to which the trap shall be send.

Destination Name


An optional descriptive name for the destination, which has no influence on the generated traps.

Destination Community

Name of the traps SNMP community.

LLDP

Logged in as 'admin' from 10.0.1.159 on 'EAGLE' .

 **HIRSCHMANN**

SNMP

☐ Query ☐ Trap ☒ LLDP

LLDP Mode Enabled

Secure Area Port

Chassis ID	IP address	Port description	System name
MAC: 00 80 63 2F FB B8	10.0.1.2	Unit: 1 Slot: 2 Port: 1 - 10/100 Mbit TX	MICE

Unsecure Area Port

Chassis ID	IP address	Port description	System name
------------	------------	------------------	-------------

LLDP (Link Layer Discovery Protocol, IEEE 802.1AB) supports the automatic detection of the (ethernet) network topology.

LLDP capable devices periodically send ethernet multicasts (layer 2) with network information about themselves which will be collected by other LLDP capable devices and made available via SNMP.

☒ The Hirschmann Network Management System Industrial HiVision uses LLDP for topology discovery. Enable LLDP on the EAGLE mGuard if you use Industrial HiVision.

LLDP

Mode

Enabling and disabling of the LLDP service.

Internal/LAN interface and External/WAN interface

Chassis ID

An entity which identifies a remote device uniquely; typically one of its MAC addresses.

IP address

The IP address to manage the remote device via SNMP.

Port description

A textual description of the remote device's interface.

System name

Hostname of the remote device.

6.3.2 Security → Web Access

General

Logged in as 'admin' from 10.0.1.159 on 'EAGLE' .

HIRSCHMANN

Web Access

General ☒ Access

General

Language English

Session Timeout (seconds) 1800

Apply

General

Language

If **(Automatic)** is selected from the list of languages, the device will use the language setting of the system's browser.

Session Timeout (seconds)

Specifies the time interval of inactivity (in seconds) after which the user will be logged out automatically. Possible values are between 15 and 86400 (= 24 hours) seconds.

Scope of the 'Apply' button

If set to **per Page**, configuration changes need to be applied per page for being stored. Otherwise (**per Session**) the configuration may be changed on several pages before being applied

Access

Logged in as 'admin' from 10.0.1.159 on 'EAGLE' .

HIRSCHMANN

Web Access

General ☒ Access

HTTPS Web Access

Enable HTTPS remote access Yes

Remote HTTPS TCP Port 443

Allowed Networks

No	From IP	Interface	Action	Comment	Log
1	10.0.1.160	Unsecure	Accept	K. Reister	No

Log ID: fw-https-access-W-3d5e8a02-5b84-1c9d-a088-0080631b2f0e

These rules allow to enable HTTPS remote access.
Important: Make sure to set secure passwords before enabling remote access.
Note: In Transparent mode incoming traffic on the given port is no longer forwarded to the client.
Note: In router mode with NAT or portforwarding the port set here has priority over portforwarding.
Note: The HTTPS access from the internal side is enabled by default and can be restricted by firewall rules.

Apply

HTTPS Web Access

When HTTPS Remote Access is enabled, the mGuard can be configured – using its Web-based Administrator interface – from a remote system. In other words, a browser running on the remote system will be used to configure the local mGuard.

This option is disabled by default.

IMPORTANT: If you enable remote access, make certain that you have secure root and administrator passwords.

To enable HTTPS remote access, proceed as follows:

Enable HTTPS remote access: Yes / No

If you want to enable a HTTPS connection, set this switch to **Yes**.

☞ In this case, make certain that the firewall rules on this page permit the mGuard be accessed from a remote site.

Port for incoming HTTPS connections (remote administration only)

Standard: 443

You can select a different port.

If a different port has been selected, you must append the port number (set here) to the IP address of the device in the address provided by the remote site, which will have remote access.

Example:

If this mGuard can be found in the Internet at the address 123.456.789.21 and the Port Number 443 has been set as the port for remote access, you need not enter this port number after the address in the Web browser's address field on the remote system.

If a different Port Number is used, this must be appended to the IP address, e. g as follows.: `https://123.456.789.21:442/`

Allowed Networks

Lists the firewall rules that have been set. These apply for the incoming data packets of an HTTPS remote access.

From IP

Enter the address(es) of the system(s) that is/are allowed remote access in this field.

You have the following options for the entries:

- IP address: **0.0.0.0/0** means all addresses. To enter an address space, use the CIDR notation – see “CIDR (Classless InterDomain Routing)” on page 140.

Interface

Trusted OR Untrusted

Defines for which interface the rule applies, the trusted port or the untrusted port.

State on delivery: the untrusted port discards all, the trusted port accepts all.

Action


Possible settings:

- Accept
- Reject
- Drop

Accept means that the data packets should be passed through.

Reject means that the data packets should be rejected so that the sender is informed that the data packets have been rejected. (In *Transparent* mode, *Reject* has the same effect as *Drop* see below.)

Drop means that the data packets should not be passed through. The data packets will be discarded so that the sender will not be informed as to what happened to them.

 In *Transparent* mode, *Reject* is not supported.

Comment

An informational comment for this rule.

Log

You can specify – for each individual firewall rule – whether the use of the rule

- should be logged by setting - *Log* to **Yes**
- or should not be logged by setting - *Log* to **No** (factory setting).

6.3.3 Security → Local Authentication

The term Local Authentication refers to users who have the right, depending on their access permission level, to configure mGuard ('root' and 'administrator' access permission) or to use it ('user' access permission).

Passwords

Logged in as 'admin' from 10.0.1.159 on 'LocalFW' .

HIRSCHMANN

Local Authentication

Passwords

root
Root Password (Account: root)
Old Password
New Password
New Password (again):

admin
Administrator Password (Account: admin)
New Password
New Password (again):

user
Disable VPN until the user is authenticated via HTTP: No
User Password
New Password
New Password (again):

Apply

The mGuard supports 3 levels of user authorization. To login at a specific level of authorization, the user must enter the corresponding password for the level.

Authorization level

Root	<p>This level (password) grants full rights to all parameters of the mGuard.</p> <p>Note: This is the only authorization level that allows you to setup a SSH connection to the device and to then change all of the parameters so that nothing will work any more. If this happens, all you can do is “flash” the firmware to restore it to the factory settings (see “Flashing the firmware” on page 143).</p> <p>Default root password: root</p>
Administrator	<p>If you login at this level (password), you will be granted all the rights required for the configuration options that are accessible via the Web-based Administrator interface.</p> <p>Default user name: admin Default password: private (EAGLE mGuard)</p> <p>The user name admin cannot be changed.</p>
User	<p>If a user password has been defined and activated, the user must – after every restart of the mGuard – enter this password to enable a VPN connection when he or she first attempts to access any HTTP URL.</p> <p>If you wish to use this option, enter the desired user password once in each of the corresponding entry fields. (Note: As long as a required user login hasn't taken place, it might happen that some other services on the mGuard can't be started or can't be easily re-configured.)</p>

root

Root Password

Factory (default) setting: **root**

If you wish to change the root password, enter the current password in the *Old Password* field and then the desired new password in the two corresponding fields below.

admin

Administrator Password (Account: admin)

Factory (default) setting: **private** (fixed user name: admin)

user

Disable the VPN until the user is authenticated via HTTP:

Yes / No

The factory → default setting for this switch is No.

In the case of Yes, a VPN connection can only be used after the user establishes any HTTP (e.g., www.google.com) connection, because this is needed in order to log in (= enter the user password). Also, a user password needs to have been specified.

User Password

There is no factory setting for the user password. To set one, enter the desired password twice - once in each of the two fields.

6.3.4 Security → External Authentication

The Firewall users group members overlap with the local users members ('user' access permission level) or may even be identical. The only difference is as follows: Individuals that are registered (through allocation of user name / password) can have individually tailored firewall rules assigned to them.

Example:

To eliminate private surfing on the Internet, every outgoing connection is blocked (VPN is not affected) by means of outgoing filter rules via Network Security → Packet filters. Under Network Security → User firewall, certain user firewalls can be assigned different firewall rules definitions, for example, permitting any outgoing connection. This user firewall rule goes into effect as soon as any respective firewall user to whom this firewall rule applies has logged in, (see "Network Security → User Firewall" on page 95).

Remote Users

ged in as 'admin' from 10.0.1.159 on 'LocalRouter' .

HIRSCHMANN

External Authentication

Firewall Users | RADIUS Servers | Status

enable user firewall: No

enable group authentication: No

Username	Authentication Method	User Password
<input type="checkbox"/> gustav	RADIUS	

Apply

User

List of external users: their user names and authentication methods

Activate User Firewall: Yes / No

Under the menu point *User Firewall*, firewall rules can be defined and assigned to specific external users.

By clicking **Yes**, you specify that the firewall rules for the listed users are to be activated as soon as the corresponding user logs in.

Enable group authentication: Yes / No

This function simplifies the user administration for the user firewall, as individual firewall user do not have to be registered with the mGuard anymore.

When a firewall user is configured for RADIUS-Authentication and he authenticates at the mGuard, the RADIUS server will confirm the access by sending an "Access Accept" reply.

With group authentication enabled, the user can also authenticate at the mGuard, even when his name is not defined on the mGuard.

In this case the authentication happens as follows: The user authenticates with the unknown username/password combination and because of group authentication being enabled, the mGuard forwards the request to the RADIUS server. If the RADIUS server confirms the users authentication, it will reply with an "Access Accept" data packet which will also contain a "Filter-ID" attribute containing a group name. This group name will then be used by the mGuard to enable user templates containing the group name as a user firewall template user name.

User Name

Name of the user

Authentication method: Radius / Local

Local:

In the column *User Password*, the password must be entered that has been assigned to the user

Radius:

If a user logs in under his or her password, the mGuard transmits the password entered to the radius server for verification. If the verification is positive, the user will gain access.

Radius Server

The screenshot shows the 'External Authentication' window with the 'RADIUS Servers' tab selected. The window title is 'Logged in as 'admin' from 10.0.1.159 on 'LocalFW' .'. The Hirschmann logo is in the top right. Below the tabs, there are input fields for 'RADIUS timeout:' (set to 3) and 'RADIUS retries:' (set to 3). A table with three columns: 'Server', 'Port', and 'Secret' is shown. The 'Port' column has the value '1812'. An 'Apply' button is at the bottom right.

Server	Port	Secret
	1812	

Radius Server

Radius Timeout

Specifies (in seconds) how long the mGuard will wait for the answer from the radius server. Default: 3 (seconds)

Radius retries:

Specifies how often repeat requests will be made to the radius server after a radius timeout has occurred. Default: 3

Server

Name of the server or IP address

Port

The port number used by the radius server

Secret

Server password

Status

The screenshot shows the 'External Authentication' window with the 'Status' tab selected. The window title is 'Logged in as 'admin' from 10.0.1.159 on 'LocalFW' .'. The Hirschmann logo is in the top right. Below the tabs, there is a 'Status' section with the text 'User Firewall not enabled.' An 'Apply' button is at the bottom right.

If the user firewall is activated, its status will be displayed here.

6.4 Menu Network Security (not blade controller)

6.4.1 Network Security → Packet Filter

The mGuard has an integrated *Stateful Packet Inspection Firewall*. The connection data for each active connection is collected in a database (connection tracking). Therefore, it is only necessary to define rules for one direction – data from a connection's other direction – and only this will be automatically passed through. A side-effect is that (when reconfiguring) existing connections will not be dropped even if a corresponding new connection may not be setup.

Factory settings for the packet filter:

- All incoming connections will be rejected (except VPN).
- The data packets of all outgoing connections will be passed through.

☒ VPN connections are not subject to the firewall rules defined in this menu. You can define firewall rules for each individual VPN connection in the **IPsec VPN → Connections** menu.

☒ The anti-virus function (see “AntiVirus → HTTP” on page 111, “Web Security → FTP” on page 113, “AntiVirus → POP3” on page 116, “AntiVirus → SMTP” on page 119) has priority over the firewall rules defined here and can partially override them. This behaviour can be overridden in the **Network security → Packet filters, Extended settings menu** by setting the switch to **Connections scanned for viruses are subject to firewall rules** – see “Extended settings”, “Anti-virus scanner” on page 103.

☒ If multiple firewall rules are set, they will be searched in the order in which they are listed (from top to bottom) until a suitable rule is found. This rule will then be applied. If further down in the list there are other rules, which would also fit, they will be ignored.

Untrusted Port

Logged in as 'admin' from 10.0.1.159 on 'LocalFW'.

Packet Filter

Untrusted Port | Trusted Port | MAC Filtering | Advanced

Untrusted Port

Log ID: fw-incoming-NR-00000000-0000-0000-0000-000000000000

No	Protocol	From IP	From Port	To IP	To Port	Action	Comment
1	TCP	0.0.0.0/0	any	0.0.0.0/0	any	Accept	

These rules specify which traffic from the outside is allowed to pass to the inside.
Please note: Port settings are only meaningful for TCP and UDP!

Log entries for unknown connection attempts?

Untrusted Port

Lists the firewall rules that have been set. These rules apply for incoming data connections, i.e. ones which were initiated by an external system. If no rule has been set, all incoming connections (except VPN) will be dropped (= factory setting).

You have the following options for the entries:

Protocol

All means: TCP, UDP, ICMP and other IP protocols.

IP address

0.0.0.0/0 means all addresses. To enter an address space, use the CIDR notation – see “CIDR (Classless InterDomain Routing)” on page 140.

Port

(This is only evaluated by the TCP and UDP protocols)

any means each and every port.

startport:endport (e.g. 110:120) defines a range of ports.

You can specify individual ports by giving either their port number or the corresponding service name: (e.g. 110 for pop3 or pop3 for 110).

Action

Accept means that the data packets are passed through.

Reject means that the data packets are rejected so that the sender is informed that the data packets have been rejected. (In *Transparent* mode, Reject has the same effect as Drop (see below).)

Drop means that the data packets are not passed through. The data packets will be discarded so that the sender will not be informed as to what happened to them.


☒ In Transparent mode, **Reject** is not supported.

Comment

An informational comment for this rule.

Log

You can specify - for each individual firewall rule - whether the use of the rule


 should be logged by setting - *Log* to **Yes**

 or not by setting - *Log* to **No** (factory setting).

Log entries for unknown connection attempts

If this is set to Yes, all attempts to establish a connection, which were not covered by the rules defined above, will be logged.

Trusted Port

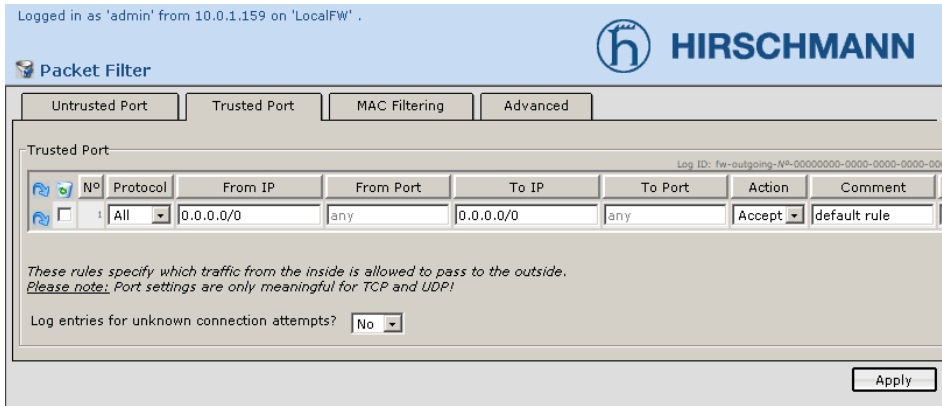

Trusted Port

Lists the firewall rules that have been set. These rules apply for outgoing connections; i.e. ones which were initiated internally to communicate with a remote site.

The default (factory) setting is a rule that allows all outgoing connections.

If no rule is set, all outgoing connections are forbidden (except VPN).

You have the following options for the entries:

Protocol

All means: TCP, UDP, ICMP and other IP protocols.

IP address

0.0.0.0/0 means all addresses. To enter an address space, use the CIDR notation – see “CIDR (Classless InterDomain Routing)” on page 140.

Port

(This is only evaluated by the TCP and UDP protocols)

any means each and every port.

startport:endport (e.g. 110:120) defines a range of ports.

You can specify individual ports by giving either their port number or the corresponding service name: (e.g. 110 for pop3 or pop3 for 110).

Action

Accept means that the data packets are passed through.

Reject means that the data packets are rejected so that the sender is informed that the data packets have been rejected. (In *Transparent* mode, **Reject** has the same effect as *Drop* (see below).)

Drop means that the data packets are not passed through. The data packets will be discarded so that the sender will not be informed as to what happened to them.

☒ In *Transparent* mode, **Reject** is not supported.

Comment

An informational comment for this rule.

Log

You can specify - for each individual firewall rule - whether the use of the rule

☞ should be logged by setting - *Log* to **Yes**


☞ or not by setting - *Log* to **No** (factory setting).

Log entries for unknown connection attempts

If this is set to **Yes**, all attempts to establish a connection, which were not covered by the rules defined above, will be logged.

MAC Filter


Logged in as 'admin' from 10.0.1.159 on 'LocalFW' .

 **HIRSCHMANN**

Packet Filter


Untrusted Port | Trusted Port | **MAC Filtering** | Advanced

Untrusted Port

	Source MAC	Destination MAC	Ethernet Protocol	Action	Comment
	<input type="text" value="xx:xx:xx:xx:xx:xx"/>	<input type="text" value="xx:xx:xx:xx:xx:xx"/>	<input type="text" value="%any"/>	Accept	

Ethernet Protocol may be %any, IPv4, ARP, Length, or a hexadecimal value.
Please note: These rules only apply to the Transparent mode.
Please note: Management access to 1.1.1.1 requires ARP resolution of the default gateway. Restricting ARP traffic to the default gateway may lead to management access problems.

Trusted Port

	Source MAC	Destination MAC	Ethernet Protocol	Action	Comment
	<input type="text" value="xx:xx:xx:xx:xx:xx"/>	<input type="text" value="xx:xx:xx:xx:xx:xx"/>	<input type="text" value="%any"/>	Accept	

Ethernet Protocol may be %any, IPv4, ARP, Length, or a hexadecimal value.
Please note: These rules only apply to the Transparent mode.
Please note: Management access to 1.1.1.1 requires ARP resolution of the default gateway. Restricting ARP traffic to the default gateway may lead to management access problems.

Beside the IP firewall (OSI Layer 3/4), which filters ICMP messages and TCP/UDP connections, the mGuard, when operating in Transparent mode, can additionally filter for MAC addresses and ethernet protocols (OSI Layer 2).

In contrast to the IP firewall, the MAC filter is stateless. This means an additional rule must be created for some rules in the opposite direction where necessary.

When no rules are defined, all ARP and IP frames are allowed.

- ☒ Please note the annotations on the screen when you define MAC filtering rules.
- ☒ Rules defined here supersede the IP firewall rules.

Source MAC

Definition of the source MAC address. **xx:xx:xx:xx:xx:xx** is a wildcard for all MAC addresses.

Destination MAC

Definition of the destination MAC address. **xx:xx:xx:xx:xx:xx** is a wildcard for all MAC addresses. The values **ff:ff:ff:ff:ff:ff** is the broadcast MAC address, to which, for example, all ARP requests are being sent.

Ethernet Protocol

%any is a wildcard for all ethernet protocols. Protocols can be specified by name or hexadecimal value, for example:

- IPv4 or 0800
- ARP or 0806

Action

Accept means that frames can pass.

Drop means to drop frames.

Comment

An informational comment for this rule.

☞ The MAC filter does not support logging.

Advanced

Logged in as 'admin' from 10.0.1.159 on 'LocalFW' .

Packet Filter

Untrusted Port | Trusted Port | MAC Filtering | **Advanced**

Advanced

Enable TCP/UDP/ICMP consistency checks

Router Modes (Router/PPTP/PPPoE)

ICMP from extern to the EAGLE

Please note: Enabling SNMP access automatically accepts incoming ICMP packets.

AntiVirus Scanning

Apply Packet Filter to AntiVirus Scanner

Please note: If enabled, just the outgoing filter rules will be applied. Applying the incoming firewall rules does not make sense, because the AntiVirus Scanner can not be connected from the outside.

Transparent Mode

Allow forwarding of GVRP frames

Allow forwarding of STP frames

Allow forwarding of DHCP frames

The settings affect the basic behavior of the firewall.

Advanced

Enable TCP/UDP/ICMP consistency checks

When set to **Yes** the mGuard performs various checks for wrong check sums, packet sizes, etc. and drops packets failing the check.

The factory default for this option is **Yes**.

Router Modes (Router/PPTP/PPPoE)

ICMP from extern to the mGuard

With this option you can control which ICMP messages from the external network are accepted by the mGuard. You have the following options:

Drop: All ICMP-messages sent to the mGuard from the external network will be dropped.

Allow ping requests: Only ping requests (ICMP message type 8) from the external network will be accepted.

Allow all ICMPs: All ICMP messages from the external network will be accepted.

Anti-virus scanner

Connections scanned for viruses are subject to firewall rules: Yes / No

In the *AntiVirus* → *HTTP*, *AntiVirus* → *FTP*, *AntiVirus* → *POP3*, *AntiVirus* → *SMTP* menus, a list of server connections can be created on the *Anti-virus protection* tab. Files that enter mGuard via these connections are scanned for viruses (in the case of SMTP, outgoing mGuard files) .

If firewall packet filters are set (Network security → Packet filters and/or Network security → User firewall) which relate to these connections and prevent them, these will only be taken into consideration if the **Connections scanned for viruses are subject to firewall rules** switch is set to Yes. In the case of No (= default setting), the rules that have been set for the anti-virus function have priority. Firewall packet filters that contradict them are overridden.

VPN connections are not affected because the anti-virus function is not available for VPN connections.

Transparent Mode

Allow forwarding of GVRP frames

The GARP VLAN Registration Protocol (GVRP) is used by GVRP capable switches to exchange configuration information.

By setting this switch to **Yes**, GVRP frames are allowed to traverse the mGuard in Transparent Modus.

Allow forwarding of STP frames

The Spanning-Tree Protocol (STP) (802.1d) is used by bridges and switches to detect and avoid loops in the network topology.

By setting this switch to **Yes**, STP frames are allowed to traverse the mGuard in Transparent Modus.


Allow forwarding of DHCP frames

Allow the client to retrieve an IP address using DHCP independently from the outgoing firewall rules.

This switch is set to **Yes** per default.

6.4.2 Network Security → NAT

Masquerading

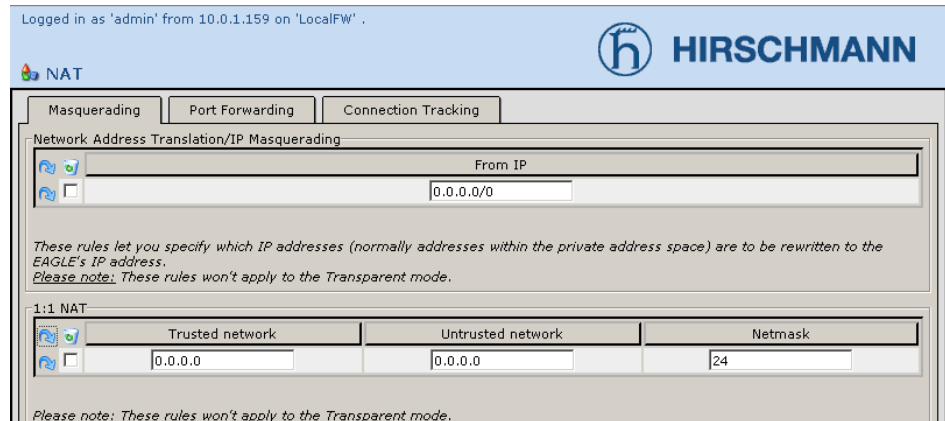

Network Address Translation/IP Masquerading

Lists the rules set for NAT (Network Address Translation).

In the case of outgoing data packets, the device can translate the sender's IP address (From IP) in the trusted network to the device's own external address. This technique is called NAT (Network Address Translation).

This method is used whenever the internal address cannot or should not be routed externally, e.g. since it is in a private address space such as 192.168.x.x or because you wish to keep the internal network structure hidden.

This method is also called *IP-Masquerading*.

☒ If the mGuard is in *PPPoE/PPTP* mode, NAT must be activated to enable access to the Internet. If NAT is not activated, the device will only allow VPN connections.

☒ When using more than one IP address for an interface, always the first IP address of the list will be used for IP-Masquerading.

☒ These rules don't apply to the Transparent mode.

Factory setting: NAT is not active.

You have the following options for the entries:


From IP

0.0.0.0/0 means all addresses, i.e. all internal IP addresses will be translated using NAT. To enter an address space, use the CIDR notation – see “CIDR (Classless InterDomain Routing)” on page 140.

1:1 NAT

Lists the rules set for 1:1 NAT (**N**etwork **A**ddress **T**ranslation), which mirrors addresses from the internal (trusted) network into the external network.

In the following example the mGuard is inside the net 192.168.0.0/24 with its internal interface and inside the net 10.0.0.0/24 with its external interface. By using 1:1 NAT, the computer with the IP 192.168.0.8 can be reached under the IP 10.0.0.8 in the external network.

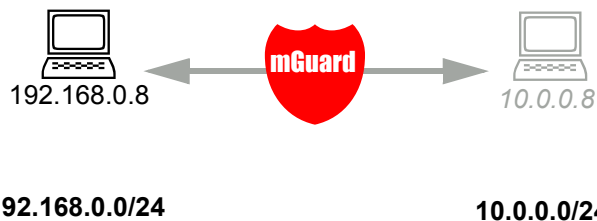

☒ These rules don't apply to the Transparent mode.

Factory setting: NAT is not active.

☞ Inserting, moving and deleting rows is explained under “Working with tables” on page 44.

You have the following options for the entries:

Trusted network

The network address on the local interface (LAN).


Untrusted network

The network address on the external interface (WAN).

Netmask

The network mask as a value between 1 and 32 for the local and external network address. (See also: “CIDR (Classless InterDomain Routing)” on page 140.)

Port Forwarding

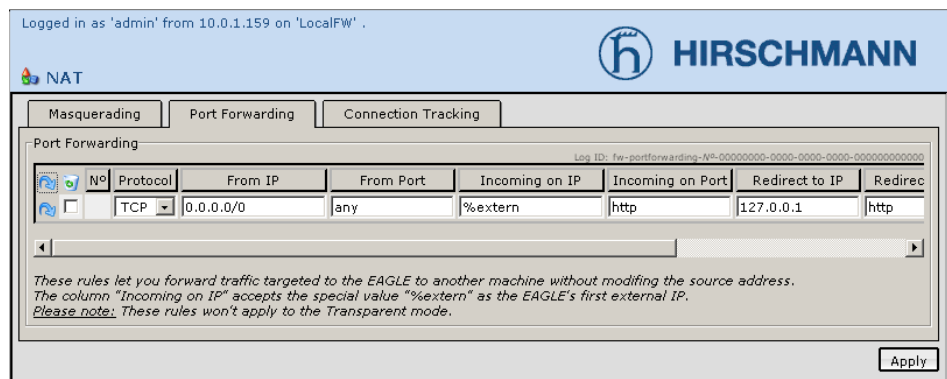

Lists the rules set for port forwarding.

Port forwarding performs the following: The headers of data packets incoming

from the external network, which are addressed to the mGuard's external IP address (or one of its external IP addresses) and to one of the ports on the mGuard, will be rewritten to forward them to a specific port on a specific system in the internal network. In other words, both the IP address and the port number (in the header of the incoming data packets) will be changed. This method is also called Destination NAT.

- ☒ The rules set here have priority over the settings made in the **Network Security Packet Filter → Untrusted Port** menu.
- ☒ These rules don't apply to the Transparent mode.

Protocol

Specify the protocol which the rule should govern.

From IP

The source IP for which forwarding shall be performed.

From Port

The source port for which forwarding shall be performed.

any specifies any port.

Ports may be either port numbers or services names, like *pop3* for port 110 or *http* for port 80.

Incoming on IP

Enter the external IP address (or one of the external IP addresses) of the mGuard here.

OR

If the destination IP address of the mGuard is assigned dynamically, this cannot be specified. In this case, use the following variable: **%extern**

- ☒ The variable „%extern“ always corresponds to the first IP address of the address list, when using more than one static IP address.

Incoming on Port

The original destination port of the incoming data packets must be given in this field.

Redirect to IP

In this field, enter the internal IP address to which the data packets should be forwarded. The original destination address will be overwritten with the address entered in this field.

Redirect to Port

In this field, enter the port to which the data packets should be forwarded. The original entry for the destination port will be overwritten with the port specified in this field.

Comment

An informational comment for this rule.

Log


You can specify - for each individual port forwarding rule - whether the use of the rule


☞ should be logged by setting - *Log* to **Yes**

☞ or not by setting - *Log* to **No** (factory setting).

Connection Tracking

Logged in as 'admin' from 10.0.1.159 on 'LocalFW' .

 NAT



Masquerading Port Forwarding **Connection Tracking**

Connection Tracking

Maximum table size

FTP

IRC

PPTP

Connection Tracking

Maximum table size

This entry specifies an upper limit for maximum number of connections being tracked.

The default setting is selected in such a way that it is never reached under normal conditions. During attacks it may be easily reached so that this limit provides an additional protection. If special requirements should be present in your operating environment, then you can increase this value.

FTP

If an outgoing FTP (protocol) connection is setup to download data, there are two alternatives as to how the data will be transmitted: When using “active FTP” the server called will call the calling system back to establish a connection for the transfer of data. When using “passive FTP” the calling system will establish this additional connection for the data transfer. To let the data of this additional connection pass through the firewall, **Enable “FTP” NAT/Connection Tracking support** must be set to **Yes** (factory setting).

IRC

This is similar to “FTP”: When the IRC protocol is used for chatting in the Internet, incoming connections must also be permitted after the connection has been established actively. In this case, **Enable “IRC” NAT/Connection Tracking support** must be set to **Yes** so that the firewall will permit these connections (factory setting).


PPTP


This need only be set to **Yes** under the following condition:
if a local system should establish a VPN connection via PPTP to an external system without help from the mGuard.
The factory setting is **No**.

6.4.3 Network Security → DoS

Flood Protection

Logged in as 'admin' from 10.0.1.159 on 'LocalFW' .

 HIRSCHMANN

 DoS

Flood Protection

TCP

Maximum number of new outgoing TCP connections (SYN) per second

Maximum number of new incoming TCP connections (SYN) per second

ICMP

Maximum number of outgoing "ping" frames (ICMP Echo Request) per second

Maximum number of incoming "ping" frames (ICMP Echo Request) per second

Transparent Mode

Maximum number of outgoing ARP requests or ARP replies per second (in each case)

Maximum number of incoming ARP requests or ARP replies per second (in each case)

TCP

Maximum number of new outgoing TCP connections (SYN) per second

Default: 75

Maximum number of new incoming TCP connections (SYN) per second

Default: 25

These 2 settings define upper limits for the allowed incoming and outgoing TCP connections per second. The default values will never be reached in normal operation. However, since they can be easily reached in the event of an attack, the limits provide additional security. If your operational environment has special requirements, you can increase these values.

ICMP

Maximum number of outgoing 'ping' frames (ICMP Echo Request) per second

Default: 5

Maximum number of incoming 'ping' frames (ICMP Echo Request) per second

Default: 3

These 2 settings define upper limits for the allowed incoming and outgoing ping frames per second. The default values will never be reached in normal operation. However, since they can be easily reached in the event of an attack, the limits provide additional security. If your operational environment has special requirements, you can increase these values.

Transparent Mode

Maximum number of outgoing ARP requests or ARP replies per second (in each case)

Default: 500

Maximum number of incoming ARP requests or ARP replies per second (in each case)

Default: 500

These 2 settings define upper limits for the allowed incoming and outgoing ARP requests and ARP replies per second. The default values will never be reached in normal operation. However, since they can be easily reached in the event of an attack, the limits provide additional security. If your operational environment has special requirements, you can increase these values.

6.4.4 Network Security → User Firewall

The user firewall is operative exclusively for firewall users, i.e., users that registered as firewall users – see “Security → External Authentication” on page 83. A set of firewall rules, a so-called template, can be assigned to each firewall user.

☒ The anti-virus function (see “AntiVirus → HTTP” on page 111, “Web Security → FTP” on page 113, “AntiVirus → POP3” on page 116, “AntiVirus → SMTP” on page 119) has priority over the firewall rules defined here and can partially override them. This behaviour can be overridden in the **Network security → Packet filters**, Extended Settings menu by setting the switch to **Connections scanned for viruses are subject to firewall rules** – see “Advanced”, “Anti-virus scanner” on page 89.

User Firewall Templates

Logged in as 'admin' from 10.0.1.159 on 'LocalFW' .

HIRSCHMANN

User Firewall

User Firewall Templates

Enabled	Name
Yes	(unnamed)

Edit Delete New

Apply

All defined user firewall templates are listed here. A template can consist of several firewall rules. A template can be assigned to several users.

- **Enabling / Disabling a defined user firewall template:**
Set Parameters active to Yes or No, respectively.
- **Editing a defined user firewall template:**
Click the Edit button next to the list entry.
- **Deleting a defined user firewall template:**
Click the Delete button next to the list entry.
- **Defining a new user firewall template:**
 1. Click the **New** button.
Result: the list of user firewall templates displayed will be supplemented with a new entry.
 2. Next to the list entry, click the **Edit** button.

User Firewall → Define Template

General:

After clicking on the **Edit** button, the following page will appear:

The screenshot shows the 'User Firewall' configuration page with the 'General' tab selected. The page header includes the Hirschmann logo and the text 'Logged in as 'admin' from 10.0.1.159 on 'LocalFW'.'. The 'Options' section contains the following fields: 'A descriptive name for the template' (text box with '(unnamed)'), 'Enabled' (dropdown menu with 'Yes' selected), 'Comment' (text box), 'Timeout' (text box with '28800'), and 'Timeout type' (dropdown menu with 'static' selected). An 'Apply' button is located at the bottom right of the form.

Options

A descriptive name for the template

You can name or rename the user template as desired.

Active: Yes / No

For **Yes**, the user firewall template becomes active as soon as external users log onto the mGuard who are listed on the *Template User* register card (see below) and who have been assigned firewall rules. It doesn't matter from which computer and under which IP address the user logs in. The assignment of user firewall rules is based on the authentication data that the user enters during the login (user name, password).

Comments

Optional: explanatory text

Timeout

Default: 28800.

Indicates the time in seconds at which point the firewall rules will be deactivated. If the user session lasts longer than the timeout time defined here, the user will have to repeat the login process.

Timeout type: static / dynamic

With static timeout users are logged out automatically, as soon as the specified timeout elapsed. With dynamic timeout users are logged out automatically after a period of inactivity has elapsed.

Template User

The screenshot shows the 'User Firewall' configuration page with the 'Template users' tab selected. The page header includes the Hirschmann logo and the text 'Logged in as 'admin' from 10.0.1.159 on 'LocalFW'.'. The 'Users' section contains a table with a header row 'User' and a text box for adding new users.

Users

User Name

Enter the names of users here. The names must correspond to those that have been defined in Security → External Authentication - for more information, see "Security → External Authentication" on page 83

Firewall Rules

Logged in as 'admin' from 10.0.1.159 on 'LocalFW' .

HIRSCHMANN

User Firewall

General Template users Firewall rules

Firewall rules

Source IP: %authorized_ip

No	Protocol	From Port	To IP	To Port	Comment	Log
<input type="checkbox"/>	TCP	any	0.0.0.0/0	any		No

Log ID: ufw-1234

Apply

Firewall Rules

Source IP

The IP address from which the user connected to the mGuard.

“%authorized_ip” is a placeholder for the address.

- ☒ If several firewall rules have been defined and activated for a single user, these will be queried in sequence from top to bottom, until the appropriate rule has been located. This rule will then be applied. If further rules are defined in the rule list that would also be suitable, these are ignored.

You are offered the following options for entries:

Protocol

All encompasses: TCP, UDP, ICMP and other IP protocols.

From Port/To Port

(is only evaluated for the TCP and UDP protocols)

Any designates any port.

Startport:Endport (e.g. 110:120) designates a port range.

Individual ports can be entered either using the port number or the corresponding service names: (e.g. 110 for pop3 or pop3 for 110).

To IP

0.0.0.0/0 means all IP addresses. In order to specify an IP-address range, use CIDR notation - see e “CIDR (Classless InterDomain Routing)” on page 140.

Comment

A comment can be entered as desired for this rule.

Log

For each individual firewall rule, you may define whether, once the rule is activated

- the event should be logged - set *Log* to **Yes**
- or not - set *Log* to **No** (default setting).

6.5 Menu IPsec VPN (not blade controller)

6.5.1 IPsec VPN → Global

Machine Certificate

The screenshot shows the Hirschmann web interface. At the top, it says 'Logged in as 'admin' from 10.0.1.159 on 'LocalFW'.'. The Hirschmann logo is on the right. Below the logo, there's a 'Global' button. The main content area has two tabs: 'Machine Certificate' (selected) and 'DynDNS Monitoring'. Under the 'Machine Certificate' tab, there's a section titled 'Machine Certificate' with a sub-section 'Certificate'. It displays the message 'No certificate & key installed'. Below this, there are two input fields: 'PKCS#12 Filename (*.p12)' and 'Password'. To the right of the filename field is a 'Durchsuchen...' button. Below the password field is an 'Import' button. At the bottom right of the form is an 'Apply' button.

Machine Certificate

This shows the currently imported X.509 certificate with which the mGuard identifies itself to other VPN gateways. The following information is displayed:

subject	The holder to whom the certificate was issued.
issuer	The certification authority which signed the certificate.
	C: Country
	ST: State
	L: Location (city)
	O: Organisation
	OU: Organisation Unit
	CN: Common Name (hostname)
MD5, SHA1 Fingerprint	Fingerprint of the certificate to compare this with another person, e.g. on the telephone. Windows displays the fingerprint in SHA1 format here.
notBefore, notAfter	Period of time that the certificate is valid. This is ignored by the mGuard, since it doesn't have an integrated realtime clock.

In addition to the information given above, the imported PKCS#12 file (filename extension *.p12 or *.pfx) also contains a public and a private key. The public key will be given in as a certificate file (filename extension *.cer or *.pem) to other VPN gateways and is used to verify that this machine owns the corresponding private key.

Depending on the respective remote site, its operator must be supplied with the certificate file in person or via a signed e-mail or if a secure means of communication is not available, you should conclude by comparing the fingerprint shown by the mGuard via a secure means.

Only one PKCS#12 file can be imported into the device.

To import a (new) certificate, proceed as follows:

Import a new certificate

Prerequisite:

The PKCS#12 file (filename = *.p12 or *.pfx) is generated and saved on the connected system.

1. Click on **Browse...** to select the file.
2. Enter the password with which the PKCS#12 file's private key is protected in the *Password* field.

3. Click on **Import**.
 4. Then click on **OK**.
- After the import is completed, the new certificate will be shown under *Certificate*.

DynDNS Monitoring

For an explanation of DynDNS, see below: Services → DynDNS Registration.

Watch hostnames of remote VPN Gateways? Yes / No

If the mGuard has been given the address of the remote VPN gateway as a hostname (see “Connections” on page 99) and this hostname has been registered with a DynDNS Service, the mGuard can check against the DynDNS at regular intervals whether any changes have occurred. If yes, the VPN connection will be setup to the new IP address.

Refresh Interval (sec)

Standard: 300 (seconds)

6.5.2 IPsec VPN → Connections

Prerequisites for a VPN connection:

The main prerequisite for a VPN connection is that the IP addresses of the VPN partner are known and accessible.

- In order for an IPsec connection to be setup successfully, the VPN’s remote site must support IPsec with the following configuration:
 - Authentication via Pre-Shared Key (PSK) or X.509 certificate
 - ESP
 - Diffie-Hellman Groups 2 and 5
 - DES, 3DES or AES encryption
 - MD5 or SHA-1 hash algorithms
 - Tunnel or Transport mode
 - Quick Mode
 - Main Mode
 - SA Lifetime (1 second to 24 hours)

If the system at the remote site is running Windows 2000, the *Microsoft Windows 2000 High Encryption Pack* or at least *Service Pack 2* must be installed.

- If the remote site is behind a NAT router, it must support NAT-T. Or the NAT router must support the IPsec protocol (IPsec/VPN Passthrough). In either case, for technical reasons, only IPsec Tunnel connections are supported.

Connections

Lists the VPN connections that have been set up.

- **VPN connections - enable / disable**
You can activate (Enable = **Yes**) or deactivate (Enable = **No**) each individual connection.
- **VPN connections - editing**
Click on the **Edit** button next to the entry.
Make the necessary or desired settings (see below).
Then click on **OK**.
- **VPN connections - deleting**
Click on the **Delete** button next to the entry.
Then click on **OK**.
- **Configuring a new VPN connection**
Click on **New**.
Enter a name for the connection and then click on **Edit**.
Make the necessary or desired settings (see below).
Then click on **OK**.

To enable or disable VPN connections from remote, connect to the mGuard using the following URLs:

`https://login:password@host/nph-vpn.cgi?name=Connection&cmd=(up|down)`

Example:

`https://admin:mGuard@192.168.1.1/nph-vpn.cgi?name=paris&cmd=up`

6.5.3 Define a VPN connection

After pressing the **Edit** button, the following page appears

General

Logged in as 'admin' from 10.0.1.159 on 'LocalFW' .

HIRSCHMANN

Connections

General Authentication Firewall IKE Options

Options

A descriptive name for the connection (unnamed)

Enabled Yes

Address of the remote site's VPN gateway (either an IP address, a hostname, or %any) %any

Connection startup (Will be ignored in Transparent Mode.) Wait

Tunnel Settings

Connection type Tunnel (Net <-> Net)

Local network 192.168.1.1/32

Remote network 192.168.254.1/32

The virtual IP which will be used by the client in Transparent mode 192.168.1.1

Enable 1-to-1 NAT to a different internal network in router mode No

Internal network address for 1-to-1 NAT 192.168.2.1

Apply

Options

A descriptive name for the connection

You can assign the connection any name you desire.

Enabled

Specify whether the connection should be enabled (= Yes) or not (= No).

Address of the remote site's VPN gateway
(An IP address, a hostname or %any)



The address of the gateway to the private network in which the remote communication partner can be found.

- If you wish to have the mGuard actively initiate and set up the connection to the remote site or if the device is in *Transparent* mode, enter the IP address or the hostname of the remote site here.
- If the remote site's VPN gateway does not have a fixed and known IP address, you can use the DynDNS Service to simulate a fixed and known address. See “DynDNS” on page 132.
- If you want the mGuard to be ready to accept a connection actively initiated and set up by a remote site with any IP address, enter: **%any**
- In this case, the local mGuard can be “called” by a remote site, which has been dynamically assigned its IP address (by the internet service provider), which has an IP address that changes. In this scenario, you may only enter an IP address when this is the fixed and known IP address of the remote “calling” site.

☒ **%any** can only be used along with the authentication mode using X.509 certificates.

☒ In case the remote peer is located behind a NAT gateway, **%any** must be used. Otherwise the renegotiation of new connection keys will fail after the connection is established.

Connection startup

There are 2 options:

- Start a connection to the remote side
- Wait for the remote side [to setup a connection]

Start a connection to the remote side

In this case, the local mGuard sets up the connection to the remote side. The fixed IP address or domain name of the remote side must be entered in the *Address of the remote site's VPN gateway* (see above) field.

Wait for the remote side [to setup a connection]

In this case, the local mGuard is ready to accept a connection, which a remote site actively initiates and sets up to the local mGuard. The entry in the *Address of the remote site's VPN gateway* (see above) field may be: **%any**

- ☞ If the mGuard should only accept a connection initiated by a specific remote site (which has a fixed IP address), you can enter its IP address or hostname just to be on the safe side.
- ☞ If the mGuard is running in *Transparent* mode, this setting has no effect. In other words, it will be ignored and the connection will be initiated automatically, whenever the mGuard notices that the connection should be used.

Tunnel Settings

Connection type

You can choose from:

- Tunnel (Net[work] ↔ Net[work])
- Transport (Host ↔ Host)
- Transport (L2TP Microsoft Windows)
- Transport (L2TP SSH Sentinel)

Tunnel (Net[work] ↔ Net[work])

This type of connection is not only suitable in every case, but also the most secure. In this mode, the IP datagrams are completely encrypted before they are sent with a new header to the remote site's VPN gateway – the “tunnel end”. There the transferred datagrams are decrypted to restore the original datagrams. These are then passed on to the destination system.

Transport (Host ↔ Host)

In this type of connection, the device only encrypts the data of the IP packets. The IP header information remains unencrypted.

Transport (L2TP Microsoft Windows)

If this type of connection is activated, the mGuard will use a transport connection which is compatible with the IPsec/L2TP client available in older Microsoft Windows systems.

If you select this option you should also set *Perfect Forward Secrecy (PFS)* to **No** and enable the L2TP server.

Transport (L2TP SSH Sentinel)


If this type of connection is activated, the mGuard will use a transport connection which is compatible with the IPsec/L2TP client available in recent Microsoft Windows systems and the SSH Sentinel VPN client.

If you select this option you should also set *Perfect Forward Secrecy (PFS)* to **No** (see below) and enable the L2TP server.

☞ As soon as the IPsec/L2TP connection is started under Windows, a dialog will appear to prompt you to enter your user name and login. You can make any entry that you want in this dialog. Since the X.509 certificate has already provided your authentication, the mGuard will ignore these entries.

Tunnel Settings, with Connection Type Tunnel (Net <-> Net)


When the Connection Type is set to “Tunnel”, the following entries appear on the page:

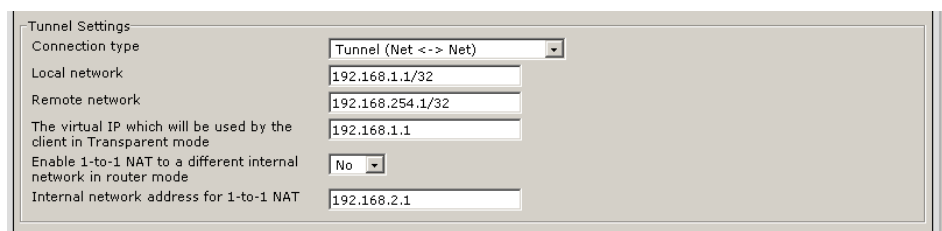

The screenshot shows a 'Tunnel Settings' window with the following fields and values:

Field	Value
Connection type	Tunnel (Net <-> Net)
Local network	192.168.1.1/32
Remote network	192.168.254.1/32
The virtual IP which will be used by the client in Transparent mode	192.168.1.1
Enable 1-to-1 NAT to a different internal network in router mode	No
Internal network address for 1-to-1 NAT	192.168.2.1

Please make the following settings to specify the VPN tunnel:

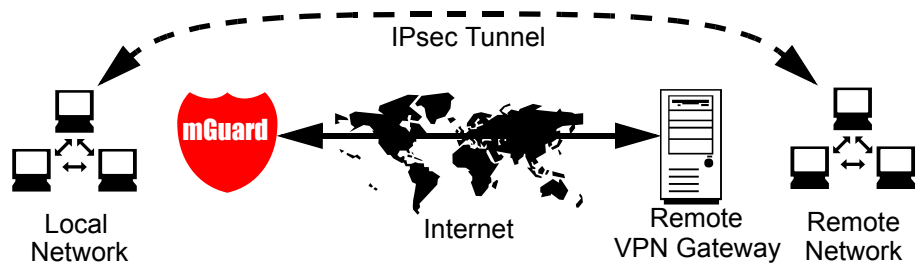

Local network address

With this entry, you specify the address of the network or computer which is connected to the local interface of the mGuard.

Remote network address

With this entry, you specify the address of the network or computer which is available behind the remote VPN gateway.




The network 0.0.0.0/0 specifies a *default route over the VPN*.

This means that all traffic for which there is no other VPN tunnel or route will be routed through this VPN tunnel.

A default route over VPN should only be specified for a single tunnel and is not available in *Transparent* mode.

The virtual IP which will be used by the Single Client Transparent mode

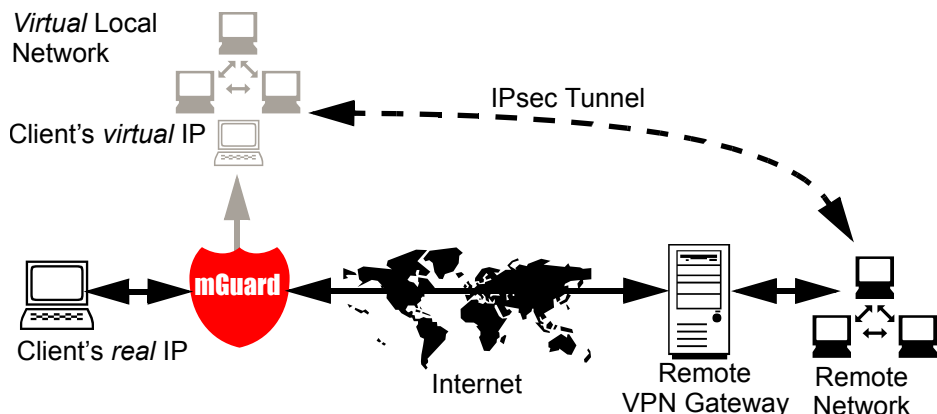

In *Transparent* mode the VPN's local network is simulated by the mGuard.

Inside this *virtual* network, the client will be known under a *virtual IP*.

☒ This entry is only required in *Transparent* mode.

Activate 1-to-1 NAT in another internal network in Router mode: Yes / No

Transcribe the local network defined in the VPN tunnel to a local network available for the local (LAN) Ethernet port.

An explanation for 1-to-1 NAT can be found under "Network Address Translation/IP Masquerading" on page 90.

Internal network for 1-to-1 NAT

The network address for the local (LAN) Ethernet port. The net mask is taken over from the *local network* field.

Authentication


Authentication method

There are 2 options:

- X.509 Certificate
- Pre-Shared Key

Depending on which option you have chosen, the page will present you different possibilities for adjustments:

Authentication method: X.509 Certificate

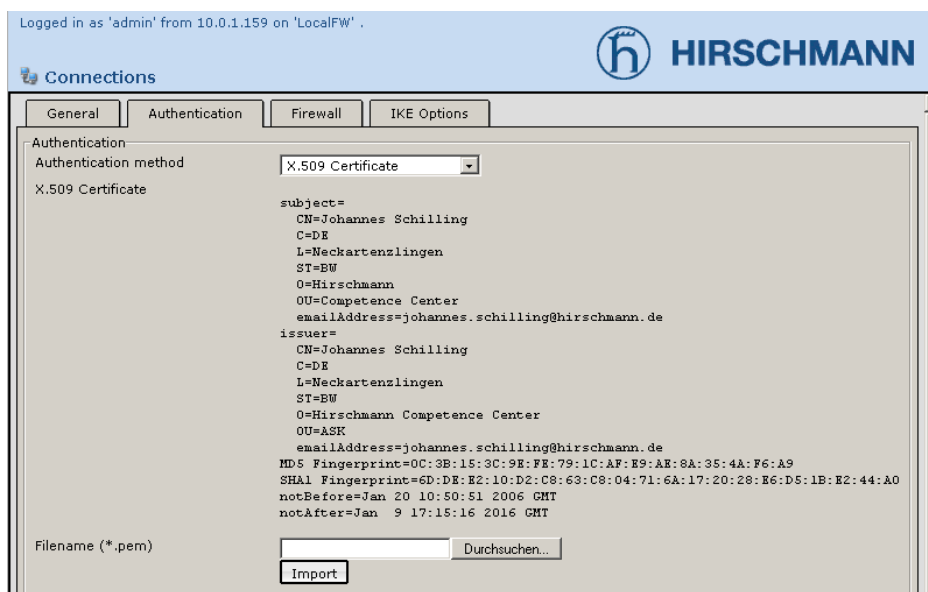

These methods are supported by most of the newer IPsec implementations. In this case, the mGuard uses the public key of the remote site (filename *.cer or *.pem) to encrypt the authentication datagram before it sends it to the remote site, the “tunnel end”. (You must have received this *.cer or *.pem file from the operator at the remote site – perhaps on a floppy disc or attached to an e-mail).

To make this public key available to the mGuard, proceed as follows:


Prerequisite:

The *.cer or *.pem file must have been saved on the configuration system.

1. Click on **Browse...** and select the file.
2. Click on **Import**.

After the import, the contents of the new certificate will be displayed. An explanation of the information displayed can be found in the chapter “Machine Certificate” on page 98.

Authentication method: Pre-Shared Secret Key (PSK)

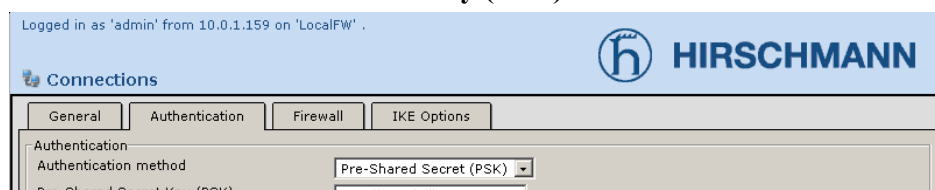

This method is mainly used by older IPsec implementations. In this case both sides of the VPN authenticate each other with the same PSK.

To make the agreed upon key available to the mGuard, enter the agreed upon character string in the *Pre-Shared Secret Key (PSK)* entry field. To achieve security comparable to that of 3DES, the string should consist of about 30 characters selected at random and should include upper and lower case characters and digits.



The *Pre-Shared Secret Key* cannot be used with dynamic (%any) IP addresses; fixed IP addresses or host names are required at both ends.

VPN Identifier

VPN Identifier

Remote

Valid values are:

- the certificates distinguished name (same as no entry)
- johannes.schilling@hirschmann.de

Local VPN Identifier

Valid values are:

- the certificates distinguished name (same as no entry)

Via the *VPN Identifier*, the VPN gateways can recognize which configurations belong to the same VPN connection.

If these fields are empty: In the case of X.509 certificates, the *Distinguished Name* of the certificate is utilized. In the case of PSK, the IP address of the VPN gateway is utilized.

Firewall

Logged in as 'admin' from 10.0.1.159 on 'LocalFW'.

Connections

General Authentication Firewall IKE Options

Untrusted Port

Log ID: vpn-fw--in-Ap-

No	Protocol	From IP	From Port	To IP	To Port	Action	Comment
1	All	0.0.0.0/0	any	0.0.0.0/0	any	Accept	default rule

Log entries for unknown connection attempts: No

Trusted Port

Log ID: vpn-fw--out-Ap-

No	Protocol	From IP	From Port	To IP	To Port	Action	Comment
1	All	0.0.0.0/0	any	0.0.0.0/0	any	Accept	default rule

Log entries for unknown connection attempts: No

Apply

Firewall incoming (untrusted port), Firewall outgoing (trusted port)

While the settings made in the *Firewall* menu only affect non-VPN connections (see above under “Untrusted Port” on page 85), these settings affect just the VPN connection defined here. This means: If you have defined multiple VPN connections, you can restrict the outgoing or incoming access individually for each connection. You can have any attempts made to bypass these restrictions logged.

- ☒ The VPN Firewall factory settings allow all connections via this VPN connection.

However, the settings for “Network Security → DoS” on page 94 do apply independently for each individual VPN connection.

- ☒ If multiple firewall rules are set, they will be searched in the order in which they are listed from top to bottom until a suitable rule is found. This rule will then be applied. If further down in the list there are other rules which would also fit, they will be ignored.
- ☒ In Single Client Transparent mode the firewall rules the real IP address is to be used for the client or left at 0.0.0.0/0, as only one client can be addressed through the tunnel.

As in the previous sections, you have the following options when making the entries:

Protocol

All means: TCP, UDP, ICMP and other IP protocols.

From IP/To IP

0.0.0.0/0 means all addresses. To enter an address space, use the CIDR notation – see “CIDR (Classless InterDomain Routing)” on page 140.

From Port/To Port

(This is only evaluated by the TCP and UDP protocols)

any means each and every port.

startport:endport (e.g. 110:120) defines a range of ports.

You can specify individual ports by giving either their port number or the corresponding service name: (e.g. 110 for pop3 or pop3 for 110).

Action

Accept means that the data packets should be passed through.

Reject means that the data packets should be rejected so that the sender is informed that the data packets have been rejected. (In *Transparent* mode, Reject has the same effect as Drop.)


Drop means that the data packets should not be passed through. The data packets will be discarded so that the sender will not be informed as to what happened to them.

Comment

An informational comment for this rule.

Log

You can specify - for each individual firewall rule - whether the use of the rule

 should be logged by setting - *Log* to **Yes**


 or not by setting - *Log* to **No** (factory setting).

Log entries for unknown connection attempts

If this is set to Yes, all attempts to establish a connection, which were not covered by the rules defined above, will be logged.

IKE Options

Logged in as 'admin' from 10.0.1.159 on 'LocalFW' .



Connections

General Authentication Firewall **IKE Options**

ISAKMP SA (Key Exchange)

Encryption Algorithm

Hash Algorithm

IPsec SA (Data Exchange)

Encryption Algorithm

Hash Algorithm

Perfect Forward Secrecy (PFS)
(The remote site must have the same entry. Activation is recommended due to security reasons.)

Lifetimes

ISAKMP SA Lifetime (seconds)

IPsec SA Lifetime (seconds)

Rekeymargin (seconds)

Rekeyfuzz (percent)

Keying tries (0 means unlimited tries)

Rekey

Dead Peer Detection

Action

Delay

Timeout

ISAKMP SA (Key Exchange)

Encryption algorithm

- ☞ Together with the administrator at the remote site, decide on which encryption technique should be used.

3DES-168 is the most commonly used algorithm and is therefore the default (factory) setting.

Basically the following applies: The greater the number of bits used by an encryption algorithm - specified by the appended number -, the more secure it is. The relatively new AES-256 protocol is therefore considered the most secure, but is not yet widely used.

The longer the key, the longer the time required by the encryption process. This latter point, however, is of no consequence for the mGuard, since it uses a hardware-based encryption technique. However, this aspect may be of significance for the remote site.

The algorithm designated as “Null” performs no encryption.

Hash Algorithm

Leave this setting on *All algorithms*. With this setting, it does not matter whether the remote site uses MD5 or SHA-1.

IPsec SA (Data Exchange)

In contrast to *ISAKMP SA (Key Exchange)* (see above), this setting determines the method used for the exchange of data. This may be different from the Key Exchange but need not be.

Encryption Algorithm

See above

Hash Algorithm

See above

Perfect Forward Secrecy (PFS)

This method is used to increase the security of the data transfer. In IPsec, the key used for the data exchange is changed at certain intervals. In the case of PFS, a new random number is negotiated with the remote site instead of deriving it from a previously agreed on random number.

- ☞ Do not set this to **Yes**, unless the remote site also supports PFS.
- ☞ If you select the connection type *Transport (L2TP Microsoft Windows)*, set *Perfect Forward Secrecy (PFS)* to **No**.

Lifetimes

The keys of an IPsec connection will be renegotiated at certain intervals to increase the costs of an attack at the IPsec connection.

ISAKMP SA Lifetime

The lifetime of the ISAKMP SA keys in seconds.

The factory default is 3600 seconds (1 hour). The allowed maximum is 86400 seconds (24 hours).

IPsec SA Lifetime

The lifetime of the IPsec SA keys in seconds.

The factory default is 28800 seconds (8 hours). The allowed maximum is 86400 seconds (24 hours).

Rekeymargin

Minimal time interval before the old key expires during which a new key shall be negotiated. The factory default is 540 seconds (9 minutes).

Rekeyfuzz

Maximum in percent by which *Rekeymargin* shall be randomly increased.

This is to lower the load during key exchanges on machines with many VPN connections by serializing them. The factory default is 100 percent.

Keying tries

Number of attempts to negotiate new keys with the remote peer.

The special value 0 means unlimited attempts in case the connection is to be initiated by the mGuard, otherwise it means 5.

Rekey

When set to **Yes**, the mGuard will try to renegotiate keys when they expire.

Dead Peer Detection

When the remote peer supports the Dead Peer Detection (DPD) protocol, both peers can detect whether the connection is still valid or must be renegotiated. Without DPD, the connection must be either restarted manually or is unusable until the initiating sides SAs expire.

Action: Hold / Restart / Delete

The switch determines the action that is to be carried out when DPD has recognised a disruption in the IPsec connection.

In the case of **Hold** (default), an attempt to re-build the IPsec connection is made if it has been declared dead, but only when the locally connected network tries to send data to the receiver.

In the case of **Restart** the connection is re-built immediately.

In the case of **Clear** the connection will be deactivated until IPsec is restarted.

Delay

The length of time in seconds after which DPD Keep Alive queries will be sent to check the availability of the remote peer.

The factory default is 30 seconds.

Timeout

The length of time in seconds after which the remote peer will be declared dead if the Keep Alive queries are not answered.

The factory default is 120 seconds.

6.5.4 IPsec VPN → L2TP over IPsec

Together with VPN connections of connection type *transport*, the L2TP server allows remote peers to connection with IPsec/L2TP to the mGuard.

L2TP Server

Logged in as 'admin' from 10.0.1.159 on 'LocalFW' .

HIRSCHMANN

L2TP over IPsec

L2TP Server

Settings

Start L2TP Server for IPsec/L2TP?

Local IP for L2TP connections

Remote IP range start

Remote IP range end

Please note: These rules won't apply to the Transparent mode.

Status

The L2TP daemon isn't running.

Settings

Start L2TP Server for IPsec/L2TP? Yes / No

If you want to enable IPsec/L2TP connections, set this switch to **Yes**. It is then possible to establish incoming L2TP connections over IPsec, which dynamically assign IP addresses to the clients within the VPN.

Local IP for L2TP connections

With the setting shown in the screenshot above, the mGuard will inform the remote site that the mGuard's address is 10.106.106.1.

Remote IPs for L2TP connections range


With the settings shown in the screenshot above, the mGuard will assigned IP addresses between 10.106.106.2 and 10.106.106.254 to the remote peers.

Status

Shows information about the L2TP status, when this type of connection has been selected. See "Connections" on page 99.

If this type of connection has not been selected, the screen shown above will be displayed.

6.5.5 IPsec VPN → IPsec Status

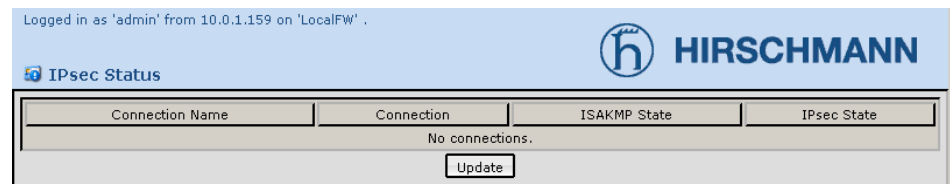

Shows the status of the IPsec connections.

The names of the VPN connections are listed on the left. On the right, you will find the current status of each connection.

GATEWAY

shows the IP addresses of the communicating VPN gateways

TRAFFIC

identifies the systems or networks which communicate via the VPN gateways.

ID

identifies the Distinguished Name (DN) of an X.509 certificate.

ISAKMP State

ISAKMP State (Internet security association and key management protocol) is given as "established", if the two VPN gateways involved have established a channel to exchange keys. In this case, they have been able to contact each other and all of the settings made on the configuration page up to and including "ISAKMP SA" were correct.

IPsec State

IPsec State is given as "established", if IPsec encryption is activated when communicating. In this case, the entries made under "IPsec SA" and "Tunnel Settings" were also correct.

In the event of problems, we recommend that you examine the VPN logs of the system to which the connection was setup. The basis for this recommendation is

that for reasons of security exhaustive error messages are not returned to the initiating system.

If the display shows:

ISAKMP SA established, IPsec State: WAITING

This indicates that:

the authentication was successful, but the other parameters are not correct: Do the connection types (Tunnel, Transport) match? If Tunnel has been selected, do the network address areas match at both ends?

If the display shows:

IPsec State: IPsec SA established

This indicates that:

the VPN connection has been successfully setup and can be used. If this is not the case, there must be a problem with the remote VPN gateway. In this case, disable and enable the connection to re-establish the connection.

6.6 Menu AntiVirus (not on control unit)

6.6.1 AntiVirus → HTTP


Requirements:

The following requirements must be fulfilled for the use of the virus filter:

- Anti-virus license has been installed. Instructions on how to request and install a license can be found under the section “Basic Settings → Update” on page 71.
- Access to an update server with the current versions of the virus signatures (see section “Basic Settings → Update” on page 71).

Virus Protection

Logged in as 'admin' from 10.0.1.159 on 'EAGLEmGuard' (EAGLEmGuard) .

 **HIRSCHMANN**

HTTP

Virus Protection

Options

Enable content scanning for HTTP

HTTP maximum filesize for scanning in bytes

Action for infected web content

Action for web content exceeding maximum content size

List of HTTP Servers

Server	Server Port	Comment	Enable Scan
<input type="checkbox"/> 0.0.0.0/0	80	HTTP out to any	<input type="button" value="Scan"/>

Note: Both global content scanning for HTTP must be enabled and firewall rules defining the IP address range to be scanned must be set.

The HTTP protocol is not only used by web browsers to retrieve data from web sites, but is also used in many other applications. It is also used, for example, to download files, e.g. software updates, or to initialize multimedia streams.

- The transferred file will only be passed on after it has been loaded completely and checked. Consequently, user software may react less quickly when downloading larger files or whenever the download speeds are slow.
- To check the anti-virus protection for HTTP, you can download the safe Eicar test virus which is available for test purposes at http://www.eicar.org/anti_virus_test_file.htm.

Options

Anti-virus protection for HTTP: Yes / No

In the case of **Yes**, files received are scanned for viruses by mGuard if they arrive via HTTP connections contained in the list of HTTP servers below.

Scanning up to a pre-set volume of:

5 MB. The maximum size of the files to be checked is specified here. Files that are larger are not scanned. Depending on the “When size limit is exceeded” setting, an error message is sent to the browser in the event of a file exceeding the size limit, or the system automatically switches to throughput mode.

If the mGuard does not have enough memory to save a file completely or to decompress it, a corresponding error message will be sent to the user's client software (browser or download manager) and an entry will be written to the anti-virus log. In this case, you have the following options:

- You can try again later to download the file
- You can temporarily deactivate the virus filter for the corresponding server
- You can set the parameter to “Let the data pass unscanned”.

Action for infected web content


Notify with browser error

If the virus filter detects a virus in the data transferred from an HTTP server to the HTTP client, an error message will be sent to the HTTP client. The handling of this error message depends on the respective HTTP client. A web browser will display the error message in the form of an HTML page. If a file that is downloaded within an HTML page - e.g. a graphic file - is infected, this file will not be displayed in the browser. If a download manager is used to download a file via HTTP, the error message will be displayed by the download manager.

Action for web content exceeding the maximum content size

Let data pass unscanned

When this option is selected the virus filter will allow the files, which exceed the filesize set, to pass through unscanned.

 In this case, the data is not checked for viruses!

Block data


If this option is selected, the system will terminate the download and send an error message to the client software whenever the content exceeds the maximum size.

List of HTTP Servers



You can select the servers, whose traffic should be filtered, and specify for each IP address whether or not the anti-virus protection should be activated. It is also possible to enter “trusted” servers.

Examples:



Global activation of the anti-virus protection for HTTP:

	Server	Server Port	Kommentar	S	
	<input type="checkbox"/>	0.0.0.0/0	80	alle ausgehenden Verb	Scani

Scan a subnet and exclude a “trusted” HTTP server:

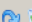Server		Server Port	Kommentar	S	
	<input type="checkbox"/>	192.168.2.5	80	ungesichertes HTTP	Nicht
	<input type="checkbox"/>	192.168.2.0/24	80	gesichertes HTTP	Scann

Scan a single “untrusted” SMTP server in a subnet:

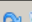		Server	Server Port	Kommentar	S
	<input type="checkbox"/>	192.168.2.5	80	gesicherte HTTP	Scan
	<input type="checkbox"/>	192.168.2.0/24	80	ungesichertes HTTP	Scan

- ☒ To activate the virus filter for HTTP or “FTP over HTTP” connections over a proxy, insert a new row and change the default port 80 to the proxy’s port. Common proxy ports are 3128 and 8080.
- ☒ The set of rules will be processed from the top down, therefore, the order of the rules is also decisive for the results.
- ☒ The virus filter can only handle a limited number of simultaneous connections to mail, HTTP and FTP servers. Exceeding this number will cause further connection attempts to be refused.
- ☒ Scanning for viruses may allow outgoing connections which are usually blocked by the firewall rules defined under “Network Security → Packet Filter” and “Network Security → User Firewall”. Please see “Connections

scanned for viruses are subject to firewall rules: Yes / No” on page 89 to adjust this behaviour.

You have the following options for the entries:

Server

0.0.0.0/0 means all addresses, i.e. the system will filter the traffic of all HTTP servers. To enter an address space, use the CIDR notation – see “CIDR (Classless InterDomain Routing)” on page 140.

- ☒ Since an attempt to setup a connection is first handled by the proxy, if a nonexistent server is requested (e.g. a bad IP address) the user software will act as though the connection to the server had been established, but no data was sent. If the list contains the exact server addresses, this behavior can be prevented, since the proxy will then only take requests addressed to the servers given in the list.

Server Port

Enter the number of the port for the HTTP protocol in this field. The default setting for the HTTP port is **80**.

Comment

An informational comment for this rule.

Scan

Scan

The virus filter is activated for the server specified in this rule.

No Scan

The virus filter is deactivated for the server specified in this rule.

6.6.2 Web Security → FTP


Requirements:

The following requirements must be fulfilled for the use of the virus filter:

- Anti-virus license has been installed. Instructions on how to request and install a license can be found under the section “Basic Settings → Update” on page 71.
- Access to an update server with the current versions of the virus signatures (see section “Basic Settings → Update” on page 71).

Virus Protection

Logged in as 'admin' from 10.0.1.159 on 'EAGLEmGuard' (EAGLEmGuard) .

 **HIRSCHMANN**

FTP

Virus Protection

Options


Enable content scanning for FTP

FTP maximum filesize for scanning in bytes

Action for infected web content

Action for web content exceeding maximum content size

List of FTP Servers

	Server	Server Port	Comment	Enable Scan
	<input type="text" value="0.0.0.0/0"/>	<input type="text" value="21"/>	<input type="text" value="FTP out to any"/>	<input type="text" value="Scan"/>

Note: Both global content scanning for FTP must be enabled and firewall rules defining the IP address range to be scanned must be set.

The FTP protocol is used for up- and download of files.

- The transferred file will only passed on after it has been loaded completely and checked. Consequently, user software may react less quickly when downloading larger files or whenever the download speeds are slow.

- To check the anti-virus protection for FTP, you can download the safe Eicar test virus which is available for test purposes at http://www.eicar.org/anti_virus_test_file.htm.
- The mGuard can only be used to secure the FTP-client.

Options

Anti-virus protection for FTP: Yes / No

In the case of **Yes**, files received are scanned for viruses by mGuard if they arrive via FTP connections contained in the list of FTP servers below.

Scanning up to a pre-set volume of:

5 MB. The maximum size of the files to be checked is specified here. Files that are larger are not scanned. Depending on the “When size limit is exceeded” setting, an error message is sent to the client in the event of a file exceeding the size limit, or the system automatically switches to throughput mode.

If the mGuard does not have enough memory to save a file completely or to decompress it, a corresponding error message will be sent to the user's client software and an entry will be written to the anti-virus log. In this case, you have the following options:

- You can try again later to download/upload the file
- You can temporarily deactivate the virus filter for the corresponding server
- You can set the parameter to “Let the data pass unscanned”.

Action for infected content

Notify with browser error

If the virus filter detects a virus in the data transferred between the FTP server and the FTP client, an error message will be sent to the FTP client. The handling of this error message depends on the respective FTP client.

Action for web content exceeding the maximum content size

Let data pass unscanned

When this option is selected the virus filter will allow the files, which exceed the filesize set, to pass through unscanned.

☒ In this case, the data is not checked for viruses!

Block data


If this option is selected, the system will terminate the download and send an error message to the client software whenever the content exceeds the maximum size.

List of FTP Servers



You can select the servers, whose traffic should be filtered, and specify for each IP address whether or not the anti-virus protection should be activated. It is also possible to enter “trusted” servers.

Examples:



Global activation of the anti-virus protection for FTP:

	Server	Server Port	Kommentar	S
	<input type="checkbox"/> 0.0.0.0/0	<input type="text" value="21"/>	alle ausgehenden Verb	Scani

Scan a subnet and exclude a “trusted” FTP server:

	Server	Server Port	Kommentar	
	192.168.2.5	21	ungesichertes FTP	Nicht
	192.168.2.0/24	21	gesichertes FTP	Scani

Scan a single “untrusted” FTP server in a subnet:

	Server	Server Port	Kommentar	
	192.168.2.5	21	gesichertes FTP	Scani
	192.168.2.0/24	21	ungesichertes FTP	Nicht

- ☒ To activate the virus filter for FTP connections over a proxy, insert a new row and change the default port 21 to the proxy’s port.
- ☒ The set of rules will be processed from the top down, therefore, the order of the rules is also decisive for the results.
- ☒ The virus filter can only handle a limited number of simultaneous connections to mail, HTTP and FTP servers. Exceeding this number will cause further connection attempts to be refused.
- ☒ Scanning for viruses may allow outgoing connections which are usually blocked by the firewall rules defined under “Network Security → Packet Filter” and “Network Security → User Firewall”. Please see “Connections scanned for viruses are subject to firewall rules: Yes / No” on page 89 to adjust this behaviour.

You have the following options for the entries:

Server

0.0.0.0/0 means all addresses, i.e. the system will filter the traffic of all FTP servers. To enter an address space, use the CIDR notation – see “CIDR (Classless InterDomain Routing)” on page 140.

- ☒ Since an attempt to setup a connection is first handled by the proxy, if a nonexistent server is requested (e.g. a bad IP address) the user software will act as though the connection to the server had been established, but no data was sent. If the list contains the exact server addresses, this behavior can be prevented, since the proxy will then only take requests addressed to the servers given in the list.

Server Port

Enter the number of the port for the FTP protocol in this field. The default setting for the FTP port is **21**.

Comment

An informational comment for this rule.

Scan

Scan

The virus filter is activated for the server specified in this rule.

No Scan

The virus filter is deactivated for the server specified in this rule.

6.6.3 AntiVirus → POP3

Requirements:

The following requirements must be fulfilled for the use of the virus filter:

- Anti-virus license has been installed. Instructions on how to request and install a license can be found under the section “Basic Settings → Update” on page 71.
- Access to an update server with the current versions of the virus signatures (see section “Basic Settings → Update” on page 71).

Virus Protection

Logged in as 'admin' from 10.0.1.159 on 'EAGLEmGuard' (EAGLEmGuard) .

HIRSCHMANN

POP3

Virus Protection

Options

Enable content scanning for POP3 (Incoming eMail)

POP3 maximum filesize for scanning in bytes

Action for infected mails

Action for mails exceeding maximum message size

Servers

Server	Server Port	Comment	Enable Scan
<input type="checkbox"/> 0.0.0.0/0	110	POP3 out to any	<input type="text" value="Scan"/>

Note: Both global content scanning for POP3 must be enabled and firewall rules defining the IP address range to be scanned must be set.

Your e-mail client uses the POP3 protocol for incoming e-mail.

- ☞ The virus filter can only check unencrypted data for viruses. Consequently, you should not activate encryption options such as STLS or SSL. Encrypted authentication using AUTH is, however, usable, since the e-mail itself is not encrypted.

Options

Anti-virus protection for POP3 (E-mail pickup): Yes / No

In the case of **Yes**, files received are scanned for viruses by mGuard if they arrive via POP3 connections contained in the list of POP3 servers below.

- ☞ Tip: When using a POP3 connection, most e-mail clients will pick up all of the e-mails during a single connection. In this case, the new settings will first take effect after the last e-mail is collected from the server during the current connection. Consequently, to change the settings when an e-mail transfer is in process, first cancel the transfer.

POP3 maximum filesize for scanning in bytes

With this parameter, you can set the maximum size of the files to be checked. If this limit is exceeded, the system will - depending on the setting “Action for mails exceeding the maximum message size” - block the e-mail and send an error message back to the e-mail client or it will automatically switch to “Let the message pass unscanned” mode.

If the mGuard does not have enough memory to save a file completely or to decompress it, a corresponding error message will be sent to the user's e-mail client and an entry will be written to the anti-virus log. In this case, you have the following options:

- You can try again later to download the file
- You can temporarily deactivate the virus filter for the corresponding server
- You can set the parameter to “Let the message pass unscanned”.

Please note that - depending on the coding scheme used - the size of the attachment may be larger than the original file.

Action for infected mails

Notify recipient by e-mail:

If the virus filter detects a virus, the recipient will be informed by e-mail.

Notify e-mail client by error message:

If the virus filter detects a virus, the recipient will be informed by an error message sent to the e-mail client.

- ☞ If the parameter “Delete received messages from server” has been set in the e-mail client software and the “Action for infected mails” has been set to “Notify recipient by e-mail”, the infected e-mail will be deleted on the server, since the e-mail client will assume that the e-mail has been successfully transferred. If you do not wish to have the infected mail deleted (e.g. if you wish to download the infected e-mail in some other manner), only use the option “Notify e-mail client by error message”.

Action for mails exceeding the maximum message size

Let the message pass unscanned

When this option is selected the virus filter will allow the messages, which exceed the filesize set, to pass through unscanned.

- ☞ In this case, the mail will not be checked for viruses!

Block message


When this option is selected, an error code will be returned to the e-mail client and the e-mail will be blocked.

List of POP3 servers


Indicate which servers' files should be scanned for viruses. By enabling or disabling the anti-virus function beside each individual entry or server, respectively, you can, for example, set an exception rule for a subsequent comprehensive rule. This allows you to define “trusted” servers – see the example illustrated below.

Examples:


Global activation of the anti-virus protection for POP3:

	Server	Server Port	Kommentar	S
<input type="checkbox"/>	0.0.0.0/0	110	alle ausgehenden Verb	Scann

Scan a subnet and exclude a “trusted” POP3 server:

	Server	Server Port	Kommentar	S
<input type="checkbox"/>	192.168.2.5	110	ungesicherte POP3	Nicht
<input type="checkbox"/>	192.168.2.0/24	110	gesichertes POP3	Scann

Scan a single “untrusted” POP3 server in a subnet:

	Server	Server Port	Kommentar	S
<input type="checkbox"/>	192.168.2.5	110	gesicherte POP3	Scann
<input type="checkbox"/>	192.168.2.0/24	110	ungesichertes POP3	Nicht

- ☒ The virus filter can only handle a limited number of simultaneous connections to mail, HTTP and FTP servers. Exceeding this number will cause further connection attempts to be refused.

-
- ☒ The set of rules will be processed from the top down, therefore, the order of the rules is also decisive for the results.
 - ☒ Scanning for viruses may allow outgoing connections which are usually blocked by the firewall rules defined under “Network Security → Packet Filter” and “Network Security → User Firewall”. Please see “Connections scanned for viruses are subject to firewall rules: Yes / No” on page 89 to adjust this behaviour.

You have the following options for the entries:

Server

0.0.0.0/0 means all addresses, i.e. the system will filter the traffic of all POP3 servers. To enter an address space, use the CIDR notation – see “CIDR (Classless InterDomain Routing)” on page 140.

- ☒ Since an attempt to setup a connection is first handled by the proxy, if a nonexistent server is requested (e.g. a bad IP address) the user software will act as though the connection to the server had been established, but no data was sent. If the list contains the exact server addresses, this behavior can be prevented, since the proxy will then only take requests addressed to the servers given in the list.

Server Port

Enter the number of the port for the POP3 protocol in this field. The default setting for the POP3 port is **110**.

Comment

An informational comment for this rule.

Scan

Scan

The virus filter is activated for the servers specified in this rule.

No Scan

The virus filter is deactivated for the server specified in this rule.

6.6.4 AntiVirus → SMTP

Requirements:

The following requirements must be fulfilled for the use of the virus filter:

- Anti-virus license has been installed. Instructions on how to request and install a license can be found under the section “Basic Settings → Update” on page 71.
- Access to an update server with the current versions of the virus signatures (see section “Basic Settings → Update” on page 71).

Virus Protection

Logged in as 'admin' from 10.0.1.159 on 'EAGLEmGuard' (EAGLEmGuard) .

HIRSCHMANN

SMTP

Virus Protection

Options

Enable content scanning for SMTP (Outgoing eMail)

SMTP maximum filesize for scanning in bytes

Action for mails exceeding maximum message size

Servers

Server	Server Port	Comment	Enable Scan
<input type="checkbox"/> 0.0.0.0/0	25	SMTP out to any	<input type="text" value="Scan"/>

Note: Both global content scanning for SMTP must be enabled and firewall rules defining the IP address range to be scanned must be set.

The SMTP protocol is used by e-mail clients or mail transfer agents (MTA) to send e-mails.

☞ The virus filter can only check unencrypted data for viruses.

Consequently, you should not activate encryption options such as TLS. If a virus is detected or an error occurs, an e-mail with an error code will be sent to the sender and an entry will be made in the anti-virus log. The intended recipient will receive neither the infected mail nor a message.

Options

Anti-virus protection for SMTP (E-mail transmission): Yes / No

In the case of Yes, files to be sent are scanned for viruses by mGuard if they are to be transmitted via SMTP connections that are specified in the list of SMTP servers below.

Scanning up to a pre-set volume of

5 MB. The maximum size of the files to be checked is specified here. Files that are larger are not scanned. Depending on the “When size limit is exceeded” setting, an error message is sent to the SMTP client and the e-mail is not delivered in the event of a file exceeding the size limit, or the system automatically switches to throughput mode.

If the mGuard does not have enough memory to save a file completely or to decompress it, a corresponding error message will be sent to the user's e-mail client and an entry will be written to the anti-virus log. In this case, you have the following options:

- You can try again later to send the message.
- You can temporarily deactivate the virus filter for the corresponding server
- You can set the parameter to “Let the message pass unscanned”.

Please note that - depending on the coding scheme used - the size of the attachment may be larger than the original file.

Action for mails exceeding the maximum message size

Let the message pass unscanned

When this option is selected the virus filter will allow the messages, which exceed the filesize set, to pass through unscanned.

☞ In this case, the message is not checked for viruses!

Block message

When this option is selected, an error code will be returned to the e-mail client and the e-mail will be blocked.


List of SMTP servers

Indicate which server connections should be scanned for viruses.



By enabling or disabling the anti-virus function beside each individual entry or server, respectively, you can, for example, set an exception rule for a subsequent comprehensive rule. This allows you to define “trusted” servers – see the example illustrated below

Examples:



Global activation of the anti-virus protection for SMTP:

	Server	Server Port	Kommentar	S	
	<input type="checkbox"/>	0.0.0.0/0	25	alle ausgehenden Verb	Scanr

Scan a subnet and exclude a SMTP server:

		Server	Server Port	Kommentar	S
	<input type="checkbox"/>	192.168.2.5	25	Server mit eigenem AV	Nicht
	<input type="checkbox"/>	192.168.2.0/24	25	angreifbare SMTP Serv	Scann

Scan traffic to a single SMTP server in a subnet:

	Server	Server Port	Kommentar	S
	<input type="checkbox"/> 192.168.2.5	25	angreifbarer SMTP Ser	Scanr
	<input type="checkbox"/> 192.168.2.0/24	25	Server mit eigenem AV	Nicht

☞ Inserting, moving and deleting rows is explained under “Working with tables” on page 44.

- ☒ The set of rules will be processed from the top down, therefore, the order of the rules is also decisive for the results.
- ☒ The virus filter can only handle a limited number of simultaneous connections to mail, HTTP and FTP servers. Exceeding this number will cause further connection attempts to be refused.
- ☒ Scanning for viruses may allow outgoing connections which are usually blocked by the firewall rules defined under “Network Security → Packet Filter” and “Network Security → User Firewall”. Please see “Connections scanned for viruses are subject to firewall rules: Yes / No” on page 89 to adjust this behaviour.

You have the following options for the entries:

Server

0.0.0.0/0 means all addresses, i.e. the system will filter the traffic to all SMTP servers. To enter an address space, use the CIDR notation – see “CIDR (Classless InterDomain Routing)” on page 140.

- ☒ Since an attempt to setup a connection is first handled by the proxy, if a nonexistent server is requested (e.g. a bad IP address) the user software will

act as though the connection to the server had been established, but no data was sent. If the list contains the exact server addresses, this behavior can be prevented, since the proxy will then only take requests addressed to the servers given in the list.

Server Port

Enter the number of the port for the SMTP protocol in this field. The default setting for the SMTP port is **25**.

Comment

An informational comment for this rule.

Scan

Scan

The virus filter is activated for the server specified in this rule.


No Scan

The virus filter is deactivated for the server specified in this rule.

6.7 Menu redundancy

6.7.1 Firewall Redundancy

It is possible to combine two mGuards to a single virtual router with the help of the redundancy ability.

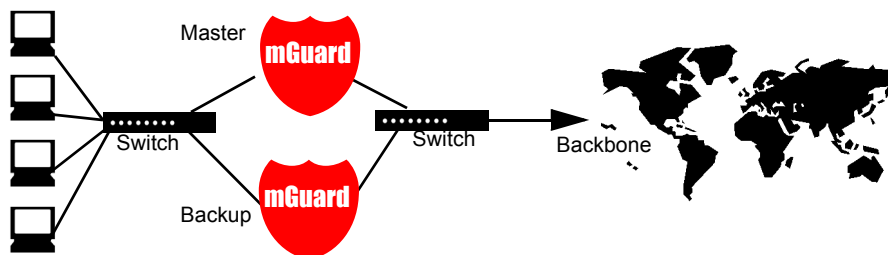

In so doing, the second mGuard (backup) takes over the function of the first mGuard (master) in the event of an error.

The redundancy feature allows two mGuards to be configured to operate as a virtual router. In case of an error, one mGuard (the *backup*) will take over the functionality of the other mGuard (previously working as the *master*).

Additionally, the state of the statefull firewall is synchronized between both mGuards so that, in case of a takeover, current connections will not be interrupted.


- ☒ Prerequisite: Both mGuards must be configured accordingly. The firewall configuration should be identical to avoid problems after a switch.
- ☒ Redundancy can only be used in router mode, static Transparent mode with management IP or multi Transparent mode.
- ☒ The mGuards operating as virtual router must not be used as a VPN gateway.
- ☒ Devices connected to the internal network of the virtual router configuration must be configured to use the internal virtual IP as the default gateway.

The following features are supported by the virtual router configuration:

- Incoming/Outgoing firewall rules
- NAT (IP-Masquerading, i.e. traffic is NATed to the external virtual IP)
- 1to1 NAT
- Port forwarding (use the external virtual IP as *Incoming on IP*)
- MAC-Filter

Redundancy

Logged in as 'admin' from 10.0.1.159 on 'LocalFW' .

 **HIRSCHMANN**

Firewall Redundancy

Redundancy | ICMP Checks

General

Redundancy State: Disabled

Enable Redundancy: No

Redundancy Start State: Master

Priority: 100

Authentication passphrase: passwd

Transparent Mode: Virtual Router ID: 51

Router Mode: External Virtual Router ID: 10.0.0.1

Transparent Mode: Management IP of the 2nd device: 10.0.0.1

Router Mode: External IP of the 2nd device: 10.0.0.1

Router Mode

Internal Virtual Router ID: 52

Internal IP of the 2nd device: 192.168.1.1

External virtual IP: 10.0.0.100

Internal virtual IP: 192.168.1.100

Apply

General

Redundancy State

Shows the current redundancy state of this mGuard.

Enable Redundancy

Enable/Disable the redundancy feature.

Redundancy Start State

The state of this mGuard during activation of redundancy (master or backup).

Priority

Defines which mGuard will operate as the master.

In case the priorities are different, the mGuard with the higher priority will operate as the master as long as it does not fail.

If both mGuards have the same priority and the backup becomes the master in case of a failure, it will continue to work as the master even when the other mGuard becomes available again.

Values between 1 and 254 are possible.

Authentication passphrase

This password is to protect against misconfiguration among different virtual routers.

The password must be the same on both mGuards. It will be transmitted in clear text and should not be identical with other security relevant passwords.

Transparent Mode: Virtual Router ID

Routermode: External Virtual Router ID

An ID between 1 and 255 which must be the same on both mGuards and identifies the virtual router.

Transparent Mode: Management IP of the 2nd device

Routermode: External IP of the 2nd device

In Transparent mode the management IP of the other mGuard, in router mode the external IP of the other mGuard.

Router Mode

The following values need to be set if the mGuards are operated in router mode.

Internal Virtual Router ID

An ID between 1 and 255 which must be the same on both mGuards and identifies the virtual router on the internal interface.

Internal IP of the 2nd device

The internal IP of the other mGuard.

External virtual IP

IP of the virtual router on the external interface (WAN).

Internal virtual IP

IP of the virtual router on the internal interface (LAN). Clients inside the internal network should use this IP as their default gateway.

ICMP Checks

The screenshot shows the Hirschmann Firewall Redundancy configuration interface. At the top, it says 'Logged in as 'admin' from 10.0.1.159 on 'LocalFW'.' and the Hirschmann logo. Below the logo, there are two tabs: 'Redundancy' and 'ICMP Checks'. The 'ICMP Checks' tab is selected. Inside this tab, there is a section titled 'ICMP Checks' with a sub-section 'Enable ICMP checks' which has a dropdown menu set to 'No'. Below this, there are two sections: 'Hosts to check via ICMP in the untrusted network' and 'Hosts to check via ICMP in the trusted network'. Each section has a small icon of two people and a text input field labeled 'IP'. At the bottom right of the configuration area, there is an 'Apply' button.

ICMP checks provide an additional way to monitor the network connections between mGuards working as a virtual router.

If one of the two direct Ethernet connections that exist between the LAN ports of the two mGuards (to the left of the two mGuards in the illustration on page 139) and between their WAN ports (to the right of the two mGuards in the illustration) fails, the backup becomes the master. The Virtual Router Redundancy Protocol (VRRP) utilised by the Guard can't, however, inform master of this while it is still operating.

With ICMP checks (ICMP ping), the master can check its connections to the backup and deactivate itself in case its internal (trusted) or external (untrusted) connections to the backup failed.

Enable ICMP Checks

The master mGuard will check the connection to the backup mGuard using the ICMP ping protocol.

In case the backup mGuard can not be reached, the *Hosts to check via ICMP in the external/internal network* will be tried. If these checks fail as well, the master mGuard will deactivate itself.

Hosts to check via ICMP in the external (untrusted) network

Hosts in the external network to be checked. The hosts have to be able to answer to the ICMP echo requests.

Hosts to check via ICMP in the internal (trusted) network

Hosts in the internal network to be checked. The hosts have to be able to answer to the ICMP echo requests.

6.7.2 Layer 2 Redundancy

Ring / Network Coupling

Logged in as 'admin' from 10.0.1.159 on 'LocalFW' .

HIRSCHMANN

Layer 2 Redundancy

Ring/Network Coupling

Settings

Enable Ring/Network Coupling/Dual Homing

Redundancy Port

Settings

Enable Ring/Network Coupling/Dual Homing: Yes / No

When activated, the link status of one ethernet port will be transferred to the other ethernet port whereby interruptions in the network can be traced more easily.

Redundancy Port: Internal (trusted) / External (untrusted)

Internal: In case the connection on the LAN port goes down/up, the WAN port will be set down/up also.

External: In case the connection on the WAN port goes down/up, the LAN port will be set down/up also.

6.8 Menü Diagnosis

The term ‘logging’ is understood to mean the recording of event messages, e.g., about settings that have been set, about firewall rules taking effect, about errors, etc.

Log entries are recorded in different categories and can also be displayed according to categories – see “Diagnosis → Event logs” on page 127

6.8.1 Log → Settings

Remote Logging

Logged in as 'admin' from 10.0.1.159 on 'LocalFW' .

HIRSCHMANN

Log Settings

Remote Logging

Settings

Activate remote UDP logging: No

Log Server IP address: 192.168.1.254

Log Server port (normally 514): 514

Apply

All log entries are recorded in the mGuard's temporary memory (RAM). Once the space for log entries has been filled, the oldest log entries will be overwritten. Furthermore, if the mGuard is switched off, all log entries are deleted.

If you wish to keep a copy of the log, the log entries can be sent to an external system. This is particularly useful if you wish to have centralized administration of the logs.

Settings

Activate remote UDP logging Yes / No

If all log entries should be sent to an external (specified below) log server, set this option to **Yes**.

Log Server IP address

Enter the IP address of the log server to which the log entries should be sent via UDP.




This entry must be an IP address - not a hostname! This function does not support hostnames, since, if it did, it would not be possible to log the loss of a DNS server.

Log Server port

Enter the port of the log server to which the log entries should be sent via UDP. Standard: 514

6.8.2 Diagnosis → Event logs

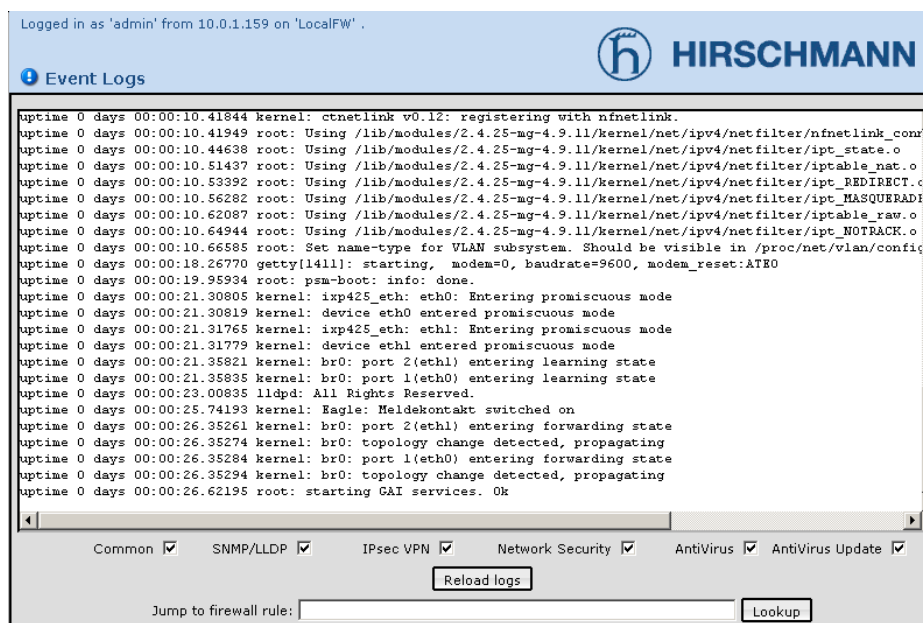

Depending on which mGuard functions were active, the corresponding checkboxes for filtering entries according to category are displayed below the log entries. Enable the checkbox(es) for the desired category(ies) and click the **Reload logs** button to display one or more categories

Common

All log entries which are not related to the other categories appear here.

Network Security

When logging of firewall events was chosen during the definition of firewall rules (Log = yes), then these logged events are shown here.

Log ID and number for tracing errors

Log entries that refer to the firewall rules listed below have a log ID and a number. Using the log ID and number, it is possible to trace the firewall rule that the corresponding log entry refers to and that led to the event in question.

Firewall rules and their log ID

- Packet filters:
Network security → Packet filters → Incoming rules / Outgoing rules menu **Log ID: fw-incoming** or **fw-outgoing**, respectively
- Firewall rules for VPN connections:
IPsec VPN → Connections → Firewall incoming / outgoing menu
Log ID: vpn-fw-in or **vpn-fw-out**, respectively
- Firewall rules for web access through mGuard via HTTPS: Administration Security Web → Access → Access → menu
Log ID: fw-https-access
- Firewall rules for web access through mGuard via SNMP: Security → SNMP → Query menu
Log ID: fw-snmp-access
- Firewall rules for SSH remote access to the mGuard:
Basic Settings → System → Shell access menu
Log ID: fw-ssh-access
- Firewall rules for the user firewall:

Network security → User firewall → Firewall rules menu

Log ID: **ufw-**

- Rules for NAT, port forwarding

Network security → NAT → Port forwarding menu


Log ID: **fw-portforwarding**

Searching for firewall rules on the basis of a network security log

If the **Network security** checkbox is enabled, the **Jump to firewall rule** search field is displayed below the Get the logs button so that the relevant log entries can be displayed.

Proceed as follows if you want to trace the firewall rule that a log entry in the *network security* category references and that resulted in the relevant event:

1. Mark the section that contains the log ID and number in the relevant log entry, for example: fw-https-access-1-2e49ed19-e930-161b-922-00cbe010f52

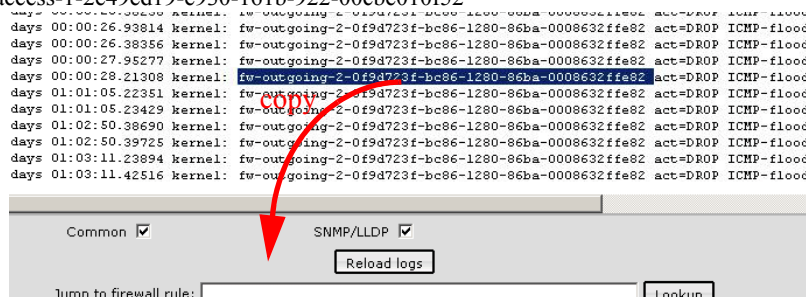

2. Copy this section into the **Jump to firewall rule** field via the clipboard.

3. Click the Search button.

Result:

The configuration page containing the firewall rule that the log entry refers to is displayed.

Blade

In addition to the error messages, the following messages are output on the blade controller:

(The areas enclosed by < and > are replaced by the respective data in the log entries.)

General messages:

```
blade daemon "<version>" starting ...
Blade[<bladenr>] online
Blade[<bladenr>] is mute
Blade[<bladenr>] not running
Reading timestamp from blade[<bladenr>]
```

When activating a configuration profile on a blade:

```
Push configuration to blade[<bladenr>]
reconfiguration of blade[<bladenr>] returned <returncode>
blade[<bladenr>] # <text>
```

When retrieving a configuration profile from blade:

```
Pull configuration from blade[<bladenr>]
Pull configuration from blade[<bladenr>] returned <returncode>
```

AntiVirus

The Anti-Virus Log contains the following messages from the virus filter:

- The names of any viruses found together with the following information:
name of the file and (in the case of an e-mail) the sender, date and subject.

-
- Warnings sent whenever the system has passed a file through unscanned because it was larger than the maximum file size.
 - Startup and shutdown of the virus filter programs.
 - Error messages from the scan-Engine and the virus filter.

Error Messages

Virus Detection

A virus has been detected. The error message includes the name of the virus, the sender of the e-mail, the date sent and the name of the infected file or the name of the compressed archive file and the infected portion of this archive.

An example of a virus message:

```
mGuard detected a virus. The mail could not be delivered.
found Virus Email-Worm.Win32.NetSky.q /[From
sick@example.com][Date Fri, 13 Aug 2004 11:33:53++0200]/
about_you.zip/document.txt.exe
[000012a7.000000077.000000000]
Message Details:
From: sick@example.com
Subject: Private document
Date: Fri, 13 Aug 2004 11:33:53 +0200
```

Exceeded maximum filesize

The maximum filesize set for this protocol was exceeded.

To transfer the file anyway, you can deactivate the virus filter either for the corresponding server for the course of the download or globally. Alternatively, you can set the “Action for ...exceeding the maximum message size” parameter to “Let the message/data pass unscanned” for the respective protocol.

☒ In either case, the transferred file will not be scanned for viruses.

Temporary Virus Scanner Failure

A temporary error occurred while trying to scan a file. It is possible that the problem will be cleared if you repeat the transfer again at a later time or if you update the virus signature file.

Possible causes:

- The scan-engine cannot process the file.
- The Innominate mGuard does not have enough memory available to decompress the file.
- Internal error in the scan-engine.

Exceptional Virus Scanner Failure

A problem has occurred in the communication with the scan-engine. For more details, please see the anti-virus log.

Possible causes:

- The information entered for the update server is faulty and the signature update has failed (see the “Basic Settings >Update” menu).
- Invalid virus filter license.
- Damaged or faulty update of the virus signature file.

Update running

There is currently no anti-virus database installed, and the download of the current database has been started. You can follow the progress of the download in the Diagnosis->Event Logs->AntiVirus Update menu.

DHCP Server/Relay

Messages from services defined under “Network > DHCP”.

Anti-Virus Update

The update log contains notifications regarding the start and progress of the update process for the virus signature files.

SNMP/LLDP

Messages from services defined under “Management > SNMP”.

IPsec VPN


Lists all VPN events.

The format corresponds to the standard Linux format.

It offers special evaluation programs that present information from the logged data in a more readable format.


6.8.3 *Diagnosis → Support Info*

Hardware

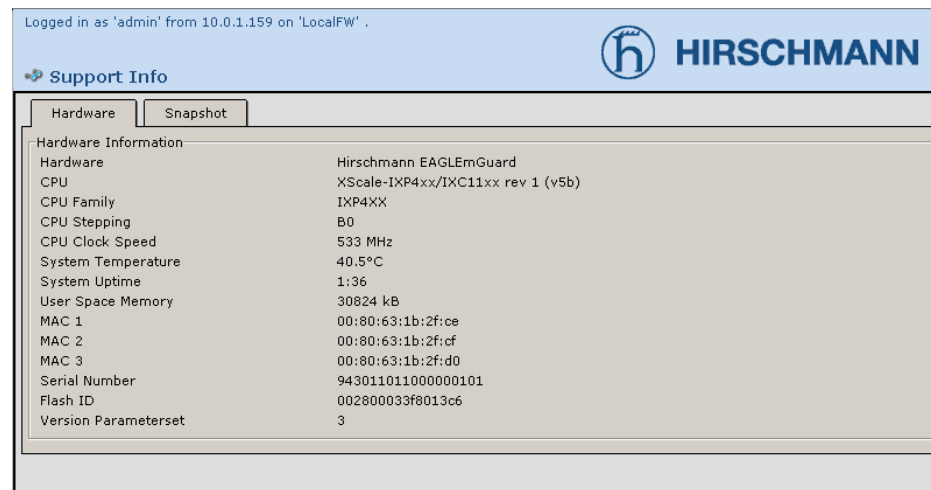

This page lists the hardware properties of the mGuard.

Snapshot

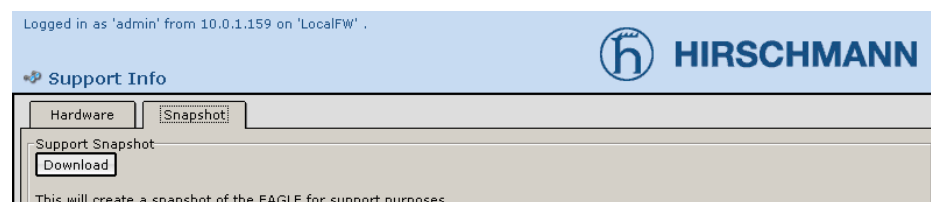

This function is intended to provide the support with the necessary diagnostic information.

This function prepares a compressed file (in tar format) containing all of the current configuration settings and log entries, which could be relevant to the diagnosis of errors. (This file does not contain any private information such as the private machine certificate or the passwords.)

To take a snapshot, proceed as follows:

1. Click on **Download**.
2. Save the file under the name *snapshot.tar.gz*

Please make the file available to the support, if requested.

6.9 Extended

6.9.1 Extended → DNS

DNS Server

Logged in as 'admin' from 10.0.1.159 on 'LocalFW' .

HIRSCHMANN

DNS

DNS Server | DynDNS

DNS

Servers to query: DNS Root Servers

User defined name servers:

User defined name servers	IP
	198.41.0.4

In Transparent Mode, only "User defined" and "DNS Root Servers" are supported. Other settings will be ignored.

Apply

When the mGuard has to initiate a connection on its own to a remote system (e.g. a VPN gateway or a NTP server) and it is defined in form of a host name (i.e. in the form of `www.example.com`) then the mGuard has to query a domain name server (DNS) for the IP address belonging to the host name.

If the mGuard is not in stealth mode locally connected clients can be configured to use the mGuard itself as a DNS server. See “IP configuration on Windows clients” on page 133.

DNS

Servers to query

Possible settings:

- DNS Root Servers
- Provider defined (i.e. via PPPoE or DHCP)
- User defined (servers listed below)

DNS Root Servers:

Queries will be sent to the DNS Root server in Internet found at the IP address which is stored in the mGuard. These addresses rarely change.

Provider defined (e.g. via PPPoE or DHCP)

With this setting, the device will use the Domain Name Server of the Internet Service Provider, which is used to access the Internet. Only select this setting if the mGuard is operated in *PPPoE* or *PPTP* mode or in *Router* mode with DHCP.

User defined (servers listed below)


If this setting is selected, the mGuard will connect to the Domain Name Servers shown in the list of *User defined name servers*.

User defined name servers

You can record the IP addresses of domain name servers in this list. If one of these should be used by the mGuard, select the option **User defined (servers listed below)** under *Servers to query*.

DynDNS

Logged in as 'admin' from 10.0.1.159 on 'LocalFW' .



DNS

DNS Server | **DynDNS**

DynDNS

Register this EAGLE at a DynDNS Service?

Status (none)

Refresh Interval (sec)

DynDNS Provider

DynDNS Server

DynDNS Login

DynDNS Password

DynDNS Hostname

DynDNS

If a VPN connection is to be setup, at least the IP address of one of the partners must be known so that the other can setup a connection to it. This condition is not satisfied, if both sites/stations are assigned their IP addresses dynamically by their respective Internet Service Providers. In this case, a DynDNS-Service such as DynDNS.org or DNS4BIZ.com can be of assistance. The currently valid IP address of a site/station is registered under a fixed name at a DynDNS service. If you have registered with one of the DynDNS services supported by mGuard, you can enter the corresponding information in this screen.

Register this mGuard at a DynDNS Service? Yes / No

Select **Yes**, if you have registered with a DynDNS provider and the mGuard should utilize this service. In this case, the mGuard will report its current IP address – the one assigned for its own Internet access by its Internet Service Provider – to the DynDNS Service.

Refresh Interval (sec)

Standard: 420 (seconds)

Whenever the IP address of its own Internet access is changed, the mGuard will inform the DynDNS Service of its new IP address. For additional reliability, the device will also report its IP address at the interval set here.

This setting is ignored for some DynDNS providers like DynDNS.org where too many updates will cause the account to be closed.

DynDNS Provider

The providers in the list support the same protocol as the mGuard.

Select the name of the provider with which you are registered, e.g. DynDNS.org.

DynDNS Server

The name of the server of the DynDNS provider selected above, e.g.: dyndns.org.

DynDNS Login, DynDNS Password

Enter the user name and password that you have been assigned by the DynDNS provider here.

DynDNS Hostname

The name selected at the DynDNS Service for this mGuard - if you use a DynDNS Service and have entered the corresponding data above.

6.9.2 Extended → DHCP


The Dynamic Host Configuration Protocol (DHCP) automatically assigns appropriate network parameters (like IP address or subnet mask) to the clients connected to the mGuard. Under DHCP Intern you can configure the settings for the internal interface (trusted port) and under DHCP Extern the settings for the external interface (untrusted port).

☒ The DHCP server/relay is also operational in Transparent mode.

☒ IP configuration on Windows clients

To do so, if you are using Windows XP, click on **Start, Control Panel, Network Connections**: Right click on the icon of the LAN adapter and then click on **Properties** in the pop-up menu. In the Internet Protocol Properties dialog on the General tab, select **Internet Protocol (TCP/IP)** under “This connection uses the following items” and then click on the **Properties** button. In the *Internet Protocol Properties (TCP/IP)* dialog, make the appropriate entries or settings.

Trusted/Untrusted DHCP

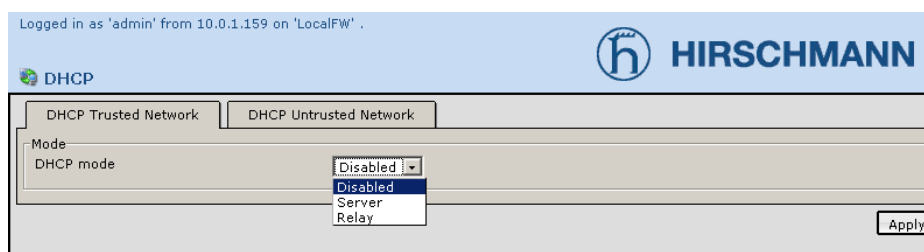

Mode

DHCP mode

Server

The mGuard will work as an independent DHCP server.

Relay

The mGuard will forward DHCP requests to other DHCP servers on its external interface (WAN).

Disabled

The mGuard will not answer DHCP requests.

☒ The DHCP server/relay is also operational in Transparent mode.

DHCP mode Server

Logged in as 'admin' from 10.0.1.159 on 'LocalFW' .

h HIRSCHMANN

DHCP

DHCP Trusted Network | DHCP Untrusted Network

Mode
DHCP mode: **Server**

DHCP Server Options

Enable dynamic IP address pool: **No**

DHCP lease time: 3600

DHCP range start: 192.168.1.100

DHCP range end: 192.168.1.199

Local netmask: 255.255.255.0

Broadcast address: 192.168.1.255

Default gateway: 192.168.1.1

DNS server: 10.0.0.254

WINS server: 192.168.1.2

Static Mapping

Client MAC Address	Client IP Address
00:00:00:00:00:00	0.0.0.0

Apply

When the DHCP mode is set to Server the following options are available:

DHCP Server Options (Mode = Server)

Enable dynamic IP address pool

Select **Yes**, if you wish to use the dynamic IP address pool defined by **DHCP range start** and **DHCP range end**.

Select **No**, if you wish to use IP addresses statically assigned by the means of the MAC address (see below).

DHCP lease time

Time in seconds, for which the network configuration assigned to the client is valid. Briefly before expiration of this time the client should renew its configuration. Otherwise it may be assigned to another computer.

With enabled dynamic IP address pool:

When the DHCP server and the dynamic IP address pool has been activated, you can enter the network parameters that should be used by the client(s):

- | | |
|--------------------------|---|
| DHCP range start: | The start and end of the address range from which the mGuard's DHCP server should assign IP addresses to its locally connected clients. |
| DHCP range end: | |
| Local Netmask: | The factory setting is: 255.255.255.0 |
| Broadcast IP: | The clients broadcast IP. |
| Default gateway: | This field is used to define which IP address should be used by the client(s) as the standard gateway. Usually this is the internal IP address of the mGuard. |

DNS server:	This field is used to define the Domain Name Service (DNS) server which the clients can access to find out the IP address that is associated with a specific domain name. If you would like to use the DNS service of the mGuard, use the internal address of the mGuard for this field
WINS-server:	This field is used to define the Windows Internet Naming Service (WINS) server.

Static mapping

You can find out the MAC address of your client by using the following commands:

Windows 95/98/ME: Click on the **Start** button, and then click on **Run**. Type **winipcfg** in the Open box, and then click on **OK**. The MAC address will be shown as “Adapter Address”

NT/2000/XP: Select the **Start** button on the Task Bar. Select **Run**. Type **cmd.exe**. When the DOS command prompt window opens, type **ipconfig /all**. The MAC address will be shown as “Physical Address”.

Linux: Start **/sbin/ifconfig** or **ip link show** in a shell.

✎ Inserting, moving and deleting rows is explained under “Working with tables” on page 44.

You must enter the following data when assigning IP and MAC addresses:

Client MAC address

The MAC address of the client. Please enter without spaces or hyphens.

Client IP address

The IP address you wish to assign to the MAC address.

- ✎ The statically assigned IP addresses take priority over the dynamic IP address pool
- ✎ Static IP addresses and pool addresses must not overlap
- ✎ Do not assign one IP address to several MAC addresses, otherwise several clients will be assigned the same IP address
- ✎ You should only use one DHCP server per subnetwork.

DHCP mode Relay

The screenshot shows the Hirschmann DHCP configuration web interface. At the top, it says "Logged in as 'admin' from 10.0.1.159 on 'LocalFW'". The Hirschmann logo is in the top right. Below the logo, there are two tabs: "DHCP Trusted Network" and "DHCP Untrusted Network". The "DHCP Trusted Network" tab is selected. Under this tab, the "Mode" is set to "Relay" in a dropdown menu. Below that, there is a section for "DHCP Relay Options". It includes a table for "DHCP Servers to relay to" with columns for "IP" and "Relay". The first row has "0.0.0.0" in the IP column. There is also a checkbox for "Append Relay Agent Information (Option 82)" which is currently set to "No". An "Apply" button is at the bottom right.

When the DHCP mode is set to Relay the following options are available:

DHCP Relay Options (Mode = Relay)

DHCP servers to relay to

A list of DHCP servers, to which DHCP requests are to be passed on.

Append Relay Agent Information

When this option is set to **Yes**, additional information according to RFC 3046 will be added.

☒ IP configuration on Windows clients

To do so, if you are using Windows XP, click on **Start, Control Panel, Network Connections**: Right click on the icon of the LAN adapter and then click on **Properties** in the pop-up menu. In the *Internet Protocol Properties* dialog on the *General* tab, select **Internet Protocol (TCP/IP)** under "This connection uses the following items" and then click on the **Properties** button. In the *Internet Protocol Properties (TCP/IP)* dialog, make the appropriate entries or settings.

6.10 Menu Entry Blade Control (control unit only)

This menu is only available on the control unit.

6.10.1 Blade control → Overview

Bladekontrolle » Übersicht									
Übersicht									
Rack ID		124							
Stromversorgung P1		OK							
Stromversorgung P2		Defekt							
Blade	Gerät	Status	WAN	LAN	Seriennummer	Version	B	R	
01	blade XL	Funktioniert	Getrennt	Verbunden	2TS00134	4.0.0-pre18.defa			
02	blade	Funktioniert	Getrennt	Getrennt	2TS00040	4.0.0-pre16-beta			
03	blade XL	Funktioniert	Verbunden	Verbunden	2TS00140	4.0.0-pre18.defa			
04	blade	Funktioniert	Getrennt	Getrennt	2TS00038	3.1.0.sophia			
05	blade	Funktioniert	Getrennt	Getrennt	2TS00085	3.1.0.sophia			
06	blade	Funktioniert	Getrennt	Getrennt	2TS00077	3.1.0-pre05			
07	blade	Funktioniert	Getrennt	Getrennt	2TS00072	4.0.0-pre13.defa			
08	blade XL	Funktioniert	Getrennt	Getrennt	2TS00139	4.0.0-pre15-beta			
09	Unknown	Gezogen							
10	blade	Funktioniert	Getrennt	Getrennt	2TS00054	4.0.0-pre07.defa			
11	blade	Funktioniert	Getrennt	Getrennt	2TS00003	3.1.1-pre05.defa			
12	Unknown	Gezogen							

[B] Automatische Konfigurationssicherung ist aktiviert/deaktiviert
[R] Automatische Neukonfigurierung nach Bladeaustausch ist aktiviert/deaktiviert

Rack ID

The ID of the rack into which the mGuard is mounted. This values can be set on the control unit for all blades inside the rack.

Power Supply P1/P2

State of the power supplies P1 and P2.

- OK
- Absent
- Defect
- Fatal Error

Blade

Number of the slot in which the mGuard is installed.

Device

Device type, e.g. “blade2 or “blade XL”.

State

Online The device in the slot is ready.

Present The device is present but not ready yet, e.g. it is still booting.

Absent No device was found in the slot.

WAN

Status of the Ethernet WAN port.

LAN

Status of the Ethernet LAN port.

Serial

The mGuard’s serial number.

Version

Software version of the mGuard.

B

Automatic configuration **backup** on the controller is activated/deactivated for this slot.

R

Automatic configuration **restore** from the controller is activated/deactivated for this slot.

6.10.2 Blade control → Blade 01 to 12

Blade in slot #__

Bladekontrolle » Blade 01	
Blade in Slot #01	Konfiguration
Übersicht	
Gerätetyp	blade XL
ID Bus Controller ID	[0x20] [0x1] [0x1] [0x1]
Seriennummer	27500134
Flash ID	00240005411bc899
Softwareversion	4.0.0-pre18.defa
MAC Adressen	[00:0c:be:02:0f:ac] [00:0c:be:02:0f:ad] [00:0c:be:02:0f:ae] [00:0c:be:02:0f:af]
Status	Funktioniert
LAN Link Status	Verbunden
WAN Link Status	Getrennt
Temperatur	N/A

Overview

Device type

Device type, e.g. “blade” or “blade XL”.

ID bus Controller ID

ID of this slot on the bladeBases control bus.

Serial

The mGuard’s serial number.

Flash ID

Serial number of the mGuard’s flash chip.

Software version

Software version of the mGuard.

MAC addresses

All MAC addresses used by the mGuard.

Status

Status of the mGuard

WAN link status

Status of the Ethernet WAN port.

LAN link status

Status of the Ethernet LAN port.

Configuration

Bladekontrolle » Blade 01	
Blade in Slot #01	Konfiguration
Konfiguration [Veraltet]	
Konfigurationssicherung [Blade #01 -> Controller]	<div>Manuell</div> <div>Sichern</div> <div>Zurückspielen</div>
Neukonfigurierung bei Austausch von Blade #01	<div>Manuell</div>
Konfigurationssicherung des Blade #01 löschen	<div>Löschen</div>
Hochladen der Konfiguration vom Client	<div>Browse...</div> <div>Hochladen vom Client</div>

Configuration

Configuration backup [Blade #__ -> Controller]

Automatic Shortly after a configuration change on the mGuard, the new configuration will be stored automatically on the controller.

Manual With the **Backup** button the configuration can be stored on the controller and with the **Restore** button it can be restored from the controller onto the mGuard.

Reconfiguration, if Blade #__ is replaced

After replacing a mGuard in this slot, the configuration stored on the controller will be automatically applied to the new mGuard.

Delete configuration backup of Blade #__

Deletes the configuration stored on the controller for this slot.

Upload configuration from client

Upload a configuration profile for this slot to the controller.

Download configuration to client

Download the configuration profile stored on the controller for this slot.

6.11 CIDR (Classless InterDomain Routing)

IP netmasks and CIDR are notations, which define an address space containing multiple IP addresses. In this case, an address space in which the addresses follow one another sequentially is treated as a network.


To define a range of IP addresses for the mGuard e.g. when configuring the firewall, it may be necessary to use the CIDR notation to specify the address space. The following table presents the IP netmask on the left and the corresponding CIDR notation on the right.

IP-Netmask	binary				CIDR
255.255.255.255	11111111	11111111	11111111	11111111	32
255.255.255.254	11111111	11111111	11111111	11111110	31
255.255.255.252	11111111	11111111	11111111	11111100	30
255.255.255.248	11111111	11111111	11111111	11111000	29
255.255.255.240	11111111	11111111	11111111	11110000	28
255.255.255.224	11111111	11111111	11111111	11100000	27
255.255.255.192	11111111	11111111	11111111	11000000	26
255.255.255.128	11111111	11111111	11111111	10000000	25
255.255.255.0	11111111	11111111	11111111	00000000	24
255.255.254.0	11111111	11111111	11111110	00000000	23
255.255.252.0	11111111	11111111	11111100	00000000	22
255.255.248.0	11111111	11111111	11111000	00000000	21
255.255.240.0	11111111	11111111	11110000	00000000	20
255.255.224.0	11111111	11111111	11100000	00000000	19
255.255.192.0	11111111	11111111	11000000	00000000	18
255.255.128.0	11111111	11111111	10000000	00000000	17
255.255.0.0	11111111	11111111	00000000	00000000	16
255.254.0.0	11111111	11111110	00000000	00000000	15
255.252.0.0	11111111	11111100	00000000	00000000	14
255.248.0.0	11111111	11111000	00000000	00000000	13
255.240.0.0	11111111	11110000	00000000	00000000	12
255.224.0.0	11111111	11100000	00000000	00000000	11
255.192.0.0	11111111	11000000	00000000	00000000	10
255.128.0.0	11111111	10000000	00000000	00000000	9
255.0.0.0	11111111	00000000	00000000	00000000	8
254.0.0.0	11111110	00000000	00000000	00000000	7
252.0.0.0	11111100	00000000	00000000	00000000	6
248.0.0.0	11111000	00000000	00000000	00000000	5
240.0.0.0	11110000	00000000	00000000	00000000	4
224.0.0.0	11100000	00000000	00000000	00000000	3
192.0.0.0	11000000	00000000	00000000	00000000	2
128.0.0.0	10000000	00000000	00000000	00000000	1
0.0.0.0	00000000	00000000	00000000	00000000	0

Example: 192.168.1.0 / 255.255.255.0 corresponds to 192.168.1.0/24 in CIDR notation

6.12 Network Sketch

The following sketch illustrates, how the IP addresses can be distributed in a local network with subnets, which network addresses result and how the details regarding additional internal routes might look.

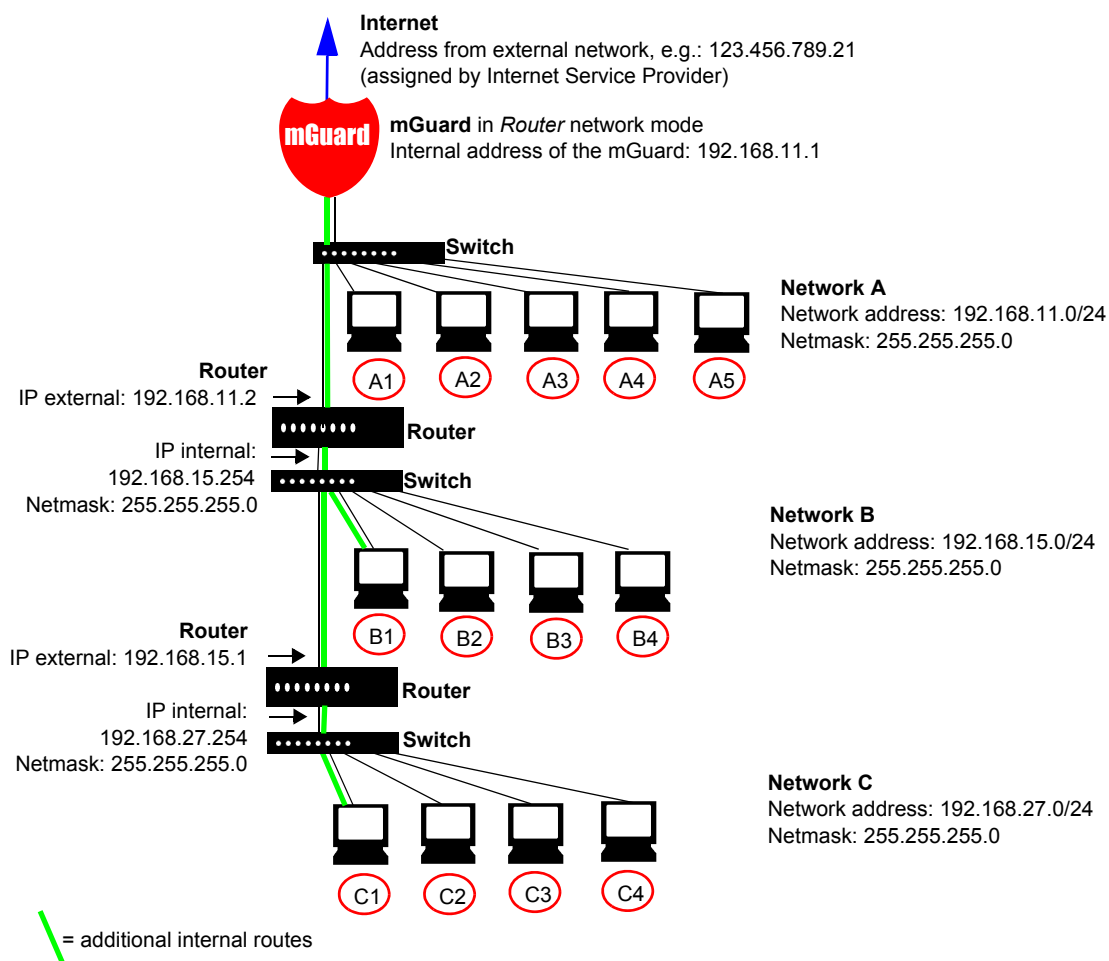

Network A

System	A1	A2	A3	A4	A5
IP address	192.168.11.3	192.168.11.4	192.168.11.5	192.168.11.6	192.168.11.7
Netmask	255.255.255.0	255.255.255.0	255.255.255.0	255.255.255.0	255.255.255.0

Network B

System	B1	B2	B3	B4
IP address	192.168.15.2	192.168.15.3	192.168.15.4	192.168.15.5
Netmask	255.255.255.0	255.255.255.0	255.255.255.0	255.255.255.0

Additional internal routes

Network:
192.168.15.0/24
Gateway
192.168.11.2

Network C

System	C1	C2	C3	C4
IP address	192.168.27.1	192.168.27.2	192.168.27.3	192.168.27.4
Netmask	255.255.255.0	255.255.255.0	255.255.255.0	255.255.255.0

Network:
192.168.27.0/24
Gateway
192.168.11.2

7 The Rescue Button – restart, recovery procedure and to flash the firmware

The Rescue Button is used to set the device in one of the following states:

7.1 Performing a Restart

Objectives To restart the device using the configured settings.

Action: Press the **Rescue Button** for ca. 1.5 seconds, e.g. with a straightened paperclip:

- blade, PCI: until both red LEDs light
- delta: until the *Status* LED stops blinking
- EAGLE: until the *Status* LED and the *Link*-LEDs go off
- smart: until the middle LED lights up in red.

OR

Disconnect the power briefly. Restart the computer containing the mGuard PCI card.



7.2 Performing a Recovery

Objectives This is used to reset the mGuard to the **Transparent** network mode (mode of operation) so that it can again be accessed (for the purpose of configuring it) at the following address: **https://1.1.1.1/**. The mGuard delta and the mGuard blade Control Unit will be reset to Router-Mode and will be accessible at the internal interface at 192.168.1.1

☒ The passwords and the settings configured for VPN connections and the firewall are retained.

Possible reasons for starting the Recovery procedure:

The mGuard is in Router or PPPoE mode and

- the mGuard's IP address has been changed from the default setting and
- you don't know the device's current IP address.



-
- Action:**
1. Press the **Rescue Button** slowly 6 times (once per second).
 2. After about two seconds, the mGuard will respond:
 - blade, PCI
 - On success the LAN LED lights green
 - On failure the WAN LED lights red
 - delta
 - On success the Status LED lights green
 - On failure the Status LED stays dark
 - EAGLE
 - On success the STATUS LED lights yellow
 - On failure the FAULT LED lights red
 - smart
 - On success the middle LED lights green
 - On failure the middle LED lights red
 3. Press the **Rescue Button** slowly 6 times again.
 4. On success the device will perform a restart and switch to *Transparent* mode. It can then once again be accessed at the following address: **https://1.1.1.1/**
The mGuard delta and the mGuard blade Control Unit will be switched to Router-Mode and will be accessible at 192.168.1.1 at the internal interface

7.3 Flashing the firmware



Objectives To reload the mGuard's complete firmware.

☒ **All of the configured settings will be deleted.** The mGuard will be restored to the factory (default) settings.

Possible reasons for flashing the firmware:

- The Administrator and Root password have been lost.

Action: Proceed as follows:

☒ **Do not interrupt the power supply during the flashing procedure.**

Otherwise the device could be damaged and may be left inoperable, and will require your device to be send to the manufacturer.

Prerequisites:

- First copy the mGuard software from the mGuard CD-ROM or retrieve it from Innominate Support and save it on the configuration system.
- A DHCP and a TFTP server, both installed on a single system, which provide the mGuard image files – see “Required before the firmware can be flashed: DHCP and TFTP servers” on page 145.
- mGuard PCI: When the mGuard is in Power-over-PCI mode the DHCP/TFTP server must be connected to the mGuards LAN jack. When the mGuard is in PCI mode the DHCP/TFTP server must listen on the mGuards network interface.

1. Hold the Rescue Button pressed until the recovery status is entered as follows:

The mGuard will be restarted (after approx. 1.5 seconds) and after another approx. 1.5 seconds the mGuard will enter the recovery mode:

- blade, PCI: the green and the red LAN will light
- delta: the Status LED will slowly fade darker
- EAGLE: the LEDs 1, 2 and V.24 will light
- smart: all LEDs will light green

2. No more than 1 second after the recovery mode was entered release the **Rescue Button**. (If you do not release the **Rescue Button** quickly enough, the mGuard will restart again.)

The mGuard will now start the recovery system: He tries to receive an IP address from an DHCP server over the LAN port.

- Status display:
 - blade, PCI: the red LAN LED flashes
 - delta: the Status LED flashes
 - EAGLE: the LEDs 1, 2 and V.24 light orange
 - smart: the middle LED (heartbeat) flashes.

The file install.p7s will be loaded from the TFTP server, which contains the installation procedure for the flashing. (Only files digitally signed by Innominate will be accepted.)

Afterwards the flash memory will be erased.

- Status display:
 - blade, PCI: the two green and the red LAN LED form a bouncing ball display in which the light shifts from one LED to the next.
 - delta: the Status LED will flash fast.
 - EAGLE: the LEDs 1, 2 and V.24 form a bouncing ball display in which the light shifts from one LED to the next.
 - smart: the 3 green LEDs form a bouncing ball display in which the light shifts from one LED to the next

The file jffs2.img.p7s which contains the mGuard software will be loaded from the TFTP server and written onto the flash. (Only files digitally signed by Innominate will be accepted.)

This process will take about 3 to 5 minutes.

- Status display:
 - blade, PCI: the green and the red LEDs will flash continuously
 - delta: the Status LED will light continuously
 - EAGLE: the LEDs 1, 2 and V.24 are off, the LEDs P1, P2 and Status will light continuously
 - smart: the middle LED (heartbeat) will light continuously

The new software will be unpacked and configured. This process will take about 5 minutes.

As soon as the procedure has been completed

- blade, PCI: the mGuard restarts itself
- delta: the Status LED will flash once per second continuously
- EAGLE: the LEDs 1, 2 and V.24 will flash green continuously
- smart: all 3 LEDs will flash green continuously

3. Restart the mGuard (not required on blade and PCI)

To do so, press the **Rescue Button** briefly.

OR

Disconnect the power supply (smart: by disconnecting the USB cable which is only used to supply power) or in case of the mGuard PCI: restart the computer.

The mGuard will be now restored to its factory settings. Configure it once again – see “Local Configuration: At startup” on page 34.

**Required before the
firmware can be
flashed: DHCP and
TFTP servers**

Before the firmware can be “flashed” DHCP and TFTP servers must be installed on the locally connected system or a network system.

(DHCP = **D**ynamic **H**ost Configuration **P**rotocol; TFTP = **T**rivial **F**ile **T**ransfer **P**rotocol)

Install the DHCP and TFTP server, if necessary (see below).

☒ If you install a second DHCP server in a network, this can affect the configuration of the entire network!

7.3.1 Installing DHCP and TFTP servers under Windows or Linux


Under Windows:

Install the program found on the CD-ROM. To accomplish this, proceed as follows:



1. If the Windows system is connected to a network, disconnect it.
2. Copy the software into any empty folder on the Windows system. Start the program TFTP32.EXE
3. The system's IP must be set to: **192.168.10.1**. This must also be the address of the network adapter.

Click on the **Browse** button to switch to the folder in which the mGuard image files have been saved: *install.p7s*, *jffs2.img.p7s*

The image files are also found on the CD-ROM, which was included in the package.

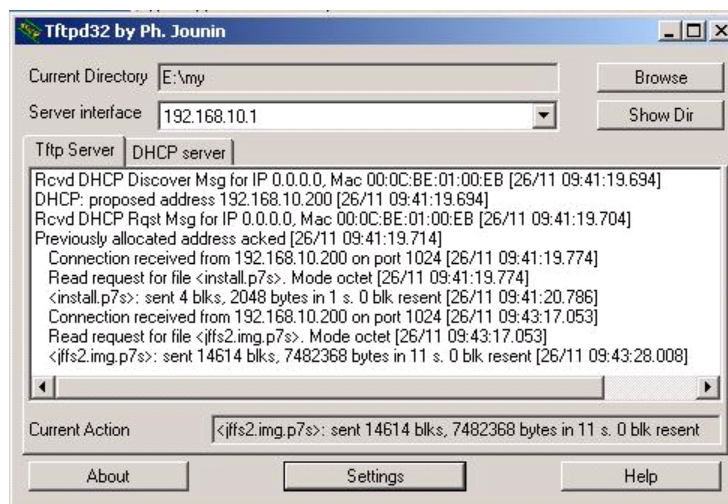

4. Click on the TFTP Server or DHCP Server tab and then click on the Settings button to open the dialog shown below. Then set the parameters as shown:

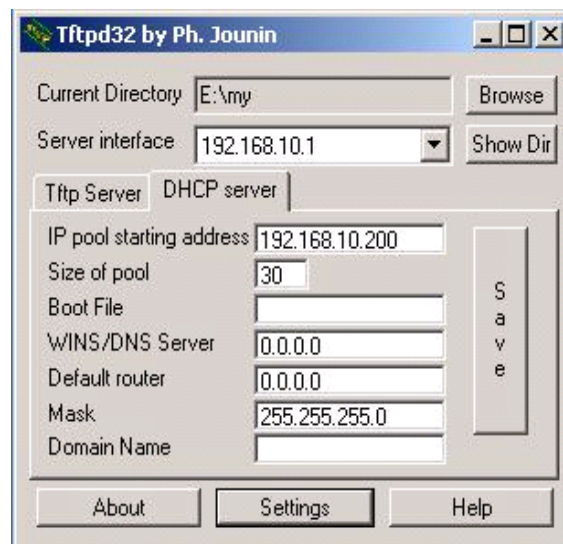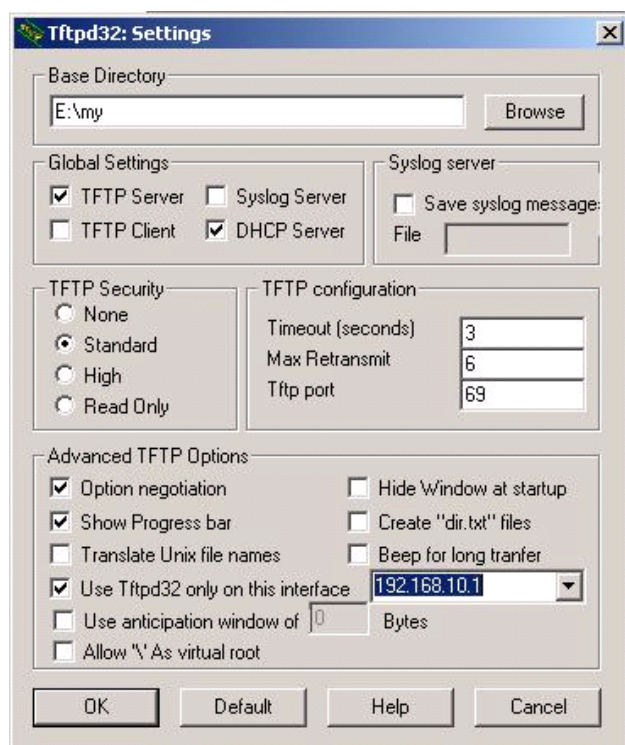

Under Linux

All current Linux distributions include DHCP and TFTP servers. Install the corresponding packages as described in the instructions for the respective distribution.

Configure the DHCP server by making the following settings in the **/etc/dhcp file**:

```
subnet 192.168.134.0 netmask 255.255.255.0 {  
  range 192.168.134.100 192.168.134.119;  
  option routers 192.168.134.1;  
  option subnet-mask 255.255.255.0;  
  option broadcast-address 192.168.134.255;}
```

This sample configuration makes 20 IP addresses (.100 to .119) available. It is assumed that the DHCP server has the address 192.168.134.1 (settings for ISC DHCP 2.0).

The required TFTP server is configured in the following file:

/etc/inetd.conf

In this file, insert the appropriate lines or set the necessary parameter for the TFTP service. (The directory for the data is: **/tftpboot**)

```
tftp dgram udp wait root /usr/sbin/in.tftpd -s /tftpboot/
```

Then restart the inetd process to activate the modified configuration.

If you use a different mechanism, e.g. xinetd, please read the corresponding documentation.

8 Glossary

Asymmetrical encryption

In the case of asymmetrical encryption, data is encrypted with one key and decrypted with a second key. Either key may be used for encryption or decryption. One of the keys is kept secret by its owner (Private Key), the other is made available to the public (Public Key), i.e. possible communication partners. A message encrypted with the public key can only be decrypted and read by the owner of the associated private key. A message encrypted with the private key can only be decrypted and read by a receiver who has the associated public key. The fact that the message was encrypted with the private key proves that the owner of the associated public key actually sent the message. Therefore, the expression "digital signature" is also often used.

However, asymmetrical encryption techniques such as RSA are both slow and susceptible to certain types of attack and are therefore frequently combined with some form of symmetrical encryption (→ symmetrical encryption). On the other hand, there are concepts which avoid the additional work of administering symmetrical keys.

DES / 3DES

This symmetrical encryption algorithm was developed by IBM and checked by the NSA. DES (→ symmetrical encryption) was set in 1977 by the American National Bureau of Standards, which was the predecessor of the National Institute of Standards and Technology (NIST), as the standard for American governmental institutions. Since this was the very first standardized encryption algorithm, it quickly won acceptance by industry even outside of America. DES uses a 56 bit long key, which is no longer considered secure as the processing power available has greatly increased since 1977.

3DES is a variant of DES. It uses keys that are three times as long, i.e. 168 bits long. 3DES is still considered to be secure and is also included in the IPsec standard.

AES

Advanced Encryption Standard. This encryption standard was developed by NIST (National Institute of Standards and Technology) in cooperation with the industry. This → symmetrical encryption standard was developed to replace the earlier DES standard. AES specifies three different key sizes (128, 192 and 256 bits).

In 1997, NIST started the AES initiative and announced its conditions for the algorithm. From the many proposed encryption algorithms, NIST selected a total of five algorithms for closer examination – the MARS, RC6, Rijndael, Serpent and Twofish algorithms. In October 2000, the Rijndael algorithm was adopted as the standard's encryption algorithm.

Client / Server

In a client-server environment, a server is a program or computer, which accepts and answers queries from client programs or computers.

In data communication, a computer which establishes a connection to a server (or host) is also called a client. In other words, the client is the calling computer and the server (or host) is the computer called.

Datagram

In the IP protocol, data is sent in the form of data packets, which are known as IP datagrams. An IP datagram has the following structure:

IP Header	TCP, UDP, ESP etc. Header	Data (Payload)
-----------	---------------------------	----------------

The IP header contains:

-
- the IP address of the sender (source IP address)
 - the IP address of the receiver (destination IP address)
 - the protocol number of the protocol of the next higher protocol layer (in accord with OSI [seven layer] model)
 - the IP header checksum used to check the integrity of the received header.
- The TCP/UDP header contains the following information:
- the sender's port (source port)
 - the recipient's port (destination port)
 - a checksum covering the header and some information from the IP header (among others the source and destination IP addresses)

Default route

If a computer is connected to a network, the operating system creates a routing table internally. It lists the IP addresses that the operating system has identified based on the connected computers and the routes available at that moment. Thus the routing table contains the feasible routes (destinations) for sending IP packets. If IP packets are ready for sending, the computer's operating system compares the IP addresses stated in the IP packets with the entries in the routing table to determine the right route.

If a router is connected to the computer, and if its internal IP address (i.e., the IP address of the router's LAN port) has been relayed to the operating system as the standard gateway (in the network card's TCP/IP configuration), this IP address will be used as the destination if all other IP addresses in the routing table don't match. In this case the router's IP address specifies the default route, because all IP packets (by default = the standard) whose IP address have no counterpart in the routing table, i.e., can't find a route, are directed to this gateway.

DynDNS provider

Also *Dynamic DNS provider*. Every computer, which is connected to the Internet, has an IP address (IP = Internet Protocol). An IP address consists of a maximum of 4 three-digit numbers, which are each separated by a dot. If the computer accesses its Internet Service Provider (ISP) via a modem on a phoneline, ISDN or ADSL, its ISP will assign it a dynamic IP address. In other words, it will be assigned a different address for every online session. If the computer is online 24 hours a day without interruption (e.g. in the case of a flat rate access), the IP address will even change during the session.

If a local computer should be accessible via the Internet, it must have an address that is known to the remote system. Unless this is true no connection can be established between the remote system and the local computer. If the local computer's address is constantly changing, no connection can be setup. Unless, of course, the operator of the local computer has an account with a Dynamic DNS provider (DNS = Domain Name Server).

In this case, the operator can set a host name with this provider under which the system should be reachable, e.g.: `www.example.com`. The Dynamic DNS provider also supplies a small program, which must be installed and run on this local computer. At each new Internet session, this tool will inform the Dynamic DNS provider which IP address the local computer has currently been assigned. This Domain Name Server will register the current assignment of Domain Name - IP Address and will also inform the other Domain Name Servers in the Internet.

Now, if a remote system wishes to establish a connection to a local system, which is registered with the DynamicDNS provider, the remote system can use the host name of the local system as its address. This will setup a connection to the responsible DNS (Domain Name Server) to lookup the IP address that is currently registered for this hostname. The corresponding IP address will be

sent back from the DNS to the remote system, which can then use this as the destination address. The remote system can now directly address the desired local computer.

In principle, all Internet addresses are based on this procedure: First, a connection will be established to a DNS to lookup the IP address assigned for the domain name. Once that has been accomplished, this “looked up” IP address will be used to setup a connection to the desired remote site, which could be any site in the Internet.

IP address

Every host or router in the Internet or an Intranet has a unambiguous IP address (IP = Internet Protocol). The IP address is 32 bits (= 4 bytes) long and is written as 4 three-digit numbers (each in the range from 0 to 255), which are separated by a dot.

An IP address consists of 2 parts: the network address and the host address.

Network Address	Host Address
-----------------	--------------

Each host [or workstation] in a network has the same network address, but a different host address. Depending on the size of the respective network – networks are categorized as Class A, B or C networks, which are each different in size – the two parts of the address differ in length:

	1. Byte	2. Byte	3. Byte	4. Byte
Class A	Network Address	Host Address		
Class B	Network Address		Host Address	
Class C	Network Address			Host Address

Whether the IP address of device in a network is Class A, B or C can be seen in the first byte of the IP address. The following has been specified:

	Value of the 1st Byte	No. of bytes for the network address	No. of bytes for the host address
Class A	1 - 126	1	3
Class B	128 - 191	2	2
Class C	192 - 223	3	1

As you can see, there can be a worldwide total of 126 Class A networks and each of these networks can have a maximum of 256 x 256 x 256 hosts (3 bytes of address space). There can be 64 x 256 Class B networks and each of these networks can have up to 65,536 hosts (2 bytes address space: 256 x 256). There can be 32 x 256 x 256 Class C networks and each of these networks can have up to 256 hosts (1 bytes address space).

Subnet Mask

Normally, a company's network - with access to the Internet - is only officially assigned a single IP address, e.g. 123.456.789.21. Based on the first byte of this sample address, one can see that this company network is a Class B network and

therefore the last 2 bytes are free to be used for host addresses. With a Class B network, the company network has address space for up to 65,536 hosts (256 x 256).

Obviously, such huge network is not practical. At this point, one can see a need for subnetworks. The standard answers this need with the Subnet Mask. Like an IP address, this mask is 4 bytes long. The bytes, which represent the network address, are each assigned the value 255. The main purpose of the mask is to “borrow” a portion of the host address which can then be used to address the subnetworks. As an example, by using the subnet mask 255.255.255.0 in a Class B network (2 bytes for the network address, 2 bytes for the host address), the third byte, which was actually intended for host addressing, can now be used for subnet addressing. With this configuration, the company’s network could support 256 subnetworks that each have 256 hosts.

IPsec

IP Security (IPsec) is a standard, which uses encryption to verify the authenticity of the sender and to ensure the confidentiality and integrity of the data in IP datagrams (→ Datagram). The components of IPsec are the Authentication Header (AH), the Encapsulating Security Payload (ESP), the Security Association (SA) and the Internet Key Exchange (IKE).

At the start of the session, systems which wish to communicate must determine which technique shall be used and the implications of this choice for the session e.g. *Transport Mode* or *Tunnel Mode*

In *Transport Mode*, an IPsec header will be inserted between the IP header and the TCP or UDP header respectively in each IP datagram. Since the IP header remains unchanged, this mode is only suitable for a host- to-host connection.

In *Tunnel Mode*, an IPsec header and a new IP header will be added in front of the entire IP datagram. As a consequence, the original datagram will be encrypted in its entirety and sent as the payload of the new datagram.

The *Tunnel Mode* is used in VPN applications: The devices at the tunnel ends ensure that the datagrams are encrypted before they pass through the tunnel so the actual datagrams are completely protected while being transferred over the public network.

NAT (Network Address Translation)

Using Network Address Translation (NAT) – which is also often called *IP-Masquerading* – an entire network is “hidden” behind a single device, which is known as a NAT router. The internal computers in the local network with their IP addresses will remain hidden, if you communicate with the outside via a NAT router. The remote system will only see the NAT router with its own IP address. If the internal computers are to directly communicate with external systems (in the Internet), the NAT router must modify the IP datagrams that are passed back-and-forth between the internal computers and the remote sites.

If an IP datagram is sent from the internal network to a remote site, the NAT router will modify the UDP and TCP headers respectively of the outgoing datagrams. It replaces the source IP address and port with its own IP address and - thus far unused - port. It maintains a table in which the original values are listed together with the corresponding new ones.

When a reply datagram is received, the NAT router will recognize that it is actually for an internal computer from the datagram’s destination port. Using the table, the NAT router will replace the destination IP address and port and pass the datagram on via the internal network.

Port Number

The UDP and TCP protocols assign a port number to each peer participating in the connection. This way it becomes possible to handle more than one UDP or TCP connection between two peers at the same time.

Fixed port numbers are assigned for certain, frequently used application processes. These are called a “Assigned Numbers”. E.g. HTTP connections are usually established to TCP port 80 or POP3 connections to port 110.

PPPoE

The acronym for **P**oint-to-**P**oint **P**rotocol **o**ver **E**thernet. This protocol is based on the PPP and Ethernet standards. PPPoE defines how to connect users via Ethernet with the Internet via a jointly used broadband medium such as DSL, a Wireless LAN or a cable modem.

PPTP

The acronym for **P**oint-to-**P**oint **T**unneling **P**rotocol. This protocol was developed in a cooperation between Microsoft, U.S. Robotics and others to securely transfer data between VPN nodes (→ VPN) via a public network.

X.509 Certificate

A type of "Seal", which certifies the authenticity of a public key (→ asymmetrical encryption) and the associated data.

To enable the user of the public key, which will be used to encrypt the data, to be sure that the public key that he/she has received is really from its issuer and thus from the instance, which should later receive the data, it is possible to use certification. A *Certification Authority* – *CA* certifies the authenticity of the public key and the associated link between the identity of the issuer and his/her key. The certification authority will verify authenticity in accordance with its rules, which may, for example, require that the issuer of the public key appear before it in person. Once authenticity has been successfully certified, the certification authority will add its digital signature to the issuer's public key. The result is a Certificate.

An X.509(v3) Certificate thus includes a public key, information about the key owner (given as its Distinguished Name (DN)), the authorized usage etc. and the signature of the certification authority.

The signature is created as follows: The certification authority creates an individual bit sequence, which is known as the HASH value, from the bit sequence of the public key, the information about its owner and other data. This sequence may be up to 160 bits long. The certification authority encrypts this with its own private key and then adds it to the certificate. The encryption with the certification authority's private key proves the authenticity of the certificate, i.e. the encrypted HASH string is the certification authority's digital signature. If the certificate's data is altered, this HASH value will no longer be correct with the consequence that the certificate will be worthless.

The HASH value is also known as the fingerprint. Since it is encrypted with the certification authority's private key, anyone who has the public key can decrypt the bit sequence and thus verify the authenticity of this fingerprint or signature. The usage of a certification authority means it is not necessary for each owner of a key to know every other owner. It is enough for them to know the certification authority. The additional information about the key further simplifies the administration of the key.

X.509 certificates are used, e.g. for e-mail encryption, in S/MIME or IPsec.

Protocol, communication protocol

Devices, which communicate with each other, must follow the same rules. They must “speak the same language”. Such rules and standards are called protocols or communication protocols. Some of the more frequently used protocols include, for example, IP, TCP, PPP, HTTP and SMTP.

Proxy

A proxy (representative) is an intermediary service. A web proxy (e. g., Squid) is commonly placed upstream of a larger network. For example, if 100 employees accessed a certain website at the same time and did this via the web proxy, then the proxy would load the respective pages from the server only once

	and distribute them to the said employees. This reduces the outgoing traffic which, in turn, cuts down on costs.
Service Provider	Service providers are companies or institutions, which offer users access to the Internet or an online service.
Spoofing, Antispoofing	In Internet terminology, spoofing means supplying a false address. With the false Internet address, the user can create the illusion of being an authorized user. Anti-Spoofing is term for mechanisms, which detect or prevent spoofing.
Symmetrical encryption	In the case of symmetrical encryption, the same key is used to encrypt and decrypt the data. Two examples of symmetrical encryption algorithms are DES and AES. They are fast, but as the number of users increases the administration becomes rather involved.
TCP/IP (Transmission Control Protocol/Internet Protocol)	<p>This is a family of network protocols. It is used to connect two computers in the Internet.</p> <p>IP is the base protocol.</p> <p>UDP is based on IP and sends individual packets. The packets may arrive at the recipient in an order different from that in which they were sent or they may even be lost.</p> <p>TCP secures the connection and ensures, for example, that data packets are passed on the application in the right order.</p> <p>UDP and TCP add the Port Numbers 1 to 65535 to the IP Addresses. The various services offered by the protocols may be distinguished by these Port Numbers.</p> <p>A number of additional protocols are based on UDP and TCP, e.g. HTTP (HyperText Transfer Protocol), HTTPS (Secure HyperText Transfer Protocol), SMTP (Simple Mail Transfer Protocol), POP3 (Post Office Protocol, Version 3) and DNS (Domain Name Service).</p> <p>ICMP is based on IP and adds control messages.</p> <p>SMTP is an e-mail protocol that is based on TCP.</p> <p>IKE is an IPsec protocol that is based on UDP.</p> <p>ESP is an IPsec protocol that is based on IP.</p> <p>On a Windows PC, the WINSOCK.DLL (or WSOCK32.DLL) handles both protocols.</p> <p>(→ Datagram)</p>
Trap	The SNMP protocol (Simple Network Management Protocol) is used in addition to the other protocols, especially in large networks. This UDP-based protocol is used for the central administration of network devices. For example, you can use the GET command to request a configuration or employ the SET command to change the configuration of a device, provided that the addressed network device is SNMP compliant. An SNMP-compliant device can also send SNMP messages independently, in case, for example, an extraordinary event should occur. Messages like this are called SNMP traps.
VLAN	<p>A VLAN (Virtual Local Area Network) divides a physical network into several independent logical networks.</p> <p>Devices within a VLAN can only access devices within their own VLAN. The membership to a LAN is defined by the physical network topology and the VLAN ID (1-4094).</p>

All devices with the same VLAN ID belong to the same VLAN and can therefore communicate with each other.

For a VLAN (based on IEEE 802.1Q) the ethernet frame is extended by 4 bytes, with 12 bits containing the VLAN ID. The VLAN IDs “0” and “4095” are reserved and can’t be used for VLAN identification.

VPN (Virtual Private Network)

A Virtual Private Network (VPN) connects several separate private networks (subnets) together via a public network, e.g. the Internet, to form a single joint network. A cryptographic protocol is used to ensure confidentiality and authenticity. A VPN thus offers an economical alternative to using dedicated lines to build a nationwide corporate network.